




**BOSCH**

Installation and maintenance instructions for the contractor

## Gas-fired condensing boiler

### **Condens 7000 F**

GC7000F 75...300

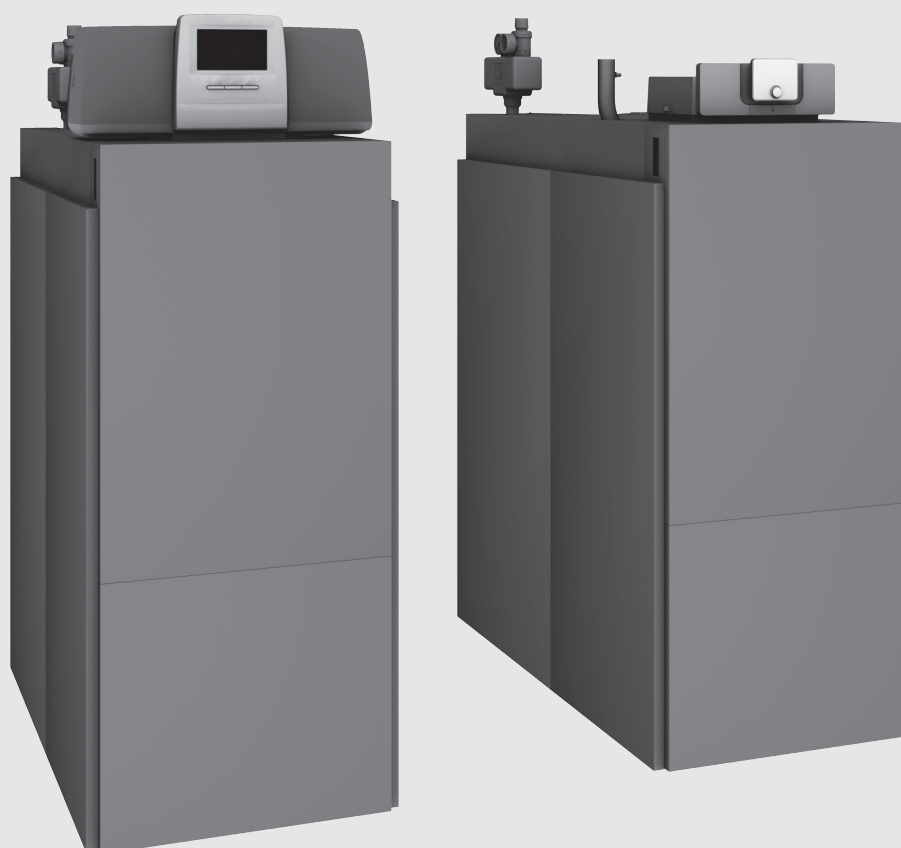

## Table of contents

<b>1</b>	<b>Explanation of symbols and safety instructions</b>	<b>3</b>
1.1	Explanation of symbols	3
1.2	General safety instructions	3
<b>2</b>	<b>Product Information</b>	<b>5</b>
2.1	Determined use	5
2.2	Declaration of conformity	5
2.3	Product data for energy consumption	5
2.4	Scope of delivery	5
2.5	Accessories	5
2.6	Tools, materials and assembly aids	5
2.7	The heating system is operated and monitored via App or Web Portal	5
2.8	Product overview	6
2.8.1	Product Description	6
2.9	Dimensions and specifications	8
2.9.1	Dimensions and connections Condens 7000 F	8
<b>3</b>	<b>Regulations</b>	<b>11</b>
3.1	Regulations for gas systems	11
3.2	Duty to obtain a permit and provide notification	11
3.3	Validity of regulations	11
3.4	Notes on installation and operation	11
3.5	Installation location	12
3.6	Quality of the heating water	12
3.7	Pipework quality	12
3.8	Combustion air quality	12
3.9	Combustion air/flue gas connection/air vents	12
3.10	Frost protection	12
<b>4</b>	<b>Transporting the boiler</b>	<b>13</b>
4.1	Transporting the boiler by crane/hoist	13
4.2	Lifting the boiler off the pallet	14
4.3	Transporting the boiler on rollers	14
<b>5</b>	<b>Installation</b>	<b>15</b>
5.1	Installation location requirements	15
5.2	Preventing noise disturbance for end-users	15
5.3	Wall clearances	15
5.4	Levelling the boiler	16
5.5	Installing the condensate pipes	16
5.6	Establishing the flue gas connection	17
5.7	Connecting the air supply (for room sealed operation)	18
5.8	Hydraulic connection	18
5.8.1	Connecting the flow	19
5.8.3	Installing the safety assembly on the flow (on site)	19
5.8.4	Installing a DHW cylinder	21
5.9	Filling the heating system and checking for leaks	21
5.10	Providing the fuel supply	22
5.11	Fitting the boiler cover	22
<b>6</b>	<b>Electrical connection</b>	<b>23</b>
6.1	Installing the control unit	23
6.2	Establishing the power supply connection and installing the cables	23

<b>7</b>	<b>Commissioning</b>	<b>24</b>
7.1	Checking the operating pressure	24
7.2	Checking for leaks	24
7.3	Recording gas parameters	25
7.4	Checking device equipment	25
7.5	Converting the boiler to a different gas type	25
7.5.1	Converting to another type of natural gas	25
7.5.2	LPG conversion	26
7.6	Purging the gas line	26
7.7	Supply air and flue gas connection	27
7.7.1	Check supply and extract ventilation and flue gas connection	27
7.7.2	Checking the flue gas damper (scope of delivery of positive pressure cascade)	27
7.8	Making the heating system operational	27
7.9	Commissioning the control unit and burner	27
7.9.1	Switching on the boiler at the control unit	27
7.9.2	Carrying out a flue gas test	27
7.10	Measuring the gas supply pressure and static pressure	27
7.11	Checking the gas/air ratio	28
7.11.1	Check CO <sub>2</sub> setting at full load	28
7.11.2	Checking the CO <sub>2</sub> setting under partial load	28
7.12	Concluding the flue gas test	29
7.13	Set the standard display at the control unit	29
7.14	Recording measurements	29
7.14.1	Flue resistance	29
7.14.2	CO value	29
7.15	Function tests	29
7.15.1	Checking the ionisation current (flame current)	29
7.16	Checking tightness during operation	30
7.17	Installing casing parts	30
<b>8</b>	<b>Briefing the user, handing over technical documents</b>	<b>30</b>
<b>9</b>	<b>Shutdown</b>	<b>30</b>
9.1	Shutting down the heating system via the control unit	30
9.2	Shutting down the heating system in an emergency	30
<b>10</b>	<b>Environmental protection and disposal</b>	<b>31</b>
<b>11</b>	<b>Inspection and maintenance</b>	<b>31</b>
11.1	Preparing the boiler for inspection	31
11.2	Detailed overview of boiler components	32
11.3	General work	33
11.4	Internal tightness test	33
11.4.1	Determining the testing volume	33
11.4.2	Carrying out gas tightness test	34
11.5	Checking the heating system operating pressure	35
11.6	Measuring the carbon dioxide content	35
11.7	Removing the burner	35
11.8	Cleaning the burner and heat exchanger	38
11.8.1	Cleaning the burner	38
11.8.2	Cleaning the heat exchanger	38
11.9	Inspecting the burner electrodes	40
11.10	Testing the differential pressure switch	40

11.11	Replacing components. ....	41
11.11.1	Removing the air/gas ratio control valve. ....	41
11.11.2	Removing the fan. ....	41
11.11.3	Replacing components according to the service life. ....	42
11.12	Refitting detached parts. ....	43
11.12.1	Fitting the gas line to the gas valve. ....	43
11.12.2	Refit the combustion air connector. ....	43
11.13	Check for leaks during operation. ....	43
11.14	Checking the ionisation current. ....	43
11.15	Completing inspection and maintenance. ....	43
11.15.1	Removing measuring devices. ....	43
11.15.2	Installing casing parts. ....	43
11.15.3	Checking the gas/air ratio. ....	43
11.15.4	Confirming inspection and maintenance. ....	43
<b>12</b>	<b>Emergency operation. ....</b>	<b>44</b>
12.1	Clearing faults in emergency operation. ....	44
<b>13</b>	<b>Troubleshooting. ....</b>	<b>44</b>
13.1	Recognising the operating condition and clearing faults. ....	44
13.2	Calling up the fault history. ....	44
<b>14</b>	<b>Operating and fault displays. ....</b>	<b>45</b>
14.1	Control unit status indicators. ....	45
14.2	Service displays. ....	46
14.3	Control unit fault displays. ....	46
14.4	Status indicator of the burner control unit. ....	53
<b>15</b>	<b>Check temperature switch. ....</b>	<b>54</b>
<b>16</b>	<b>Testing the differential pressure switch. ....</b>	<b>54</b>
16.1	Test the continuity of the differential pressure switch at negative pressure. ....	54
16.2	Test the differential pressure switch for continuity at zero pressure. ....	55
<b>17</b>	<b>Appendix. ....</b>	<b>56</b>
17.1	Technical Data. ....	56
17.2	Sensor curves. ....	59
17.2.1	Temperature sensor at digital burner control unit. ....	59
17.3	Hydraulic resistance. ....	59
17.4	Connection diagrams. ....	59
17.4.1	Control unit connection diagram. ....	59
17.4.2	Burner control unit. ....	60
17.4.3	Diagrammatic representation of supply air/flue gas monitor and gas tightness. ....	61
17.5	Conversion of vol.% CO <sub>2</sub> into vol.% O <sub>2</sub> for burner setting. ....	62
17.6	System Commissioning Report. ....	63
17.7	Inspection and maintenance protocols. ....	64

## 1 Explanation of symbols and safety instructions

### 1.1 Explanation of symbols

#### Warnings

In warnings, signal words at the beginning of a warning are used to indicate the type and seriousness of the ensuing risk if measures for minimising danger are not taken.

The following signal words are defined and can be used in this document:



**DANGER:**

**DANGER** indicates that severe or life-threatening personal injury will occur.



**WARNING:**

**WARNING** indicates that severe to life-threatening personal injury may occur.



**CAUTION:**

**CAUTION** indicates that minor to medium personal injury may occur.

#### NOTICE:

**NOTICE** indicates that material damage may occur.

#### Important information



The info symbol indicates important information where there is no risk to people or property.

#### Additional symbols

Symbol	Meaning
▶	a step in an action sequence
→	a reference to a related part in the document
•	a list entry
–	a list entry (second level)

Table 1

### 1.2 General safety instructions

#### ⚠ Notices for the target group

These installation instructions are intended for gas, plumbing, heating and electrical contractors. All instructions must be observed. Failure to comply with instructions may result in material damage and personal injury, including danger to life.

- ▶ Read the installation instructions (heat source, heating controller, etc.) before installation.
- ▶ Observe the safety instructions and warnings.
- ▶ Follow national and regional regulations, technical regulations and guidelines.
- ▶ Record all work carried out.

### **⚠ If you smell gas**

- ▶ Close gas isolator.
- ▶ Open windows and doors
- ▶ Never operate electrical switches, including telephones, plugs or doorbells.
- ▶ Extinguish any naked flames.
- ▶ Never smoke.
- ▶ Never use any lighters or sources of ignition of any kind.
- ▶ Warn all occupants in the building, but do not ring doorbells.
- ▶ If you can actually hear gas escaping, leave the building immediately.
- ▶ Prevent third parties from entering and notify the police and fire brigade as well as the gas supplier and heating contractor **from outside** the building.

### **⚠ Danger of explosion of flammable gases**

- ▶ Any work on components that carry gas may only be carried out by an approved contractor.

### **⚠ Danger posed by explosive and easily flammable materials**

- ▶ Never use or store easily flammable materials (paper, curtains, clothing, thinners, paints, etc.) near the device.
- ▶ Observe all local regulations in relation to the storage of combustible materials at the installation location.

### **⚠ Danger through short circuits**

To prevent short circuits:

- ▶ Only use original cabling by the manufacturer.

### **⚠ Danger through electric shock when the boiler is open**

- ▶ Before opening up the boiler, isolate it completely from the mains power supply and ensure the power cannot be inadvertently reconnected.
- ▶ It is not enough to switch off the control unit.

### **⚠ Danger if you smell flue gas**

- ▶ Switch off the boiler.
- ▶ Open windows and doors.
- ▶ Notify an approved contractor.

### **⚠ In devices with open-flue mode:**

**there is a risk of poisoning from flue gas if there is an inadequate combustion air supply**

- ▶ Ensure that there is an adequate combustion air supply.
- ▶ Do not cover or reduce the size of ventilation apertures in doors, windows and walls.
- ▶ Ensure that there is an adequate combustion air supply, including for any devices installed at a later date, e.g. extractor fans, kitchen fans or air conditioning units that discharge air to the outside.
- ▶ Never operate the device if there is an insufficient combustion air supply.

### **⚠ Danger of escaping flue gases**

- ▶ Ensure that the flue pipes and gaskets are not damaged.
- ▶ Ensure that the boiler is not equipped with a thermostatic flue gas damper downstream of the flue gas connection.




---

Use of motor-controlled supply air flaps is permitted.

---

### **⚠ Installation and operation**

- ▶ Correct and proper installation and adjustment of the burner and the controller are the fundamental requirements for safe and economical operation of the boiler.
- ▶ The boiler must only be installed and adjusted by an approved contractor.
- ▶ Do not change parts at the boiler as otherwise the approval would be invalidated.
- ▶ Never modify any parts through which flue gas is routed.
- ▶ Electrical work must only be carried out by qualified electricians.
- ▶ **With open flue operation:** do not cover or reduce the size of ventilation apertures in doors, windows and walls. Make sure that windows that are used as combustion air vents cannot be shut accidentally. Attach a warning sign near the window. If draft-proof windows are installed, ensure an adequate supply of combustion air.
- ▶ If the supply air flaps can be closed via motors, combustion must only start when the supply air flap is fully open (voltage free checkback signal to the boiler controller via failsafe limit switch). Provide for control of supply air flaps.
- ▶ Make sure the boiler installation location is frost-proof.



### ► **Never shut off pressure relief valves!**

Water may escape from the pressure relief valve for the heating circuit and piping when the water is heating up.

- The heating system must be installed and operated in accordance with the applicable rules of technology as well as national, regional and local regulations.

### **Risk of damage from operating errors**

Operator errors can result in personal injury and/or material damage.

- Ensure that children never operate this appliance unsupervised or play with it.
- Ensure that only personnel who can operate this appliance correctly have access to it.

### **Instructing the user**

- Explain to the user how the boiler works and how to operate it.
- The user is responsible for ensuring the heating system is safe and environmentally compatible (→ local regulations and laws).
- Inform users that they must never carry out any modifications or maintenance work.
- Point out the need for inspections and maintenance for safe and environmentally-compatible operation.
- Maintenance and repairs may only be performed by an authorised heating contractor.
- Only use genuine spare parts.
- Any other combinations, accessories and wearing parts may only be used if these are specifically designed for the application and impair neither the performance characteristics nor the safety requirements.

## **2 Product Information**

### **2.1 Determined use**


The Condens 7000 F is designed for use as a floor standing gas condensing boiler for DHW and central heating.

Only approved gases can be used.

- Observe the details on the data plate and the specifications (→ Chapter 17.1, page 56).

### **2.2 Declaration of conformity**

The design and operating characteristics of this product comply with the European and national requirements.

 The CE marking declares that the product complies with all the applicable EU legislation, which is stipulated by attaching this marking.

The complete text of the Declaration of Conformity is available on the Internet: [www.bosch-industrial.com](http://www.bosch-industrial.com)

### **2.3 Product data for energy consumption**

The product data on energy consumption can be found in the operating instructions for the user.

### **2.4 Scope of delivery**

The Condens 7000 F is delivered with a control unit, which is assigned when ordering, in 2 packaging units.

- Upon receipt check that all packaging is in perfect condition.
- Check the scope of delivery for completeness.
- Dispose of packaging in an environmentally responsible manner.

Packaging unit	Component	Packaging
1 (boiler)	Floor standing boiler installed (with gas burner, without casing)	1 shrink-wrap package, on a pallet
	Adjustable feet	1 shrink-wrap package
	Conversion cover to L or LL-Gas	1 shrink-wrap package
	Label for gas type conversion	
	Technical documents	1 shrink-wrap package
	Casing	2 cartons, on a pallet
2 (separate)	Control unit	1 carton

Table 2 Scope of delivery

### **2.5 Accessories**



Our website and brochure provides a comprehensive overview of all available accessories.

The following accessories are available:

- Safety valve or safety assembly
- Flue system
- Supply air system
- HMI
- Cascade pipework (on the water and flue gas side for dual cascades)

### **2.6 Tools, materials and assembly aids**

The following tools and assembly aids are required for commissioning, inspection and maintenance of the boiler:

- Standard tools used by heating system installers and for gas and water installations.
- Metric hexagon wrench set (7; 8; 10; 13 width across flats)
- Allen key set (4mm)
- Torx key set
- The user interface as a monitoring device for commissioning, inspecting and servicing the boiler.

The following may also prove useful:

- 2 transport rollers (furniture transport rollers; minimum length 600 mm, load-bearing capacity > 200 kg) for rolling the floor standing boiler.
  - Alternative: 5 pipes (approx. R 1¼", approx. 700 mm long) as base for rolling the floor standing boiler.
- Cleaning blade and/or chemical cleaning agent for wet cleaning (available as accessories)

### **2.7 The heating system is operated and monitored via App or Web Portal**

We offer, in combination with the relevant control unit, a comprehensive range of products for monitoring, diagnosis and control of the floor standing boiler via mobile terminal devices, PC or tablet.

## 2.8 Product overview

The Condens 7000 F is a floor standing condensing boiler with an aluminium heat exchanger.

### 2.8.1 Product Description

The main Condens 7000 F components are:

- Control unit
- Boiler block
- Appliance frame and casing
- Gas burner

The control unit monitors and controls all electrical boiler components.

The boiler block transfers the heat generated by the burner to the heating water. The thermal insulation reduces the radiation and standby losses.

The control unit enables the standard operation of the heating system. For this, it makes the following functions available, including:


- Switching the heating system on/off
- Setting the DHW temperature and the maximum boiler temperature in heating mode
- Status display



This floor standing boiler can be operating via the CC 8313 or MX25 control unit.




Many additional functions that enhance control and operating convenience as well as information on the heating system settings are described in the corresponding Technical documentation of the installed control unit.

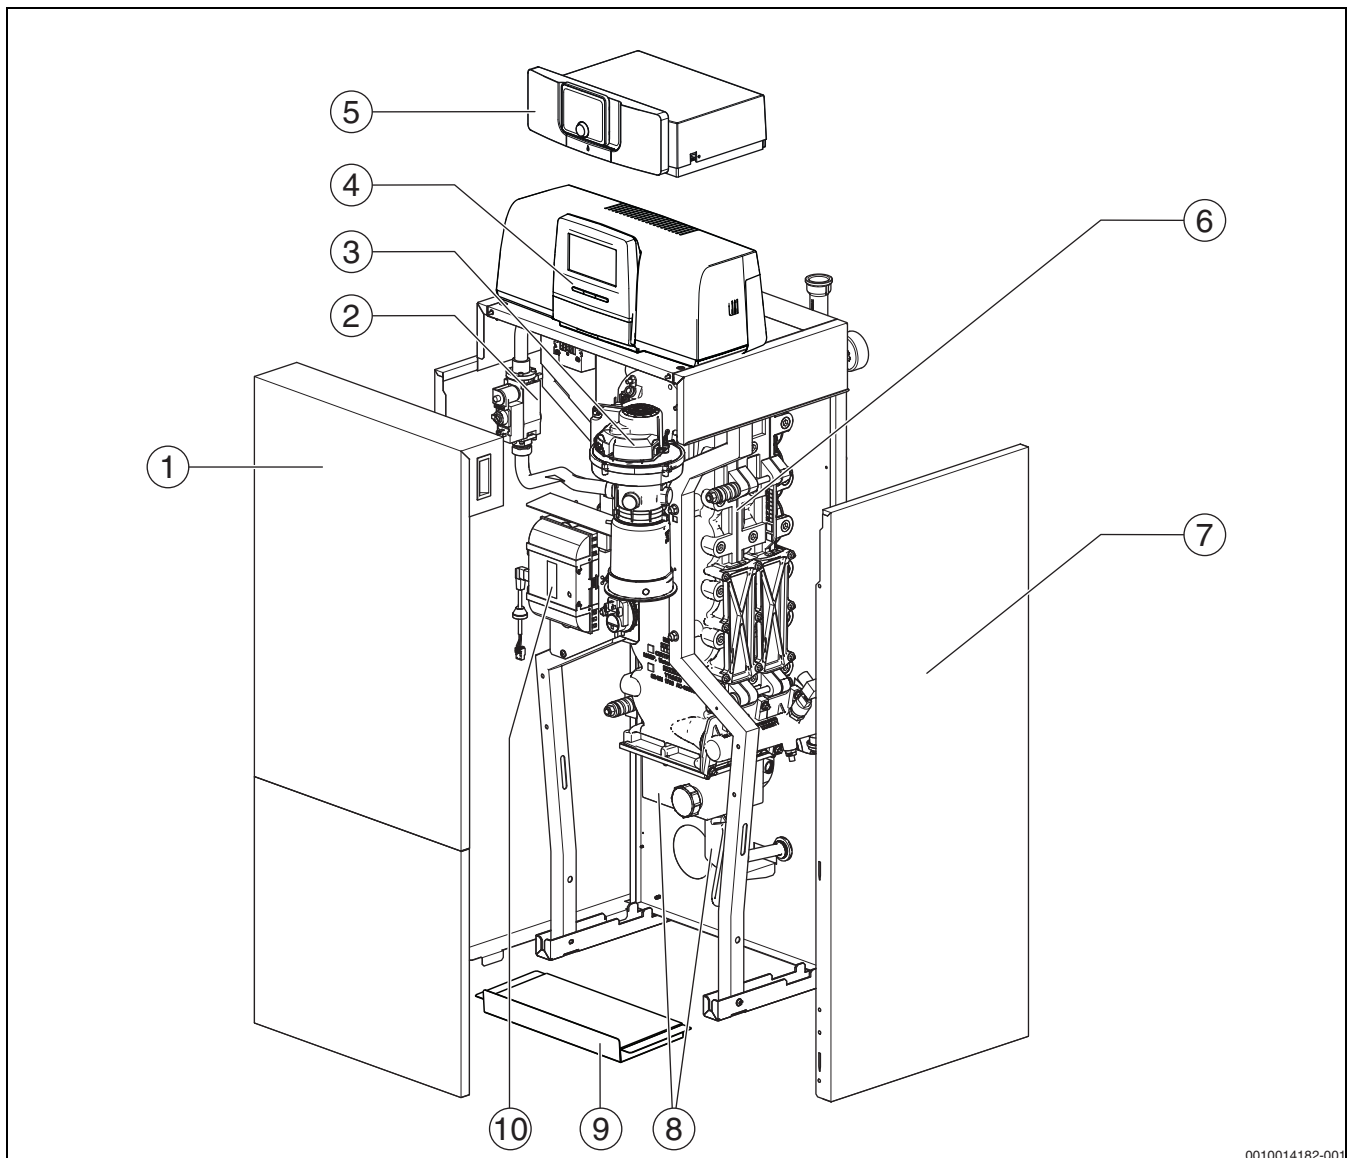

0010014182-001

Fig. 1 Condens 7000 F, 75...100 kW main components (shown: right-hand version; cleaning cover and flow and return are located on the right)

- |  |                                       |
|--|---------------------------------------|
| [1] Boiler front panel (2-part)          | [7] Boiler casing                     |
| [2] Gas valve                            | [8] Condensation catch pan and siphon |
| [3] Gas burner with burner rod           | [9] Bottom panel                      |
| [4] Control unit CC 8313 (optional)      | [10] Burner control unit              |
| [5] MX25 control unit (optional)         |                                       |
| [6] Boiler block with thermal insulation |                                       |

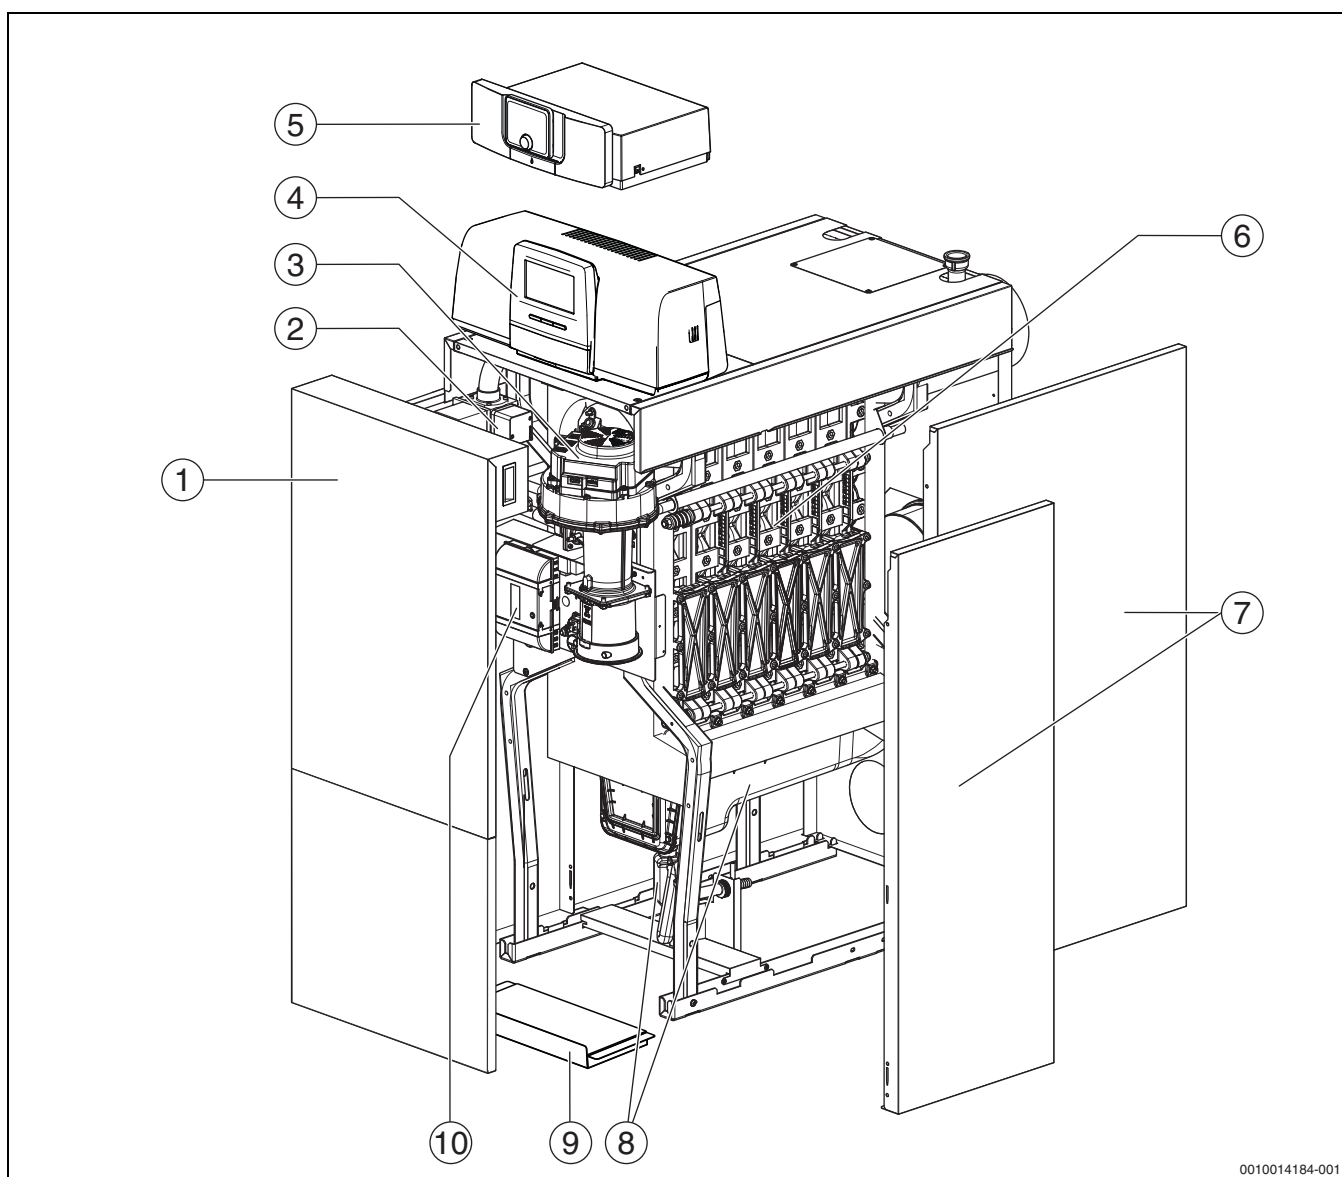

0010014184-001

Fig. 2 Condens 7000 F, 150...300 kW main components (shown: right-hand version; cleaning cover and flow and return are located on the right)

- [1] Boiler front panel (2-part)
- [2] Gas valve
- [3] Gas burner with burner rod
- [4] Control unit CC 8313 (optional)
- [5] MX25 control unit (optional)
- [6] Boiler block with thermal insulation
- [7] Boiler casing
- [8] Condensation catch pan and siphon
- [9] Bottom panel
- [10] Burner control unit



The right-hand versions of the boiler are shown. In this case the cleaning cover and the flow and return are located on the right.  
In the left-hand version, the cleaning cover and flow and return are located on the left.

**2.9 Dimensions and specifications**

**2.9.1 Dimensions and connections Condens 7000 F**


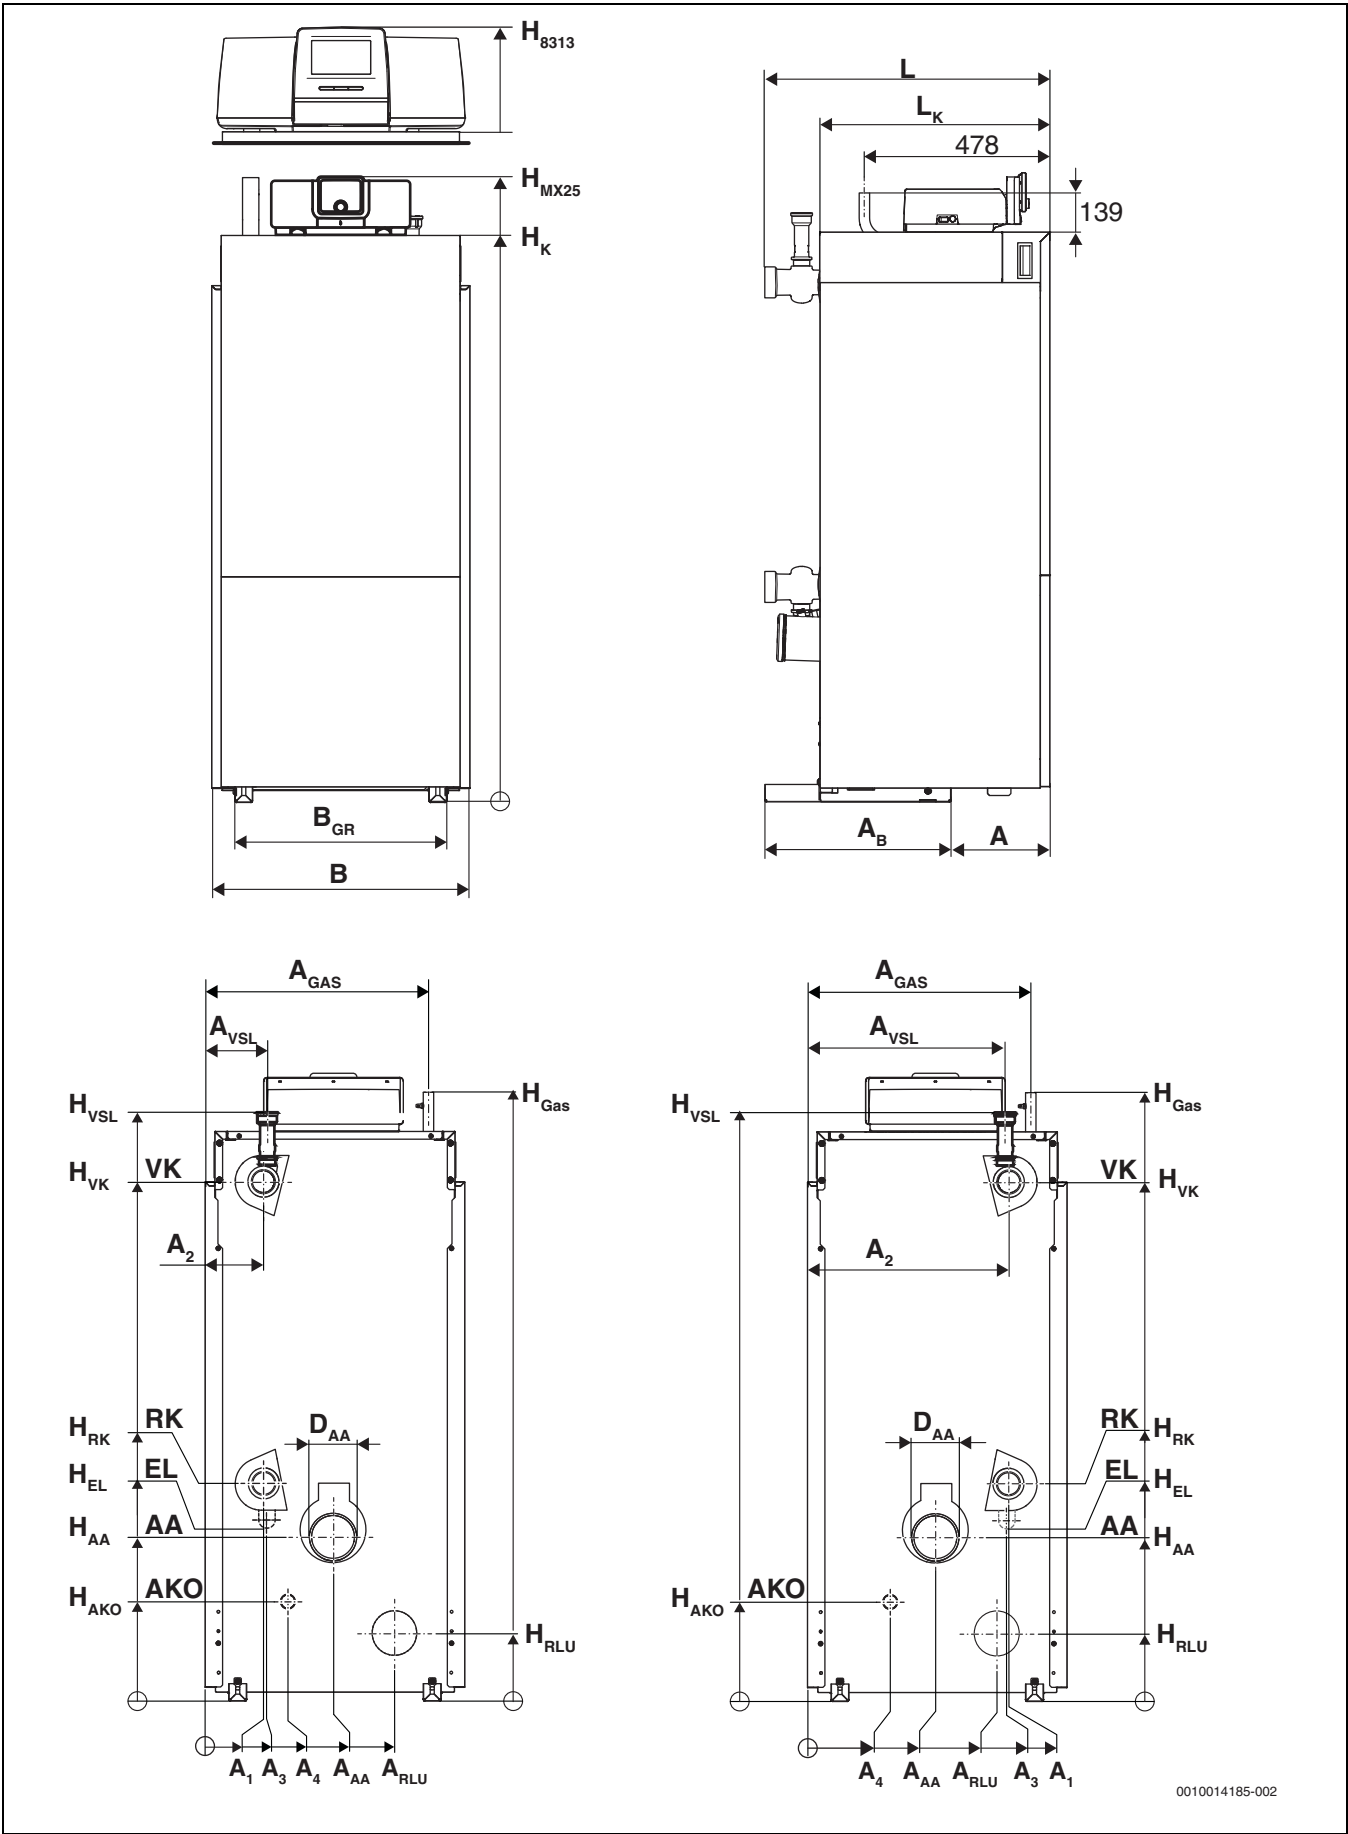


Fig. 3 Dimensions and connections for Condens 7000 F, 75...100 kW (right and left-hand version; dimensions in mm)

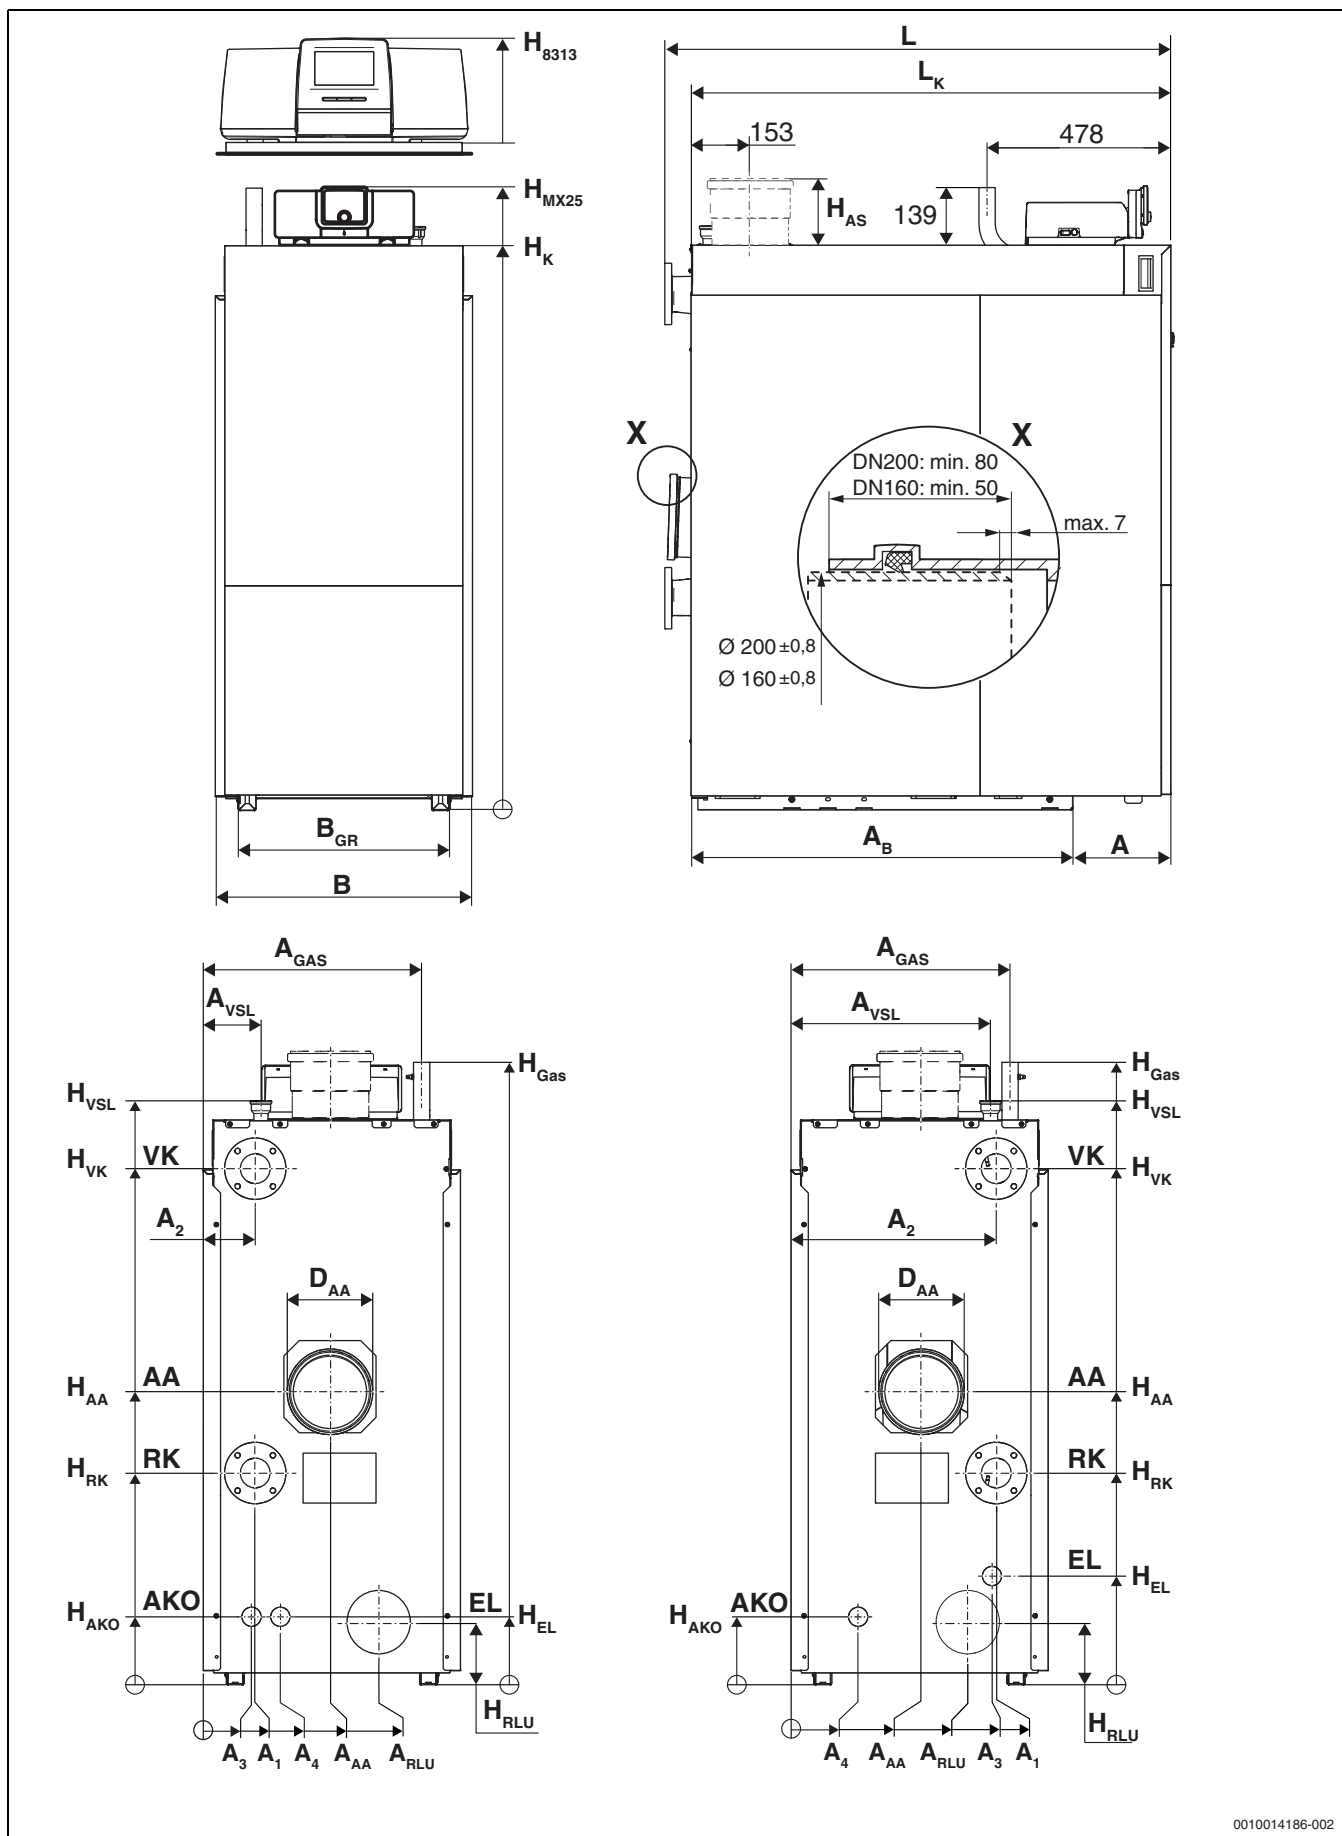

0010014186-002

Fig. 4 Dimensions and connections for Condens 7000 F, 150...300 kW (right and left-hand version; dimensions in mm)

**Key to figs. 3 and 4:**

A	Clearance
A <sub>1</sub>	Boiler return clearance
A <sub>2</sub>	Boiler flow clearance
A <sub>3</sub>	Drain clearance
A <sub>4</sub>	Condensate discharge clearance
A <sub>AA</sub>	Flue gas connection clearance
A <sub>B</sub>	Base frame width
A <sub>GAS</sub>	Gas connection clearance
A <sub>RLU</sub>	Combustion air connection clearance
A <sub>VSL</sub>	Safety pipe flow clearance
AA	Flue gas outlet
AKO	Condensate connection
B	Width of boiler including casing
BGR	Base frame width
D <sub>AA</sub>	Inner dia. of flue outlet
EL	Cold water inlet/drain

H <sub>8313</sub>	Control unit height CC 8313
H <sub>MX25</sub>	Control unit height MX25
H <sub>AA</sub>	Flue outlet height
H <sub>AS</sub>	Vertical height of flue outlet (optional)
H <sub>AKO</sub>	Condensate outlet height
H <sub>GAS</sub>	Gas connection height
HEL	Drain height
HK	Boiler height
H <sub>RK</sub>	Boiler return (low temperature return) height
H <sub>RLU</sub>	Combustion air connection height
H <sub>VK</sub>	Boiler flow height
H <sub>VSL</sub>	Flow safety pipe height
L	Length of boiler including cladding
L <sub>K</sub>	Boiler length
VK	Boiler flow
VSL	Pressure relief valve and flow safety pipe connections (for open vented systems)

	Unit	Boiler size (output in kW)											
		75 <sup>1)</sup>	75 <sup>2)</sup>	100 <sup>1)</sup>	100 <sup>2)</sup>	150 <sup>1)</sup>	150 <sup>2)</sup>	200 <sup>1)</sup>	200 <sup>2)</sup>	250 <sup>1)</sup>	250 <sup>2)</sup>	300 <sup>1)</sup>	300 <sup>2)</sup>
Clearance A	mm	255	255	255	255	255	255	255	255	255	255	255	255
Dimensions A <sub>1</sub>	mm	150	520	150	520	135	534	135	534	135	534	135	534
Dimension A <sub>2</sub>	mm	150	520	150	520	135	534	135	534	135	534	135	534
Dimension A <sub>3</sub>	mm	155	515	155	515	183	520	126	520	126	520	126	520
Dimension A <sub>4</sub>	mm	214	223	214	223	201	215	201	215	201	215	201	215
Dimension A <sub>AA</sub>	mm	330	340	330	340	330	340	330	339	330	339	330	339
Dimension A <sub>B</sub>	mm	480	480	480	480	695	695	977	977	977	977	977	977
Dimension A <sub>GAS</sub>	mm	576	576	576	576	569	569	569	569	569	569	569	569
Dimension A <sub>RLU</sub>	mm	500	500	500	500	475	475	475	475	475	475	475	475
Dimension A <sub>VSL</sub>	mm	160	510	160	510	150	520	150	520	150	520	150	520
RLU connection	mm	110	110	110	110	110	110	160	160	160	160	160	160
Internal flue gas outlet Ø AA	mm	110	110	110	110	160	160	200	200	200	200	200	200
Condensate connection	inch (DN/mm)	¾" (DN20)	¾" (DN20)	¾" (DN20)	¾" (DN20)	¾" (DN20)	¾" (DN20)	¾" (DN20)	¾" (DN20)	¾" (DN20)	¾" (DN20)	¾" (DN20)	¾" (DN20)
Connection Ø VSL	inch	R 1"	R 1"	R 1"	R 1"	R 1¼"	R 1¼"	R 1¼"	R 1¼"	R 1¼"	R 1¼"	R 1¼"	R 1¼"
Connection Ø GAS	inch	R ¾"	R ¾"	R ¾"	R ¾"	R 1¼"	R 1¼"	R 1¼"	R 1¼"	R 1¼"	R 1¼"	R 1¼"	R 1¼"
Connection VK and RK	inch <sup>3)</sup>	2"	2"	2"	2"	–	–	–	–	–	–	–	–
Connection VK and RK	DN <sup>4)</sup> /mm	–	–	–	–	DN 50	DN 50	DN 65	DN 65	DN 65	DN 65	DN 65	DN 65
Width B	mm	670	670	670	670	670	670	670	670	670	670	670	670
Width B <sub>GR</sub>	mm	550	550	550	550	550	550	550	550	550	550	550	550
Height H <sub>8313</sub>	mm	1710	1710	1710	1710	1710	1710	1710	1710	1710	1710	1710	1710
Height H <sub>MX25</sub>	mm	1624	1624	1624	1624	1624	1624	1624	1624	1624	1624	1624	1624
Height H <sub>K</sub>	mm	1470	1470	1470	1470	1470	1470	1470	1470	1470	1470	1470	1470
Height H <sub>AA</sub>	mm	424	424	424	424	700	700	763	763	763	763	763	763
Height H <sub>AS</sub>	mm	–	–	–	–	155	155	190	190	190	190	190	190



	Unit	Boiler size (output in kW)											
		75 <sup>1)</sup>	75 <sup>2)</sup>	100 <sup>1)</sup>	100 <sup>2)</sup>	150 <sup>1)</sup>	150 <sup>2)</sup>	200 <sup>1)</sup>	200 <sup>2)</sup>	250 <sup>1)</sup>	250 <sup>2)</sup>	300 <sup>1)</sup>	300 <sup>2)</sup>
Height H <sub>AKO</sub>	mm	257	257	257	257	177	177	177	177	177	177	177	177
Height H <sub>EL</sub>	mm	455	455	455	455	177	280	177	280	177	280	177	280
Height H <sub>RLU</sub>	mm	176	176	176	176	163	163	163	163	163	163	163	163
Height H <sub>VK</sub>	mm	1340	1340	1340	1340	1343	1343	1343	1343	1343	1343	1343	1343
Height H <sub>RK</sub>	mm	554	554	554	554	552	552	552	552	552	552	552	552
Height H <sub>VSL</sub>	mm	1520	1520	1520	1520	1520	1520	1520	1520	1520	1520	1520	1520
Height H <sub>GAS</sub>	mm	1570	1570	1570	1570	1620	1620	1620	1620	1620	1620	1620	1620
Length L	mm	736	736	736	736	914	914	1317	1317	1317	1317	1317	1317
Length L <sub>K</sub>	mm	594	594	594	594	845	845	1250	1250	1250	1250	1250	1250

1) Right-hand version

2) Left-hand version

3) Female thread (→Table 7, page 18)

4) PN6 standard flange, EN1092 (→Table 7, page 18)

Table 3 Measurements and connection dimensions

### 3 Regulations



#### **DANGER:**

**Failure to comply with instructions may result in material damage and personal injury, including danger to life!**

- Comply with all instructions.

#### **NOTICE:**

#### **Risk of system damage due to differing operating conditions!**

Faults may arise if the specified operating conditions are disregarded. Where there is serious disregard for the stated operating conditions, individual components or the boiler itself may be destroyed.

- Observe the binding information on the data plate.

#### 3.1 Regulations for gas systems

In order to ensure installation and operation of the product in accordance with the regulations, please observe all the applicable national and regional regulations as well as all technical rules and guidelines.

The document 6720807972 contains information about the applicable regulations. You can use the document search on our website to display this. You will find the address of the website on the back of these instructions.

#### 3.2 Duty to obtain a permit and provide notification

Prior to installation of the heating and flue system:

- Inform relevant building authority.
- If required by the Clean Air Act 1993, seek approval for the flue system from the Local Authority. For additional guidance see IGE/UP/10 edition 4.
- Make sure that there are no concerns on the part of the authority regarding the planned installation
- Make sure that official requirements are complied with.
- Please note that in certain regions approvals may be required for the flue system and the connection of the condensate outlet to the public sewerage system.

#### 3.3 Validity of regulations

Modified regulations or supplements are also valid at the time of installation and must be observed.

#### 3.4 Notes on installation and operation



Use only genuine spare parts from the manufacturer. The manufacturer can assume no liability for damage caused by spare parts not supplied by the manufacturer.

When installing and operating the heating system, observe the following requirements:

- The local building regulations regarding installation conditions.
- The local building regulations regarding the supply and exhaust air systems, and the chimney connection.
- Latest edition of the IEE Wiring regulations governing electrical connection to the mains power supply
- Regulations and standards regarding the safety equipment in water-filled heating systems. For guidance see the ICOM water treatment guide for commercial heating systems.
- Make sure that the regional approvals required for the flue system and condensate connection to the public sewage system have been obtained.

**3.5 Installation location**

**NOTICE:**

**Frost damage!**

- ▶ Install the heating system in a frost-free room.



**DANGER:**

**Risk of fire through flammable materials or liquids.**

- ▶ Never store flammable materials or liquids in the immediate vicinity of the boiler.

**NOTICE:**

**Boiler damage through contaminated combustion air or contaminated air in the vicinity of the boiler!**

- ▶ Never operate the boiler under dusty conditions or where the atmosphere is contaminated with corrosive substances. These might be, for example, paint shops, hairdressing salons and agricultural operations involving the production of manure.
- ▶ Never operate boilers in locations where trichloroethene, halogenated hydrocarbons or other corrosive chemical substances are used or stored. Certain adhesives, solvents, cleaning agents and paints, for example, contain these substances.
- ▶ Choose or prepare a suitable installation location.

**3.6 Quality of the heating water**

As pure water cannot be used for heat transfer, water quality is important. Poor water quality can damage heating systems due to scale formation and corrosion.



Water quality is an essential factor for increased efficiency, functional reliability, long service life and for maintaining the constant operational condition of a heating system.

- ▶ Observe the water quality requirements contained in the "Water Quality Operator's Log".
- ▶ Warranty claims for the boilers will only be considered provided the water quality requirements have been met and the operator's log has been maintained.

**3.7 Pipework quality**

**NOTICE:**

**Boiler damage through corrosion.**

- ▶ Never operate this boiler as a gravity-fed or as open vented heating system unless working in combination with a hydraulic system separator with a heat exchanger.

When using plastic pipes in the heating system, for example in underfloor heating systems, ensure these are impermeable to oxygen in accordance with DIN 4726/4729. If the plastic pipes do not comply with these standards, they must be separated from the rest of the system using a heat exchanger.

**3.8 Combustion air quality**

- ▶ To avoid corrosion, keep the supply of combustion air free of corrosive substances (e.g. halogenated hydrocarbons that contain chlorine or fluorine compounds).
- ▶ Keep the combustion air supply free of dust or use the "air filter" accessory set.

**3.9 Combustion air/flue gas connection/air vents**

The installation location must be connected to the open air via the required combustion air vents or air vents.  
Installation locations must not be mechanically ventilated.



**WARNING:**

**Danger to life due to poisoning!**

Risk of poisoning due to escaping flue gases when the air supply is inadequate.

- ▶ Make sure that a supply of air is available in every operating mode through corresponding openings to the open air.

- ▶ Inform the user about the need for the openings.

The following applies for **open flue** operation:

- ▶ Provide a combustion air vent that complies with the minimum size specified in tab. 4<sup>1)</sup>.

Boiler size [kW]	min. size of combustion air vent [cm <sup>2</sup> ]
75	200
100	250
150	350
200	450
250	550
300	650

Table 4 Combustion air vents

- ▶ Never place objects in front of these vents.
- ▶ Ensure that combustion air vents are unobstructed at all times.

The following applies for **balanced flue** operation:

In order to provide ventilation, the installation location must have an air vent leading to the open air of at least 150 cm<sup>2</sup>, or air vents of at least 2 x 75 cm<sup>2</sup>, or pipes to the open air with equivalent flow cross-sections.<sup>1)</sup> At rated outputs above 100 kW, a top and bottom vent of 150 cm<sup>2</sup> respectively is required. The vents must be enlarged by 1 cm<sup>2</sup> for each kW over 100 kW.

- ▶ Never place objects in front of these vents.
- ▶ The air vents must always be unobstructed.
- ▶ Calculate dimensions of the air supply pipe in accordance with the applicable regulations.

The boiler must be connected to a flue system.

- ▶ Observe country-specific and local regulations.
- ▶ Observe attached documentation "Information on flue gas routing".



For additional information on the combustion air/flue gas connection see Chapter 5.6, page 17.

**3.10 Frost protection**

- ▶ Observe technical documentation of the installed control unit for frost protection settings.

1) In addition to this, country-specific and local regulations must be observed.

## 4 Transporting the boiler



### **DANGER:**

#### **Risk to life through falling loads!**

Falling loads can result in life-threatening injuries.

- ▶ Only transport the boiler by means of a crane, forklift truck pallet truck or transport rollers.
- ▶ Only trained authorised personnel may undertake the handling (e.g. by forklift truck) or lifting by means of a crane/hoist.
- ▶ Observe safety instructions relating to the lifting of heavy loads (e.g. by means of a crane/hoist).
- ▶ Wear personal safety equipment (e.g. safety boots and protective gloves).
- ▶ Protect the boiler against slippage by means of a transport strap.



### **CAUTION:**

#### **Risk of injury through carrying heavy loads!**

- ▶ Only transport the boiler by means of a crane/hoist, forklift truck or transport rollers.

### **NOTICE:**

#### **Boiler damage through impact!**

The standard delivery of the boiler includes components that are susceptible to impact damage.

- ▶ During handling protect all components against impact.
- ▶ Observe the transport markings on the packaging.

The boiler may be transported to the place of installation by crane/hoist, forklift truck or pallet truck. Where possible, transport the boiler to the installation location in its shipping packaging to protect it from contamination.

### 4.1 Transporting the boiler by crane/hoist

#### **NOTICE:**

#### **Boiler damage through means of transport!**

Without the cardboard side strips, the boiler frame will deform through lifting it by crane/hoist.

- ▶ When transporting the boiler do not remove the strips.
- ▶ Pass the lifting gear (round slings) through the boiler frame (→ Fig. 5).

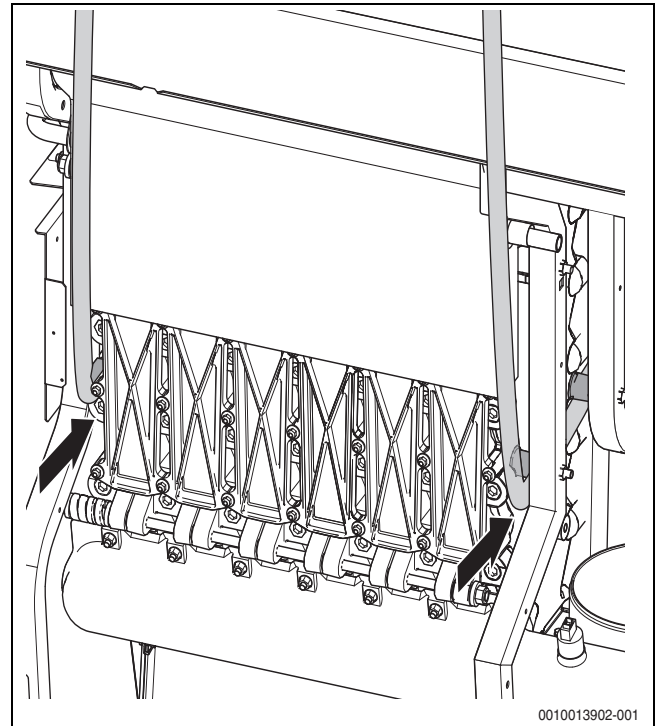


Fig. 5 Guide of crane lifting gear on the frame

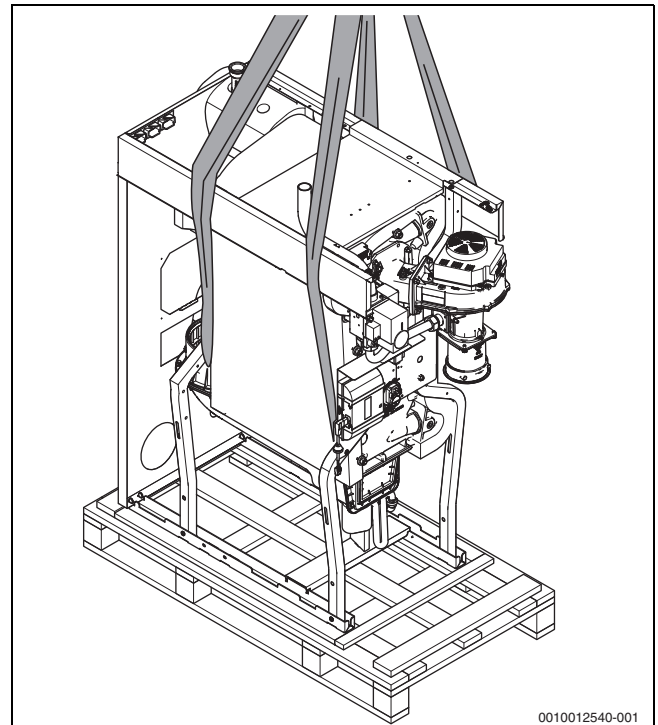


Fig. 6 Transporting the boiler with crane (viewed from front left)

## 4.2 Lifting the boiler off the pallet

### NOTICE:

#### Boiler damage through impact!

The boiler is at risk of tipping over if it is pushed off the side of the pallet.

- ▶ Push the boiler off the pallet towards the burner or flue gas side.
- ▶ Depending on the pushing direction, remove corresponding fixing strip (→ Fig. 7).
- ▶ Push the boiler off the pallet in the required direction.
- ▶ Avoid heavy impacts or setting the boiler down too hard.

The boiler is screwed to the pallet via the lower tie bar.

- ▶ Remove 4 safety screws.

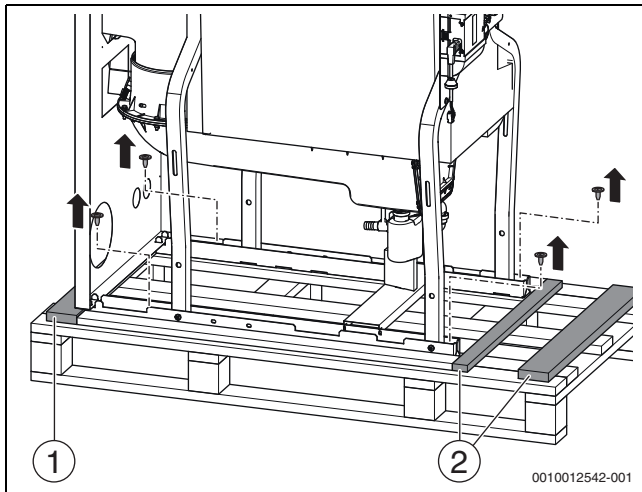


Fig. 7 Detaching the boiler from the pallet (example for illustration purposes)

- [1] Fixing bar on the flue gas side
- [2] Fixing strips on the burner side

## 4.3 Transporting the boiler on rollers

If the path to the boiler room is level, the boiler can also be rolled.

- ▶ Use at least 5 pipe sections of approx. 700 mm length (Diameter R 1 1/4 ") as rollers.
- ▶ Position the pipes approx. 400 mm apart on the floor.
- ▶ Lift the boiler onto the pipe sections and carefully transport it to the installation location.



You can also use commercially available transport rollers.

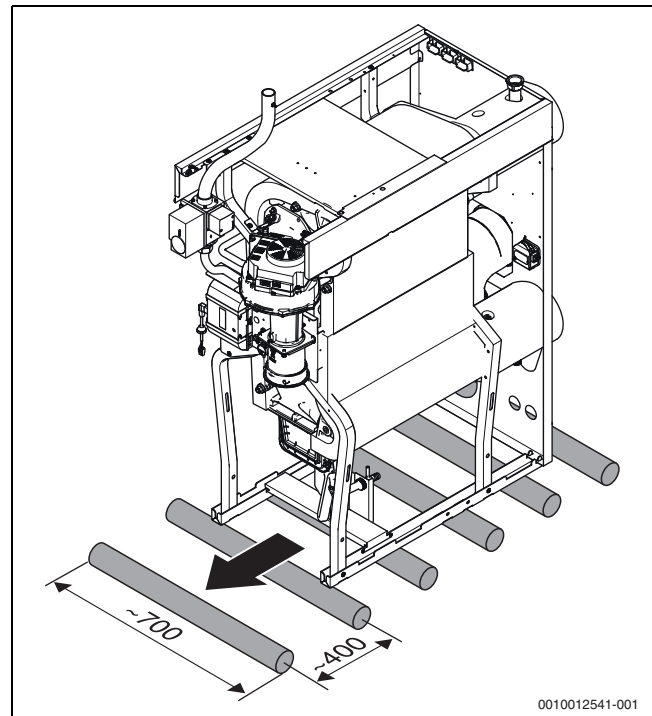


Fig. 8 Transporting the boiler on rollers (measurements in mm)

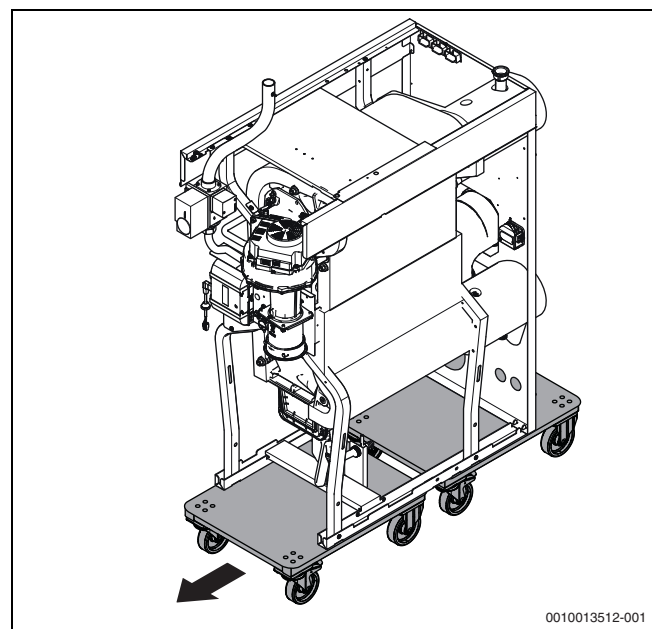


Fig. 9 Transporting the boiler on a furniture roller



If the boiler is not to be brought into operation:

- ▶ Protect boiler from contamination.



Dispose of packaging in an environmentally responsible manner.

## 5 Installation

### 5.1 Installation location requirements



#### **DANGER:**

#### **Risk of fire through flammable materials or liquids.**

- ▶ Never store flammable materials or liquids in the immediate vicinity of the boiler.

#### **NOTICE:**

#### **Risk of material damage due to contaminated combustion air!**

- ▶ Do not use cleaning agents that contain chlorine or halogenated hydrocarbons (e.g. in spray cans, solvents and cleaning agents, paints and adhesives).
- ▶ Do not store or use these substances in the boiler room.
- ▶ Keep the combustion air supply free of dust or use the "air filter" accessory set.

#### **NOTICE:**

#### **Material damage due to overheating!**

Excessive ambient temperatures can result in heating system damage.

- ▶ Ensure the ambient temperature is above 0 °C and below 35 °C.

#### **NOTICE:**

#### **Frost damage!**

- ▶ Install the heating system in a frost-free room.

### 5.2 Preventing noise disturbance for end-users

- ▶ Where the boiler surroundings are sensitive to noise (e.g. residential units), use the silencer options offered by the manufacturer (flue gas silencer, expansion joints).

### 5.3 Wall clearances

When determining the installation location, take the clearances for the flue gas routing and the connection pipe assembly into consideration (→ Fig. 10).



Where applicable, allow extra wall clearances for additional components, for example DHW cylinder, pipe connections or other components on the flue gas side.

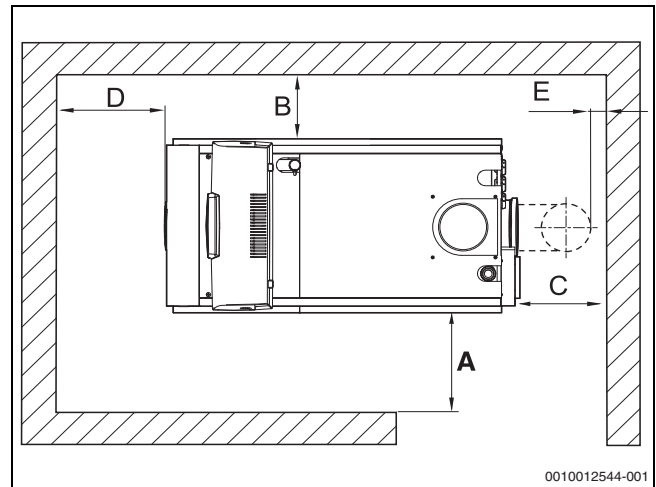


Fig. 10 Wall clearances at the installation location (right-hand version)

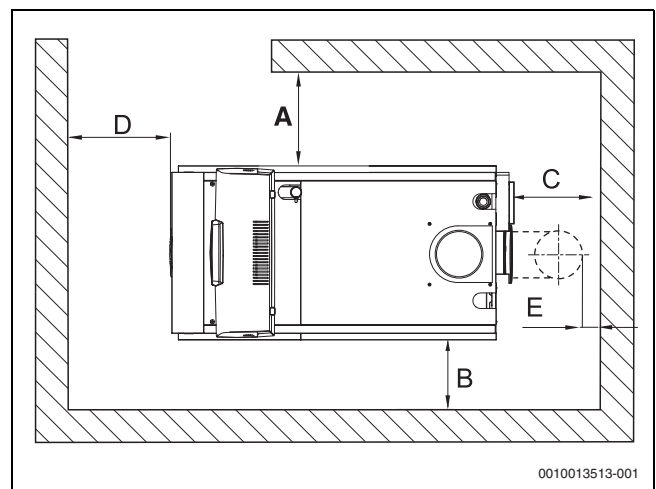


Fig. 11 Wall clearances at the installation location (left-hand version)

Dimension	Wall clearance [mm]	
	minimum	recommended
A	600	1000
B	100	400
C <sup>1)</sup>	–	–
D	800	1000
E <sup>1)</sup>	150	400

1) This clearance depends on the flue system installed.

Table 5 Recommended and minimum wall clearances

## 5.4 Levelling the boiler

### NOTICE:

**Boiler damage through insufficient load-bearing capacity of the installation surface or unsuitable substrate!**

- Ensure that the installation surface offers sufficient load-bearing capacity.

Level the boiler horizontally to prevent air pockets forming inside the boiler and to enable condensate to drain fully from the condensation catch pan.

- Bring the boiler into its final position.
- Level the boiler horizontally by means of its adjustable feet and a spirit level.

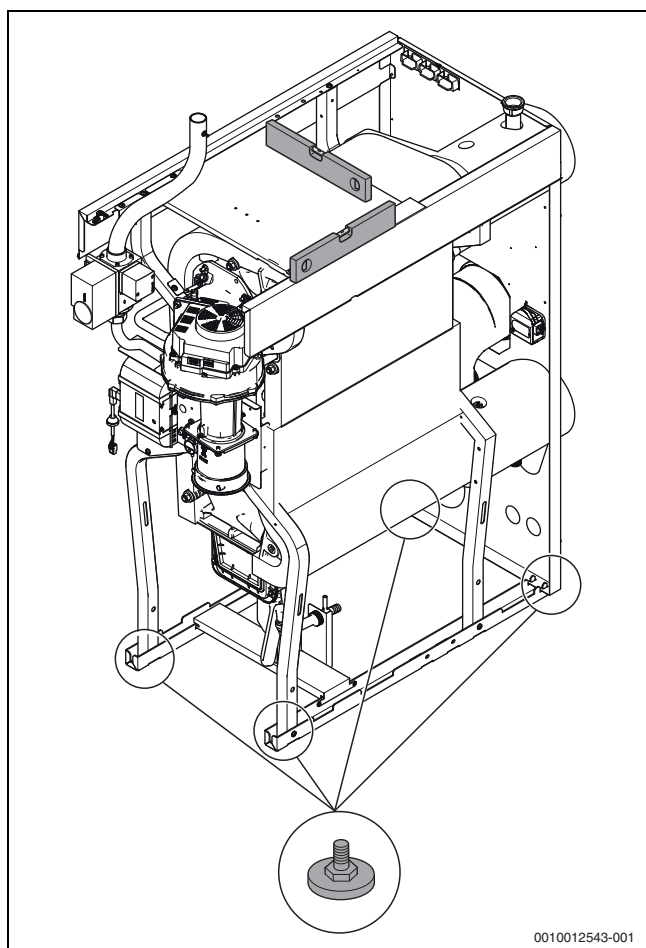


Fig. 12 Levelling the boiler

## 5.5 Installing the condensate pipes



### DANGER:

**Danger to life due to poisoning!**

Siphons not filled with water can cause danger to life through escaping flue gas.

- Filling the siphon with water.



Information regarding the condensates pipes:

- Carefully drain the condensate created inside the boiler and flue (route the flue with a slope towards the boiler).
- Drain the condensate into the public sewerage system in accordance with the requirements in your country.
- Observe regional regulations.
- Install condensate neutraliser (accessory) if necessary.
- Fit the condensate hose to the siphon connector using a hose clip.
- Guide the condensate hose through the opening in the back panel.
- Connect the condensate hose from the siphon with a slope to the condensate neutraliser.
- If required, make the connection to the sewerage system in accordance with the instructions for the condensate neutraliser and locally applicable regulations.
- Install condensate neutraliser (accessory) in accordance with the installation instructions.
- Fill the siphon below the flue outlet with roughly 3 litres of water.

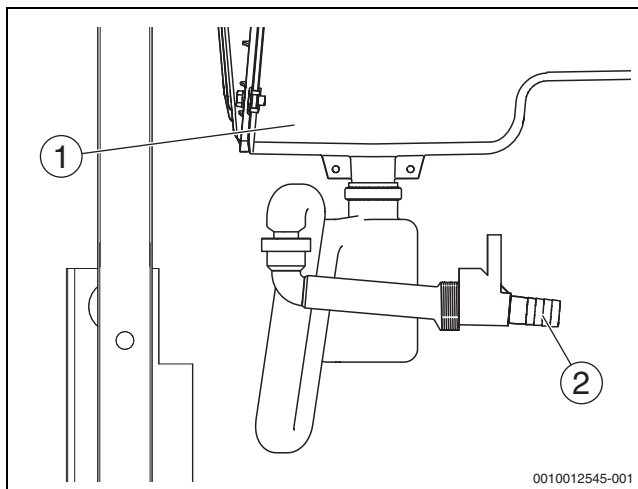


Fig. 13 Installing the condensate hose

- [1] Condensation catch pan
- [2] Connecting the condensate hose to the siphon connector



## 5.6 Establishing the flue gas connection

For position and dimension of flue gas connection

→ Chapter 2.9, page 8.



### **DANGER:**

#### **Risk to life from escaping flue gas inside at the installation location!**

- Ensure that the seal in the flue gas connection on the condensation catch pan is fitted, undamaged and correctly inserted.



### **DANGER:**

#### **Risk to life through toxic exhaust gases escaping.**

- Check all joints in the flue system to ensure they are correctly made, secured and sealed.

### **NOTICE:**

#### **Damage to gaskets due to burred edges on the insertion ends of the pipe parts!**

- Make sure the insertion ends are free of burrs. If chamfering on site is required, only do so in accordance with the manufacturer's documentation.



#### **Flue gas routing for multi-boiler systems (cascade, accessory).**

These instructions only concern single boiler systems.

- Observe separate technical documentation (information on flue gas routing and documentation on accessories).
- Only ask qualified specialists to calculate and size flue gas / combustion air systems for multi-boiler systems.
- The flue system must prevent a reverse flow of flue gas through boilers when they are not in use.  
Only original accessories may be used for positive pressure cascades (conversion set and flue gas piping).
- Compare data plate with label on the retaining plate of the burner control unit.

Observe all country-specific requirements when installing the flue system.

The flue gas connection is supplied ex works for connection at the rear. The flue gas connection can also be made at the top. The following conversion measures are required for this:

#### **with boiler rating 75-100 kW:**

- Install 90° flue bend (accessory) outside the casing on the factory-installed flue gas connection and install the flue mechanically uncompressed.

#### **With boiler rating 150-300 kW:**

- Remove factory-installed 90° flue bend.
- Plug the straight pipe section (accessory) onto the connector on the condensation catch pan and install the flue mechanically uncompressed.

The flue system is to be carried out either in accordance with pressure classification (EN 1443) H1 or pressure classification (EN 1443) P1 with additional mechanical impact stability up to 5000 Pa.

Class	Leakage rate l*s <sup>-1</sup> *m <sup>-2</sup>	Rated pressure [Pa]	Mode of operation
P1	0.006	200	Positive pressure/ negative pressure <sup>1)2)</sup>
H1	0.006	5000	Positive pressure/ negative pressure <sup>3)</sup>

1) Positive pressure up to maximum 200 Pa

2) Usage only with additional mechanical impact stability up to 5000 Pa in the connection piece

3) Positive pressure up to maximum 5000 Pa

*Table 6 Pressure classifications of the flue system*

When installing the flue gas connection:

- Observe the installation instructions for the flue accessories.
- Observe national regulations.
- Make sure that the flue pipe cross-section is calculated in accordance with all current regulations.
- Select the shortest possible route for the flue pipe and install it with a slope towards the floor standing boiler.
- Fasten the flue securely at 1 m intervals.
- Ensure the connection is mechanically uncompressed, and that no loads are transferred to the flue gas connection.
- **During planning and installation of the flue system, create a layout that best favours the flue gas flow.**



The wind barriers for the combustion air supply and the flue gas routing must be installed on the same wall of the building.



The boiler must not be connected to any combined flue system with motorised combustion systems (e.g. combined heat and power unit).



Centrocerin (scope of delivery) must be used as a lubricating paste when installing the flue system on the connector.

**5.7 Connecting the air supply (for room sealed operation)**

**NOTICE:**

**Damage to gaskets due to burred edges on the insertion ends of the pipe parts!**

- Make sure the insertion ends are free of burrs. If chamfering on site is required, only do so in accordance with the manufacturer's documentation.

The combustion air is supplied to the boiler either through an external wall connection, a duct or a separate pipe in the duct.

The dimensions of the combustion air pipe must be calculated in accordance with the current regulations.



An accessory set for room sealed operation is available for installation inside the boiler casing (DN110 for boiler ratings 75-150 kW and DN160 boiler ratings 200-300 kW).

- Only install the original accessories set envisaged for the corresponding boiler rating.



We would recommend the installation of a silencer in the combustion air pipe, subject to the location of the air inlet opening on the outside of the building.



To avoid condensate formation in the combustion air pipe (inside and outside), insulate the combustion air pipe.



For room sealed operation, both air intake and flue terminal positions must be installed on the same side of the building, to prevent wind effects.

- Mount adapter (→ Fig. 14, [6]) on the intake connector of the burner and secure with hinged pipe clip.
- Push elbow [3] onto the combustion air pipe [1].
- Mount the combustion air pipe [1] with supplied pipe clips [2, 2x] on the frame.
- Screw the combustion air hose [5] onto the adapter [6].
- Push the combustion air hose [5] onto the elbow and secure with hose clip [4].
- In cascade arrangements, ensure that the boiler is equipped with a separate combustion air pipe.

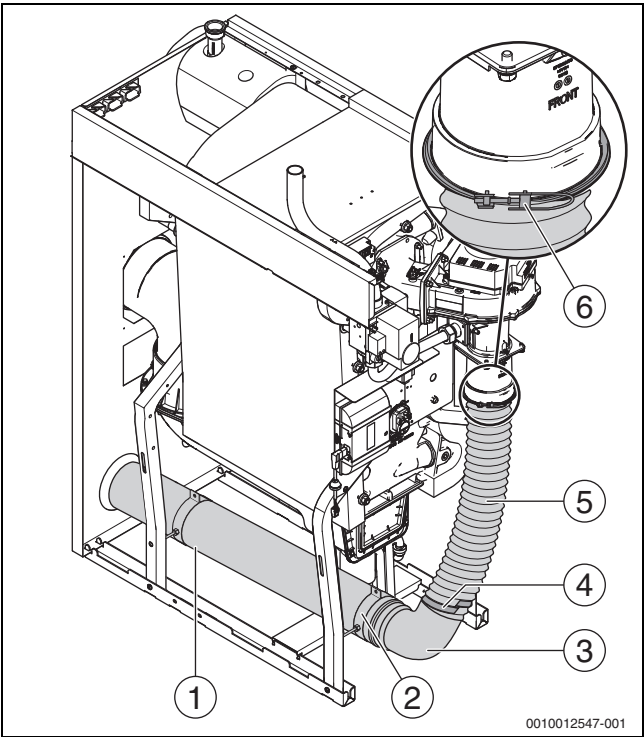


Fig. 14 Accessory set for room sealed operation

- [1] Combustion air pipe
- [2] Pipe clip (2x)
- [3] Elbow
- [4] Pipe clip
- [5] Combustion air hose
- [6] Adapter with hinged pipe clip

**5.8 Hydraulic connection**

**NOTICE:**

**Risk of damage to system due to leaking connections!**

- Install all lines free from stress to the boiler connections.
- Use new gasket if screw fittings need to be undone.
- Only tighten flanges in the heating flow and return after the connections have been made.
- Before installing the pipe connections, check connections and gaskets on the boiler for possible damage.

Boiler flow (VK)/Boiler return (RK)	
Boiler size [kW]	Port
75-100	2" female thread (DN50)
150	PN6 standard flange EN1092 (DN50)
200-300	PN6 standard flange EN1092 (DN65)

Table 7 Water connection dimensions

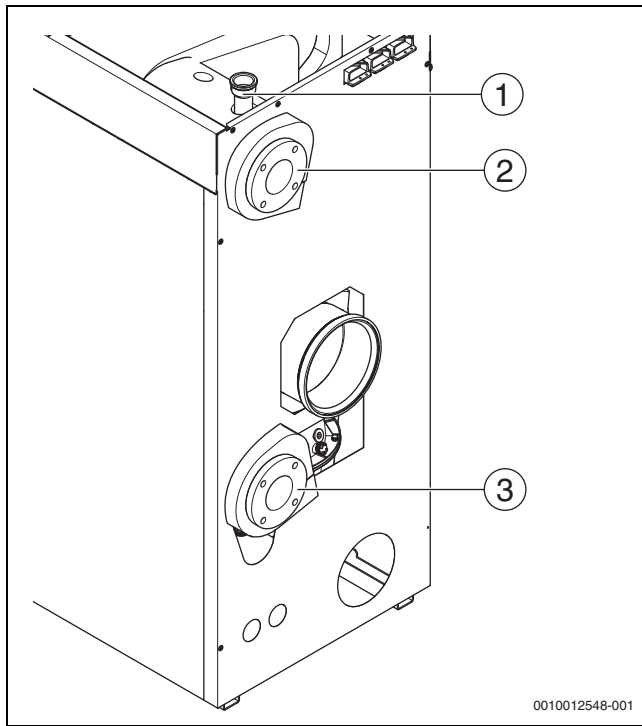


Fig. 15 Hydraulic connections at the boiler (the boiler shown has a flanged connection, right-hand version)

- [1] Boiler safety connection
- [2] Boiler flow
- [3] Boiler return



Position and dimensions of connections → Chapter 2.9, page 8.

### 5.8.1 Connecting the flow

With flanged connection (→Tab. 7, page 7):

- ▶ Insert a gasket between the flange on the boiler and the flange on the flow pipe.
- ▶ Secure the flange connection with 4 bolts, washers and nuts.

### 5.8.2 Connecting the return



We recommend the on-site installation a system filter (accessory) in the return to prevent contamination of the boiler by the water.

With flanged connection (→Tab. 7, page 18):

- ▶ Insert a gasket between the flange on the boiler and the flange on the return.
- ▶ Secure the flange connection with 4 bolts, washers and nuts.

### Connecting the expansion vessel

To safeguard individual boilers, an accessory set (expansion vessel) can be connected to the drain connection, in accordance with BS EN 12828.

- ▶ Observe the accessories installation instructions.
- ▶ Remove the drain valve mounted on the return (→Fig. 7)
- ▶ Mount accessory set with gasket.

- ▶ Install expansion vessel to maintain the system pressure in the return on site on the intake side of the pump.

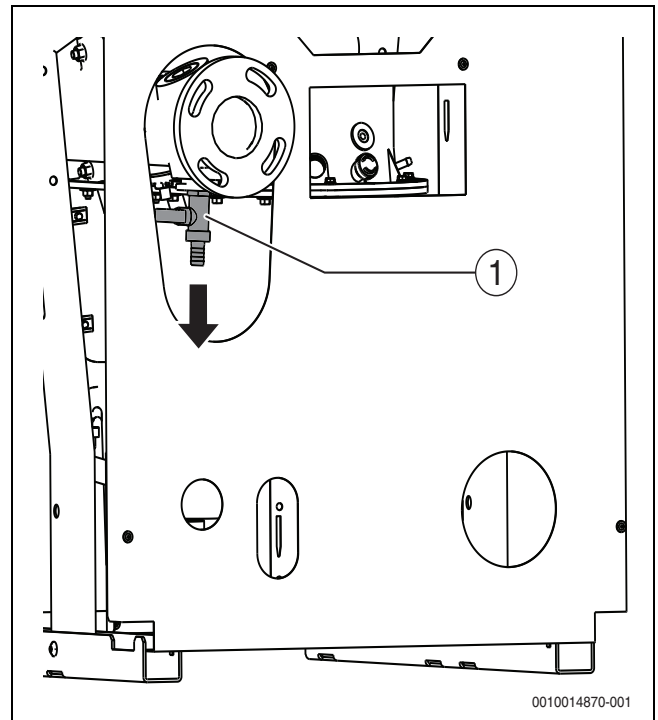


Fig. 16 Disassembly of the drain valve (the boiler shown has a flanged connection, right-hand version)

- [1] Drain valve

### Connecting the drain & fill valve on site

- ▶ Observe the accessories installation instructions.
- ▶ Topping up of the fill water must be done via a WRAS approved method.
- ▶ Install drain valve in the return outside the boiler itself.

### 5.8.3 Installing the safety assembly on the flow (on site)

#### NOTICE:

#### System damage through incorrect installation!

- ▶ Fit the safety valve and automatic air vent valve or safety assembly to the safety connection on the flow.



The safety assembly (accessory) comprises an automatic air vent **for venting of the boiler** (not the heating system) and a pressure gauge. As an option, it may be converted for use with a safety valve (additional accessory). If these accessories are not used, a pressure relief valve, pressure gauge and automatic air vent valve must generally be installed in the flow, before of the first shut-off device.



Subject to operating pressure, different safety valves are required.

- ▶ Observe the accessories installation instructions.

### Connection of safety set, 3 bar

- ▶ Seal the pressure relief valve at the threaded connection of the heating flow using suitable sealants or supplied gaskets (→Fig. 17).
- ▶ Fit the discharge pipe to the respective pressure relief valve according to local regulations.

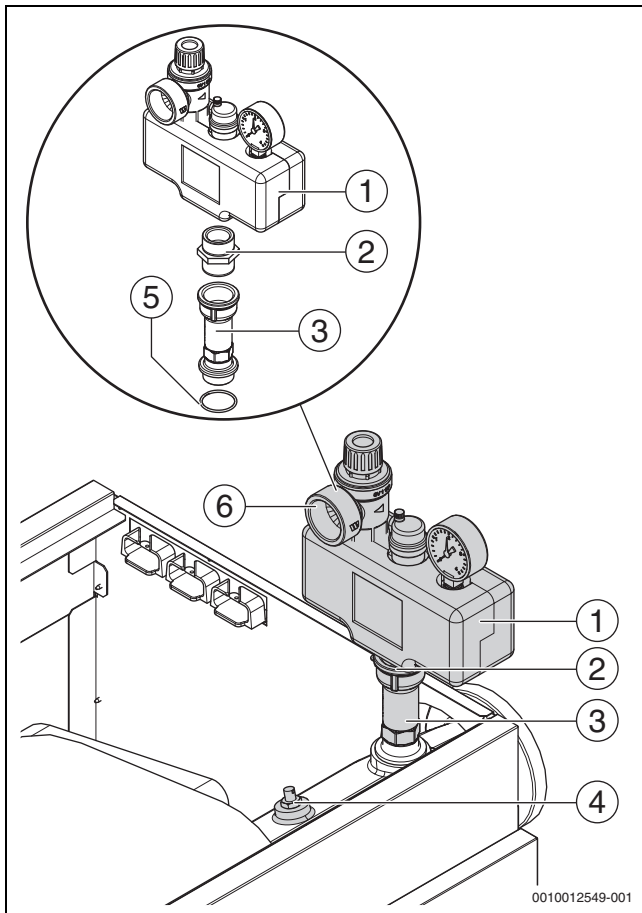


Fig. 17 Safety set, 3 bar (illustration shows right-hand boiler setup)

- [1] Manifold with taps and thermal insulation
- [2] Twin nipple
- [3] Extension
- [4] Flow temperature sensor
- [5] O ring
- [6] Discharge pipe connection

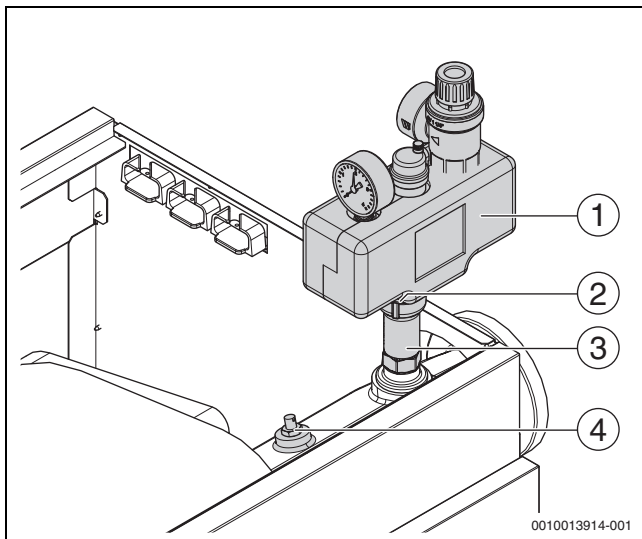


Fig. 18 Safety set, 3 bar (illustration shows alternative installation setup)

- [1] Manifold with taps and thermal insulation
- [2] Twin nipple
- [3] Extension
- [4] Flow temperature sensor

### Connection of safety set, 4-6 bar

- Seal the pressure relief valve at the threaded connection of the heating flow using suitable sealants or supplied gaskets (→ Fig. 19).
- Fit the discharge pipe to the respective pressure relief valve according to local regulations.

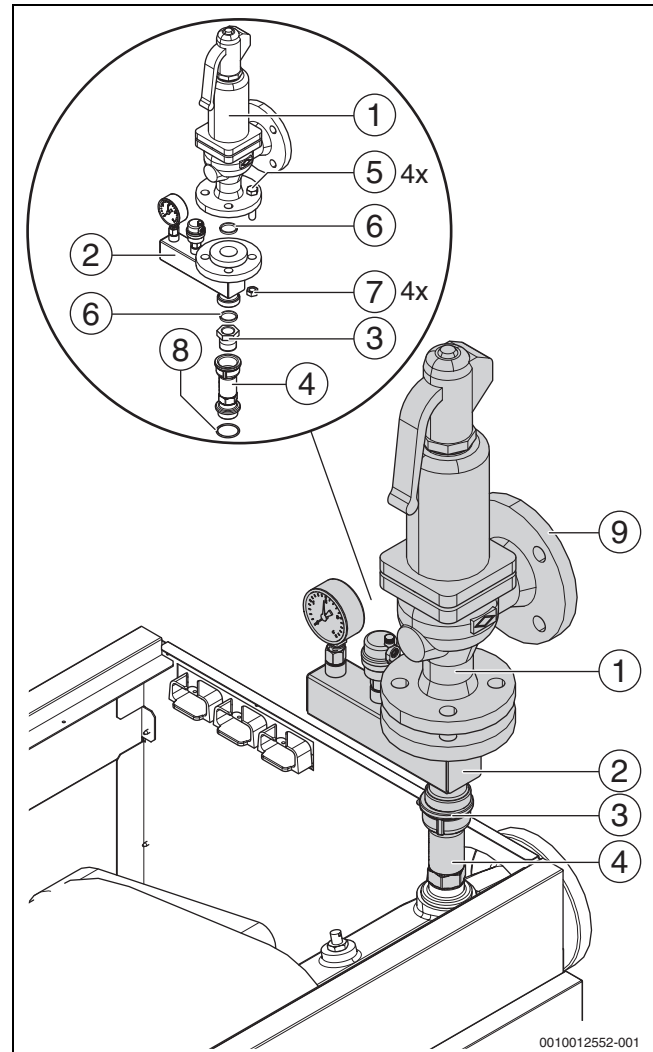


Fig. 19 Safety set, 4 to 6 bar (illustration shows right-hand boiler setup)

- [1] Pressure relief valve 4 ... 6 bar
- [2] Manifold with taps and flange
- [3] fitting
- [4] Extension
- [5] Hexagon bolts
- [6] Flat gasket
- [7] Hexagon nuts
- [8] O ring
- [9] Discharge pipe connection

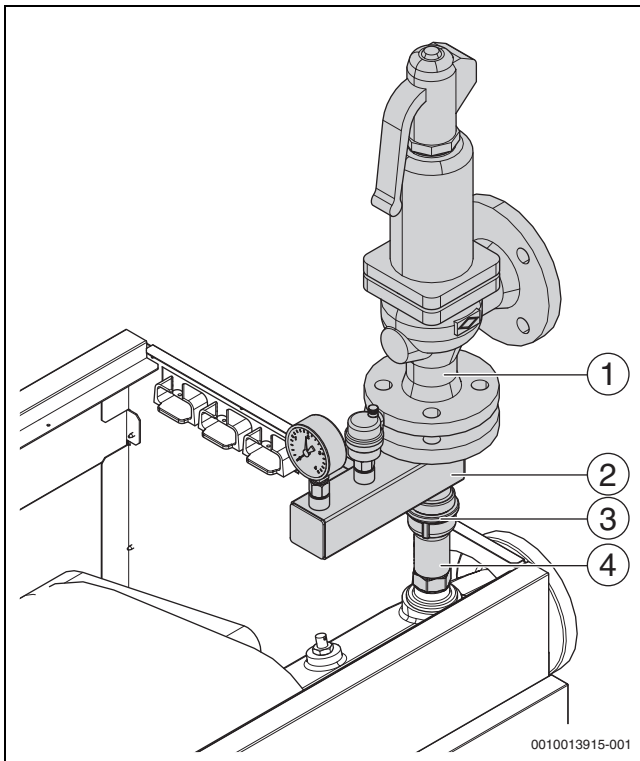


Fig. 20 Safety set, 4 to 6 bar (illustration shows alternative installation setup)

- [1] Pressure relief valve 4 ... 6 bar
- [2] Manifold with taps and flange
- [3] fitting
- [4] Extension

#### 5.8.4 Installing a DHW cylinder

Make the connection of a DHW cylinder to the flow and return on site. The required external cylinder primary pump can be controlled by the control unit (→ Technical documentation of control unit).

### 5.9 Filling the heating system and checking for leaks

Before commissioning, check the heating system for leaks to prevent problems during operation.

To ensure efficient ventilation:

- Open all heating circuits and thermostatic valves prior to filling the system.
- Open non-return valves at the pumps.
- Put all non-return valves at the venting position.



#### CAUTION:

#### Health risk through contaminated drinking water!

- Observe all country-specific regulations and standards regarding the prevention of drinking water contamination.
- In Europe, observe standard EN 1717. In the UK observe the Water Supply (water fittings) Regulations 1999.

#### NOTICE:

#### Risk of property damage due to unsuitable heating and fill water!

Unsuitable heating and fill water can cause corrosion and scale formation and/or shorten the service life of the heating system. Warranty claims for the heat sources will only be considered provided the water quality requirements have been met and the operator's log has been maintained.

- Observe the details regarding water quality in the operator's log.
- If necessary, treat heating and fill water.
- Provide system separation by means of heat exchangers when using oxygen-permeable pipework (e.g. underfloor heating system).

#### NOTICE:

#### NOTICE - material damage due to positive pressure during leak testing!

Pressure, control and safety equipment may be damaged through excessive pressure.

- After filling the heating system, pressure test to the excess pressure of the pressure relief valve.
- Prior to filling the heating system, carefully read and observe the enclosed operator's log on water quality.
- Open safety caps on all automatic air vent valves.
- Open the fill and drain valve.
- Slowly fill the heating system using a filling facility. During the filling observe the pressure gauge.

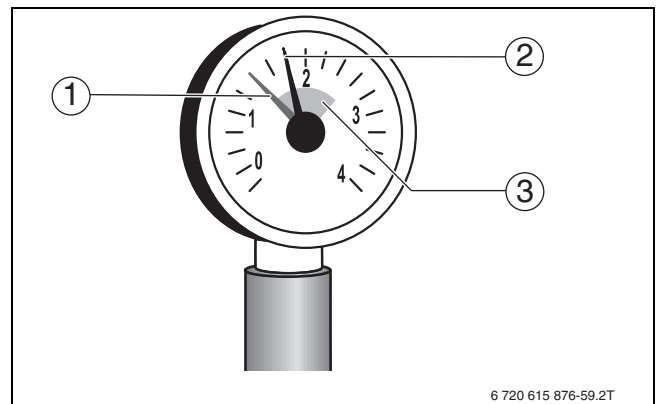


Fig. 21 Pressure gauge for sealed systems

- [1] Red needle
- [2] Pressure gauge needle
- [3] Green marking

- Close the water tap and the DFV once the required test pressure has been reached.
- Check the connections and pipework for leaks.
- Vent the heating system via the radiator air vent valves.
- Top up with water if the pressure drops as a result of venting the system.
- Remove the hose from the DFV valve.
- Carry out a tightness test in accordance with locally applicable regulations.
- Once the heating system has been tested and no leaks have been found, set the correct operating pressure.
- Put all non-return valves at the operating position.
- Mark the minimum and maximum pressure on the pressure gauge when the system is cold.

## 5.10 Providing the fuel supply



### DANGER:

#### Danger to life through explosion of flammable gases!

- ▶ Work on components in contact with gas must only be carried out by certified gas fitters.
  - ▶ Observe all local regulations relating to the gas connection.
  - ▶ Seal in the gas connections with an approved sealant.
- 
- ▶ Install gas isolator [2] in the gas line (GAS). When doing so, secure the gas line inside the boiler to prevent it from becoming twisted.



Subject to local regulations, install thermally activated shut-off device (TAE). A gas filter and expansion joint must also be installed in the gas line according to the local regulations and guidelines.

- ▶ Connect expansion joint [1] (recommended) to the gas isolator.
- ▶ Connect the gas line to the gas connection or expansion joint free of stress.
- ▶ Secure the gas line with pipe clips so that the gas connection is free from any stresses.
- ▶ Close gas isolator.



Gas filters must always be installed to prevent ingress of dirt into the gas line of the floor standing boiler.

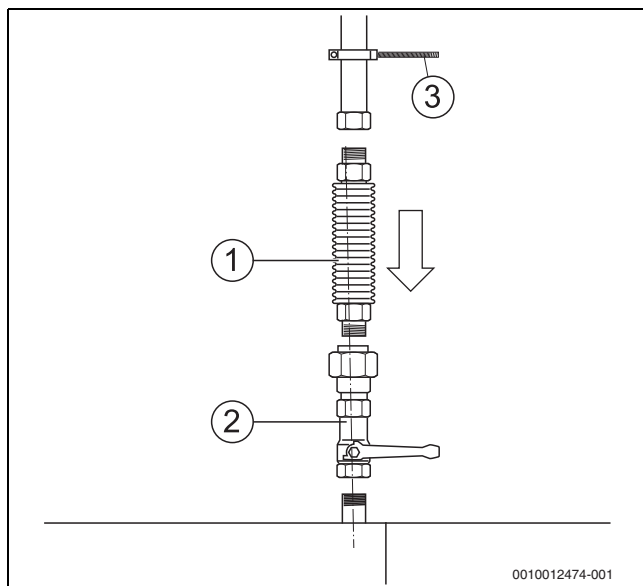


Fig. 22 Gas connection

- [1] Expansion joint
- [2] Gas isolator (here with thermally activated shut-off device)
- [3] Pipe clip



For higher gas supply pressures than shown in table 10, (→ page 28), Bosch offers additional gas pressure governors as accessories.

## 5.11 Fitting the boiler cover

- ▶ Fit front boiler cover [1] to the frame with 2 screws.
- ▶ Mount the control unit and establish the electrical connection (→ Chapter 6, page 23).
- ▶ Fit rear boiler cover [2] to the frame with 4 screws.
- ▶ If the flue is routed upwards, mount the cover panel [3] of the rear boiler cover on the back panel to close the flue pipe opening.

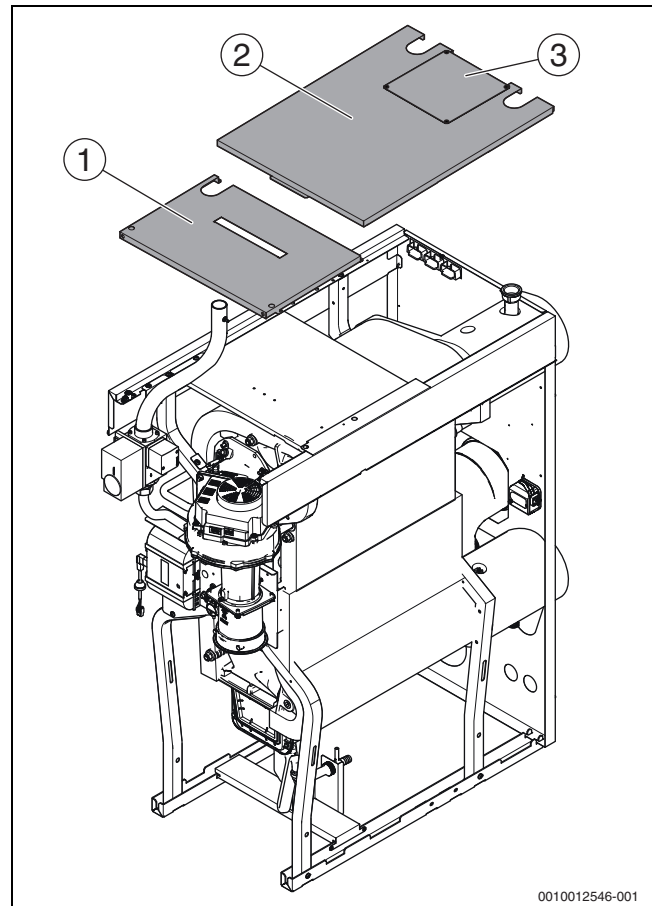


Fig. 23 Front and rear boiler cover (with boiler rating 150 - 300 kW)

- [1] Front boiler cover
- [2] Rear boiler cover
- [3] Cover panel for flue pipe opening



## 6 Electrical connection



### WARNING:

#### Risk to life from electric shock!

Touching live electrical parts can cause an electric shock.

- ▶ Before working on electrical parts, disconnect all phases of the power supply (fuse/circuit breaker) and lock the isolator switch to prevent unintentional reconnection.



### WARNING:

#### Danger to life from electric current!

Incorrectly connected electrical cables can result in faulty operation with potentially dangerous consequences.

- ▶ When making the electrical connections, refer to the connection diagrams for the individual devices and components.
- ▶ When performing maintenance, label all power cables before disconnecting them.

### NOTICE:

#### Material damage if the maximum current consumption is exceeded!

Short-term high (start-up) currents can damage electrical components.

- ▶ When connecting external components to the control unit, make sure that the sum of the individual currents consumed by these components does not exceed the maximum current consumption (→ data plate).



Note the following when making electrical connections:

- ▶ Electrical work on heating systems must only be carried out by qualified electricians. If you are not suitably qualified, ask a licensed heating contractor/electrician to establish the electrical connection.
- ▶ Make sure that all boiler components are earthed via the control unit and burner control unit (earthing is a constituent part of the control unit used).
- ▶ Observe all local regulations!

### 6.1 Installing the control unit

The boiler is supplied with the control unit that was assigned when placing the order. The boiler can only function fully with an installed control unit.

#### The control unit must be mounted at the designated position on the boiler.

- ▶ To install the control unit, observe the corresponding technical documentation.
- ▶ When making the electrical connections, refer to the connection diagrams for the individual devices and components (→ Chapter 17.4, page 59).

### 6.2 Establishing the power supply connection and installing the cables

Establish a permanent connection to the power supply in accordance with the locally applicable regulations.

- ▶ To connect the cables, observe the relevant technical documentation of the installed control unit.



### WARNING:

#### Danger to life from electric current!

Incorrectly connected electrical cables can result in faulty operation with potentially dangerous consequences.

- ▶ When making the electrical connections, refer to the connection diagrams for the individual devices and components.
- ▶ When performing maintenance, label all power cables before disconnecting them.



### DANGER:

#### Risk of material damage due to hot boiler components!

Hot boiler components can damage electrical cables in close proximity.

- ▶ Make sure that all cables are routed through the conduits provided.

### NOTICE:

#### Material damage due to induced overvoltage!

Incorrectly installed cables can lead to induced overvoltages which can cause the control unit to malfunction or be damaged.

- ▶ Route 230 V cables and extra-low voltage cables separately.
- ▶ Route all cables that run towards the back through the cable conduit.
- ▶ Route all cables through the cable conduits to the control unit and connect them as shown in the connection diagram.

### NOTICE:

#### Fault due to power failure!

- ▶ When connecting external components to the control unit, ensure that sum of currents consumed by these components does not exceed the maximum current consumption of the installed control unit.

- ▶ Secure all cables with cable clips (control unit scope of delivery).

#### Inserting function modules

For information on the function modules, refer to the relevant technical documentation.

- ▶ Observe technical documentation of the control unit and the function modules.

## 7 Commissioning

This chapter describes commissioning using the standard control unit module.

- ▶ Before commissioning the boiler, make sure that the cover hood of the control unit is installed.
- ▶ After completing the work described below, complete the commissioning report (→ Chapter 17.6, page 63).

### NOTICE:

#### Material damage through excessive dust and dirt contamination in open flue mode!

Heavy dust and dirt contamination can occur, for example, due to building work at the installation location.

- ▶ During building work, operate the boiler in balanced flue mode.
- ▶ Make sure that the available residual pressure differential is sufficient for open flue mode.



If room sealed operation is not possible, use the air filter set which is available as an accessory.

### NOTICE:

#### Risk of boiler damage through contaminated combustion air!

- ▶ Never use chlorinated cleaning agents or halogenated hydrocarbons (as contained in spray cans, solvents, cleaning agents, paints and adhesives, for example).
- ▶ Never store or use such substances at the installation location.
- ▶ Burners contaminated during building work must be cleaned before commissioning.
- ▶ Inspect flue and combustion air pipe (with room sealed operation) and combustion air supply and ventilation openings (→ Chapter 5.6, page 17).

### 7.1 Checking the operating pressure



This boiler cannot be operated with open vented heating systems.

- ▶ Prior to commissioning, check the operating pressure of the heating system on the water side and adjust if required.

### NOTICE:

#### Risk of property damage due to unsuitable heating and fill water!

Unsuitable heating and fill water can cause corrosion and scale formation and/or shorten the service life of the heating system. Warranty claims for the heat sources will only be considered provided the water quality requirements have been met and the operator's log has been maintained.

- ▶ Observe the details regarding water quality in the operator's log.
- ▶ If necessary, treat heating and fill water.
- ▶ Provide system separation by means of heat exchangers when using oxygen-permeable pipework (e.g. underfloor heating system).
- ▶ Set the red needle [1] of the pressure gauge to the required operating pressure of at least 1 bar.

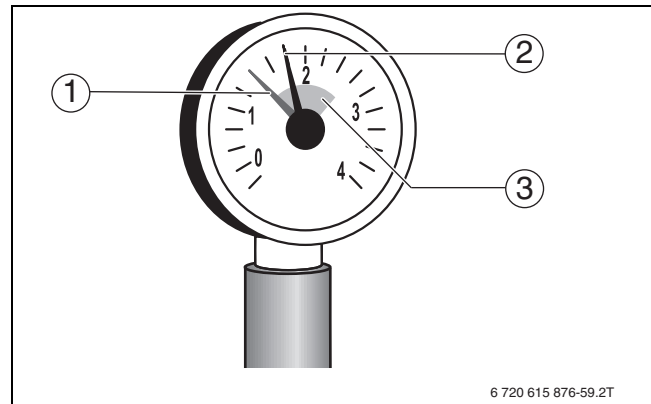


Fig. 24 Pressure gauge for sealed systems

- [1] Red needle
- [2] Pressure gauge needle
- [3] Green marking



### CAUTION:

#### Health risk through contaminated drinking water!

- ▶ Observe all country-specific regulations and standards regarding the prevention of drinking water contamination.
- ▶ In Europe, observe standard EN 1717. In the UK observe the Water Supply (water fittings) Regulations 1999.

- ▶ Top up heating water or drain off water via an approved WRAS method, until the required operating pressure has been reached.
- ▶ During filling, vent the heating system via the radiator bleed valves.

### 7.2 Checking for leaks

Prior to commissioning, check all new line sections on the gas side for external gas tightness.



### DANGER:

#### Risk of explosion!

If there are leaks in the gas lines and gas connections, there is a danger of explosion.

- ▶ Carry out an appropriate leak test with a foaming agent.

### NOTICE:

#### Risk of material damage due to a short circuit!

Liquid on live electrical parts can result in a short circuit.

- ▶ Prior to carrying out a leak test: cover electrical parts.
- ▶ Never apply leak detection agent to cable conduits, plugs or electrical cables/leads.
- ▶ Ensure that no leak detection agent drips onto electrical parts.
- ▶ To prevent corrosion, carefully wipe off the leak detection agent afterwards.

- ▶ Check the new pipe section, including the joint at the air/gas ratio control valve, for external tightness. The test pressure at the air/gas ratio control valve inlet must be no higher than 150 mbar.



If a leak is discovered during this test, all connections must be checked using a foaming agent. The agent must be approved for gas tightness testing.

- ▶ Confirm in the commissioning report that the tightness test has been carried out.

### 7.3 Recording gas parameters

Ask your gas supplier to advise you of the gas parameters (Wobbe index and calorific value) and record these in the commissioning report (→ Chapter 17.6, page 63).



If the boiler is to be replaced in existing systems:

- ▶ Consult gas suppliers to ensure that the nominal gas pressure according to table 10, page 28 is adhered to.

### 7.4 Checking device equipment

The burner is supplied ready for operation and is adapted to the locally available gas type (natural gas E/LL) using the supplied gas flow restrictors.

- ▶ Check with the relevant gas supplier which gas group or sub-group (gas type) is supplied.
- ▶ Determine, based on the gas parameters requested from the gas supplier and the information in the table 8 and 9, which gas flow restrictor is required.
- ▶ Check whether the required gas flow restrictor is installed.
- ▶ If required, replace the gas flow restrictor during commissioning (→Chapter 7.5).

### 7.5 Converting the boiler to a different gas type

#### 7.5.1 Converting to another type of natural gas

The boiler is converted to a different gas type by replacing the installed gas flow restrictor. The air/gas ratio does not need to be adjusted, the air/gas ratio control valve is adjusted and sealed.

- ▶ Switch off the heating system via the ON/OFF switch at the control unit (→ Technical documentation for control unit).
- ▶ Close gas isolator.
- ▶ Remove upper boiler front panel and left side panel (→Chapter 11.1, page 31).

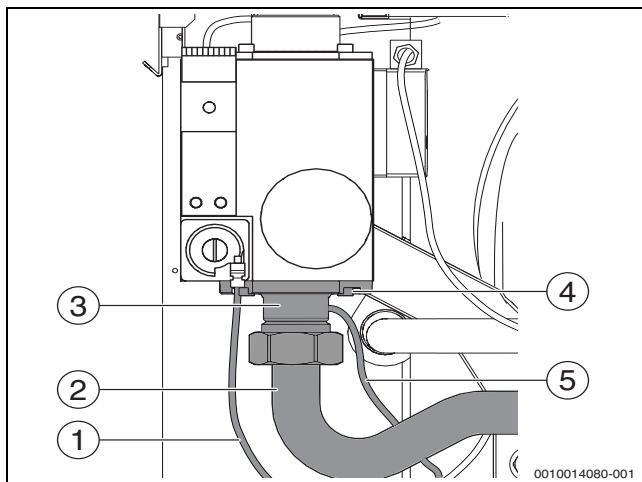


Fig. 25 Removing the gas flow restrictor

- [1] Compensation line
- [2] Gas pipe
- [3] Connection flange
- [4] Allen screws (4x)
- [5] Test line for gas outlet pressure

- ▶ Remove the four Allen screws [4] at the connection flange [3] and carefully move the flange away from the valve. In doing so, avoid damaging and/or buckling the gas pipe [2].



If the connection is subject to mechanical stress, the gas pipe can be removed to make disassembly easier.

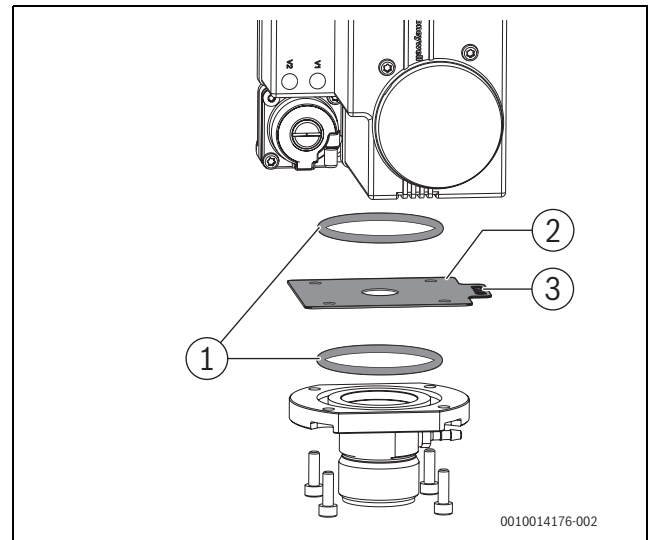


Fig. 26 Replacing the gas flow restrictor

- [1] O-ring (2x)
- [2] Gas flow restrictor
- [3] Labelling

- ▶ Remove the gas flow restrictor [2] and replace with the corresponding gas flow restrictor for the supplied gas type (→Tab. 8).
- ▶ Check whether the required flow restrictor is used, compare the diameter indicated on the flow restrictor with the corresponding value in Tab. 8.
- ▶ Check O-rings [1] for damage and replace if necessary.
- ▶ Place the O-rings in the grooves provided. Make sure they are seated correctly.
- ▶ Insert the gas flow restrictor with the label [3] facing upwards and tab pointing to the right.
- ▶ Mount the connection flange and gas flow restrictor including all O-rings with the 4 Allen screws (for torques and replacement interval → Chapter 11.11, page 41).
- ▶ Make sure the test cables for compensation [1] and gas outlet pressure [5] are correctly seated (→Fig. 25 and 17.4.3, page 61).
- ▶ Carry out all commissioning work and complete the commissioning report (→Chapter 17.6, page 63).
- ▶ Affix the label provided for the supplied gas type, according to the gas flow restrictor, over the corresponding area on the existing boiler data plate (→Fig. 27, [1]) (→Fig. 27, [2]).
- ▶ Store the restrictor that has been taken out in a safe place.

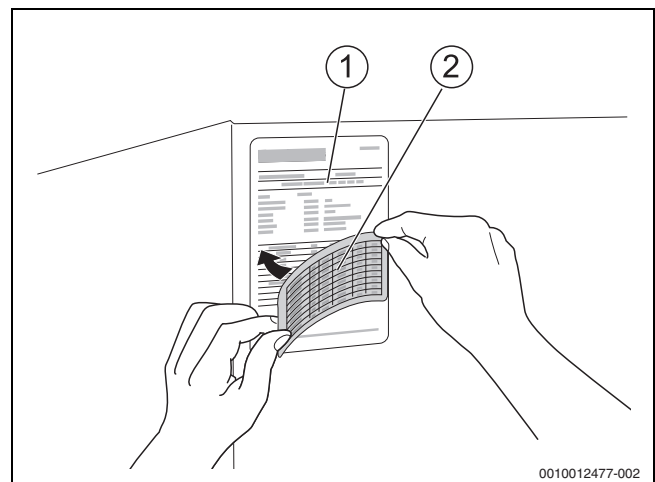


Fig. 27 Updating the data plate

- [1] Boiler data plate
- [2] Label

Gas type		H <sup>1)</sup> , E, E <sub>s</sub> <sup>2)</sup> as delivered <sup>4)</sup>	LL, L <sup>3)</sup> , E <sub>i</sub> <sup>2)</sup> following gas type conversion	K following gas type conversion
Nominal value of upper Wobbe index W <sub>s</sub> at 1013 mbar	0 °C	14.9 kWh/ m <sup>3</sup>	12.2 kWh/ m <sup>3</sup>	12.5 kWh/ m <sup>3</sup>
	15 °C	14.1 kWh/ m <sup>3</sup>	11.5 kWh/ m <sup>3</sup>	11.9 kWh/ m <sup>3</sup>
In limit gas range according to EN437 of upper Wobbe index W <sub>s</sub> at 1013 mbar	0 °C	12.0 - 16.1 kWh/ m <sup>3</sup>	10.0 - 13.1 kWh/ m <sup>3</sup>	11.0 - 13.4 kWh/ m <sup>3</sup>
	15 °C	11.4 - 15.2 kWh/ m <sup>3</sup>	9.5 - 12.4 kWh/ m <sup>3</sup>	10.5 - 12.7 kWh/ m <sup>3</sup>
Required gas flow restrictor identification according to boiler rating	75 kW	Ø 8.70	Ø 9.90	Ø 9.80
	100 kW	Ø 8.70	Ø 9.90	Ø 9.80
	150 kW	Ø 12.30	Ø 21.00	Ø 20.00
	200 kW	Ø 14.40	Ø 19.00	Ø 18.00
	250 kW	Ø 16.30	Ø 25.60	Ø 25.40
	300 kW	Ø 17.30	Ø 26.00	Ø 25.20

- 1) Natural gas group H in accordance with DVGW Code of Practice G 260 falls within natural gas group E in accordance with DIN EN 437  
 2) E<sub>s</sub> and E<sub>i</sub> are sub-groups of gas group E  
 3) Natural gas group L in accordance with DVGW Code of Practice G 260 falls within natural gas group LL in accordance with DIN EN 437  
 4) According to part number

Table 8 Gas characteristics and required gas flow restrictors

### 7.5.2 LPG conversion

#### With boiler size 75 kW and 100 kW:

When operating these two sizes with LPG, an additional pressure regulator must be installed in the gas inlet.  
 The "LPG" conversion set contains the pressure regulator and adjustment instructions.

#### For boiler sizes 150 kW to 300 kW:

When operating these two sizes with LPG, the cleaning cover of the condensation catch pan must be replaced (→ Chapter 11.8.2, page 38).  
 To ensure quiet burner operation, the cover is equipped with a damping component.  
 The "LPG" conversion set contains the cover and gas flow restrictor as well as the adjustment instructions.  
 An additional pressure regulator is not required with these sizes.

- Perform all work as described in Chapter 7.5.1 for all sizes (conversion to a different gas type by replacing the installed gas flow restrictor).

Gas type		P (Propane) following gas type conversion
Nominal value of upper Wobbe index W <sub>s</sub> at 1013 mbar	0 °C	22.5 kWh/ m <sup>3</sup>
	15 °C	21.3 kWh/ m <sup>3</sup>
In limit gas range according to EN437 of upper Wobbe index W <sub>s</sub> at 1013 mbar	0 °C	21.4 - 22.5 kWh/ m <sup>3</sup>
	15 °C	20.2 - 21.3 kWh/ m <sup>3</sup>
Required gas flow restrictor identification according to boiler rating	75 kW	Ø 6.80
	100 kW	Ø 6.80
	150 kW	Ø 8.50
	200 kW	Ø 10.30
	250 kW	Ø 11.30
	300 kW	Ø 12.10

Table 9 Gas characteristics and required gas flow restrictors (LPG)

### 7.6 Purging the gas line

- Release the locking screw of the test nipple for gas supply pressure and purge by turning it through two revolutions and attach the hose.
- Slowly open the gas isolator.
- Flare off escaping gas via an approved method. Remove the hose when no more air is expelled, and tighten the locking screw.
- Close gas isolator.

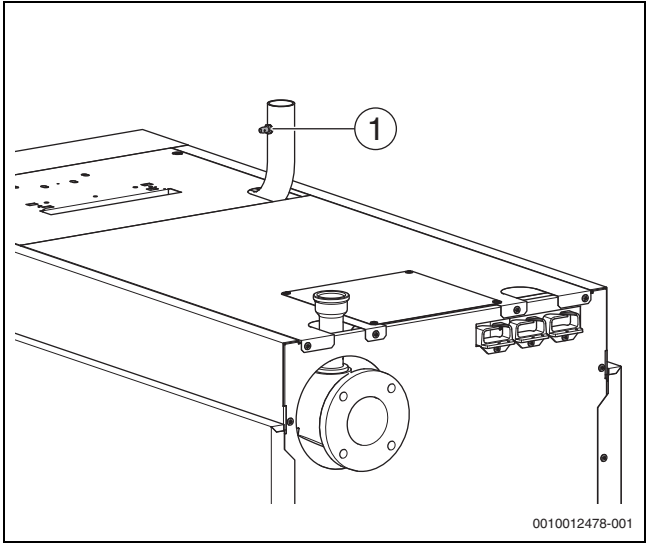


Fig. 28 Purging the gas line

[1] Test nipple for measuring the gas supply pressure and for purging

## 7.7 Supply air and flue gas connection

### 7.7.1 Check supply and extract ventilation and flue gas connection

- ▶ Check whether the supply and extract ventilation comply with locally applicable regulations. Have any faults rectified immediately.



#### **DANGER:**

#### **Danger to life due to poisoning!**

Insufficient ventilation can lead to dangerous flue gas leaks.

- ▶ Never block supply and extract air apertures or reduce their size.
- ▶ The boiler must not be operated, unless you immediately remedy the fault.
- ▶ Inform the system user in writing of the problem and associated danger.

- ▶ Check whether the flue gas connection complies with the applicable regulations (→ Chapter 5.6, page 17).
- ▶ Have any faults rectified immediately.

### 7.7.2 Checking the flue gas damper (scope of delivery of positive pressure cascade)

When using motorised flue gas dampers the closing function must be checked. The damper is closed in the electrically de-energised state.

Check function of flue gas damper:

- ▶ Open flue gas damper manually via the setting pin (from position 1 to position 2).  
The function exists if the damper closes automatically (pin in position 1).

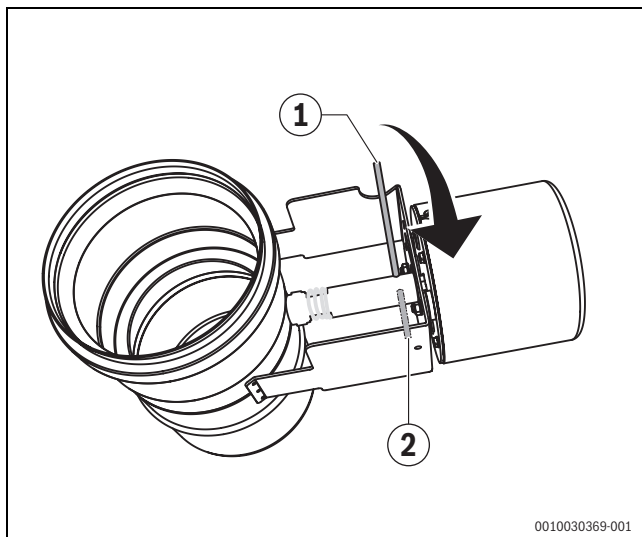


Fig. 29 Setting pin on the butterfly valve

- [1] Position 1: damper closed
- [2] Position 2: damper open

## 7.8 Making the heating system operational

- ▶ Open the fuel supply at the main shut-off valve and upstream of the air/gas ratio control valve.
- ▶ Switch on the heating system emergency stop switch (if installed) and/or the corresponding domestic fuse/circuit breaker.

## 7.9 Commissioning the control unit and burner

### 7.9.1 Switching on the boiler at the control unit

- ▶ To commission the control unit, observe the technical documentation for the specific control unit.



To avoid frequent cycling of the burner and to ensure efficient operation, the heating curve should generally be set as low as possible.

### 7.9.2 Carrying out a flue gas test

- ▶ To set up and perform the flue gas test, observe the corresponding technical documentation for the control unit.

## 7.10 Measuring the gas supply pressure and static pressure

- ▶ Release the locking screw of the gas supply pressure and ventilation test nipple (→ Fig. 28, [1], page 26) by turning it through 2 revolutions.
- ▶ Push the test hose of the pressure gauge (measurement precision less than 0.1 mbar) onto the pressure test nipple.
- ▶ With the burner operational (full load), check the gas supply pressure and record the value in the commissioning report (→ Chapter 17.6, page 63).

When operating with **LPG**, adjust the additional pressure regulator **with the sizes 75 and 100 kW** in full-load operation to an outlet pressure of 30 mbar. Then measure and make a note of the supply pressures upstream and downstream of the pressure regulator.

If the gas supply pressure falls outside the values in tab. 10 :

- ▶ Shut down the floor standing boiler and notify the gas supplier. Commissioning is not permitted.

To check the gas pressure regulator or the gas static pressure in the gas installation:

- ▶ Shut down the burner from full load.
- ▶ Wait 10-20 seconds and then measure the resulting gas supply pressure/static pressure at the test nipple for the gas supply pressure/static pressure.

The gas static pressure must not exceed 50 mbar with natural gas and 70 mbar with LPG.

If exceeded:

- Inform the gas supplier that the gas pressure governor needs to be replaced.
- Do not perform commissioning in accordance with the manufacturer's instructions.
- If the system is currently in operation, take the floor standing boiler out of operation.
- Remove the test hose.
- Carefully tighten the locking screw on the test nipple for gas supply pressure.

Country	Gas group (reference gas)	Supply pressure <sup>1)2)</sup> [mbar]		
		Min.	Rated	Max.
AT, BG, BY, CH, CZ, DK, EE, ES, GB, GR, HR, IE, IT, LT, LV, MK, NO, PT, RO, RS, RU, SI, SK, TR, UA	Natural gas H (G20)	17	20	25
HU	Natural gas H (G20)	18	25	33
DE <sup>3)</sup> , LU, NL, PL	Natural gas E (G20)	17	20	25
FR, BE	Sub-group Es natural gas E (G20)	17	20	25
FR, BE	Sub-group Ei natural gas E (G25)	20	25	30
NL <sup>4)</sup>	Natural gas K (G25.3)	20	25	30
DE <sup>3)</sup>	Natural gas LL (G25)	18	20	25
PL	Natural gas Lw (G27)	16	20	23
HU	Natural gas S (G25.1)	18	25	33
DE, AT, CH, LU, NL, SK	LPG 3P (G31)	42.5	50	57.5
BE, BG, CZ, DK, EE, ES, FR, GB, GR, IE, IT, LT, LV, PL, SI, PT	LPG 3P (G31)	25	37	45
RO, HU, HR	LPG 3P (G31)	25	30	35

- 1) The gas supplier must ensure that the pressure conforms to country-specific or local regulations. The conditions mentioned above must also be observed. If the gas supply pressure is outside the specified range, commissioning is prohibited.
- 2) Supply pressure for **LPG**: the specified pressures refer to the supply pressures upstream of the additional pressure regulator.
- 3) Natural gas group "H in accordance with DVGW Code of Practice G 260" falls within natural gas group "E in accordance with DIN EN 437" Natural gas group "L in accordance with DVGW Code of Practice G 260" falls within natural gas group "LL in accordance with DIN EN 437".
- 4) Natural gas group K in accordance with "NTA 8837-2012" is within the 2nd gas family according to DIN EN 437.

Table 10 Gas groups and supply pressures according to EN 437



The specified supply pressure must be ensured across the boiler's entire modulation range. If necessary, an additional pressure regulator must be provided. In the case of multi-boiler or multi-consumer systems, the supply pressure range for single boilers must be ensured in each operating condition of the multi-boiler or multi-consumer system. If necessary, supply each boiler or consumer via a separate pressure regulator.



For higher supply pressures than shown in tab. 10 Bosch offers additional gas pressure governors as accessories.

## 7.11 Checking the gas/air ratio

- Check the CO<sub>2</sub> setting for full and partial burner loads.

The following applies for **Denmark**:

The burner setting in Denmark is made via the O<sub>2</sub> content of the flue gas (→ Chapter 17.5, page 62).

### 7.11.1 Check CO<sub>2</sub> setting at full load

- Read off the load at the control unit (→ technical documentation of the control unit).
- Wait until at least 70 % of the load has been reached.
- Insert the test sensor through the measurement port (→ Fig. 30, page 29) in the flue gas collector into the core stream and check the CO<sub>2</sub> value.
- If the CO<sub>2</sub> values in the natural gas are less than 8.2 % or above 10.5 %, or the CO values are higher than 100 ppm (lf)<sup>1)</sup> Get in touch with Service.

#### NOTICE:

- When operating with LPG, observe the setting instructions enclosed with the "LPG" conversion set!

- Enter the values in the commissioning report (→ Chapter 17.6, page 63).

Only for design type C63:

- If the supply air infeed is designed as an annular gap around the flue, check the CO<sub>2</sub> value in the combustion air at the on-site measurement port.  
Values above 0 % indicate faults or leaks in the flue gas routing.
- Identify and eliminate the fault.

### 7.11.2 Checking the CO<sub>2</sub> setting under partial load

- Adjust the flue gas test function via the control unit (→ technical documentation of control unit)
- Read off load at the control unit or via the Service key.
- Wait until the following load has been reached:
  - 19 % with boiler size [kW]: 250; 300
  - 20 % with boiler size [kW]: 100; 150; 200
  - 28 % with boiler rating [kW]: 75
- Insert the test sensor through the measurement port (→ Fig. 30, page 29) in the flue pipe into the core stream and check the CO<sub>2</sub> value.
- If the CO<sub>2</sub> values in the natural gas are less than 8.2 % or above 10.5 %, or the CO values are higher than 100 ppm (lf), contact Service.

1) (lf) = air-free



**NOTICE:**

- When operating with LPG, observe the setting instructions enclosed with the "LPG" conversion set!

- Check the CO<sub>2</sub> value again and enter in the commissioning report (→ Chapter 17.6, page 63).

### 7.12 Concluding the flue gas test

- To conclude and change to the operating mode, observe the corresponding technical documentation for the control unit.

### 7.13 Set the standard display at the control unit

- To set the standard display, observe the technical documentation of the control unit.

### 7.14 Recording measurements

- Carry out the following measurements at the test point in the connector (→ Fig. 30 and 31) and enter in the commissioning report (→ Chapter 17.6, page 63):
  - Flue resistance
  - Flue gas temperature  $t_A$
  - Air temperature  $t_L$
  - Net exhaust gas temperature  $t_A - t_L$  or oxygen content (O<sub>2</sub>)
  - CO value

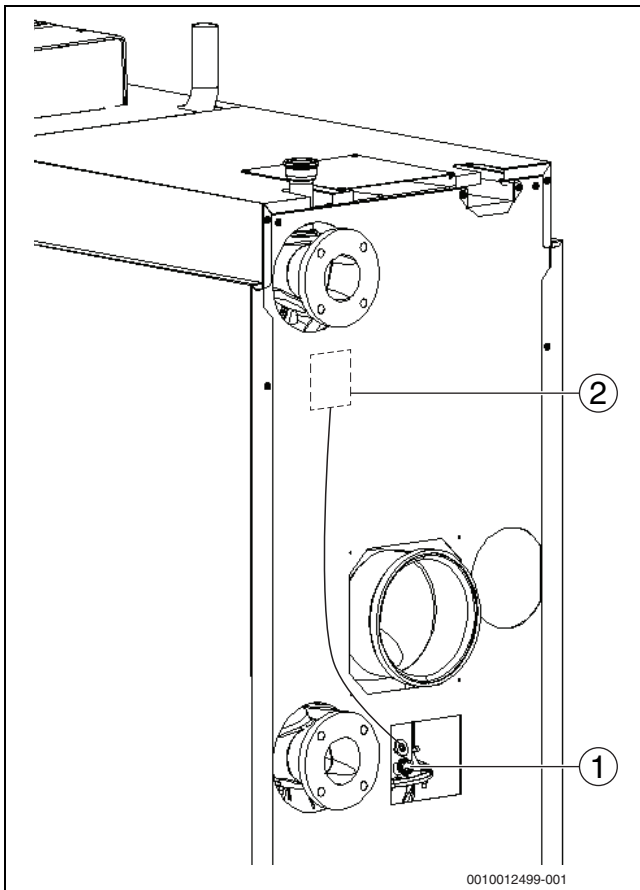


Fig. 30 Recording measurements (boiler rating 150-300 kW)

- [1] Test point at the condensation catch pan
- [2] Flue gas temperature limiter (optional)

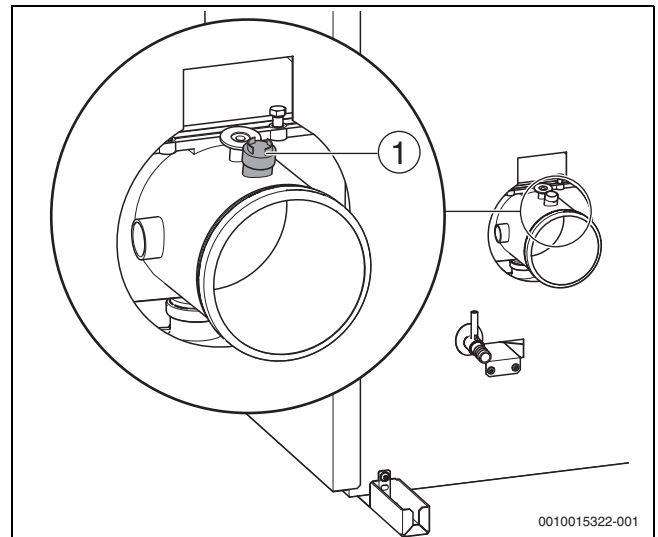


Fig. 31 Recording measurements (boiler rating 75-100 kW)

- [1] Test point on the connector

#### 7.14.1 Flue resistance

The required flue resistance for the installed flue gas/air supply system must not exceed 150 Pa (1.5 mbar).



**DANGER:**

**Danger to life through toxic flue gases escaping.**

- Only operate the boiler with a chimney or flue system (→ Table 17.1, page 56).

#### 7.14.2 CO value

CO values in an air-free state must be below 100 ppm or 0.01 % vol.

Values above 100 ppm indicate an incorrect device setup, burner and/or heat exchanger contamination, burner faults or incorrect burner setting.

- Identify and eliminate the cause.

### 7.15 Function tests

**NOTICE:**

**Material damage and malfunctions due to contamination!**

The function of the burner may be impaired due to greater accumulation of dust during the construction phase.

- Clean the burner once the construction phase is complete (→ chapter 11.7 and 11.8) or use the "air filter" accessory set.

During commissioning and the annual inspection, make sure all regulating, control and safety equipment is functioning correctly and, where applicable, check for correct settings.

#### 7.15.1 Checking the ionisation current (flame current)

- To test the ionisation current, observe the corresponding technical documentation for the control unit.

## 7.16 Checking tightness during operation

### NOTICE:

#### Risk of material damage due to a short circuit!

- ▶ Prior to checking for leaks, cover areas at risk, e.g. the internal water pressure sensor and the return temperature sensor in the boiler return.
- ▶ Never spray or allow leak detection agent to drip onto cable entries, plugs or electrical cables.
- ▶ To prevent corrosion, carefully wipe off the leak detection agent afterwards.

- ▶ With the burner operational, use a foaming agent to test all joints along the entire burner path, such as:

- Test nipple
- Locking screw for gas supply pressure
- Screw fittings (also at the gas connection) etc.

The agent must be approved for gas tightness testing.

## 7.17 Installing casing parts

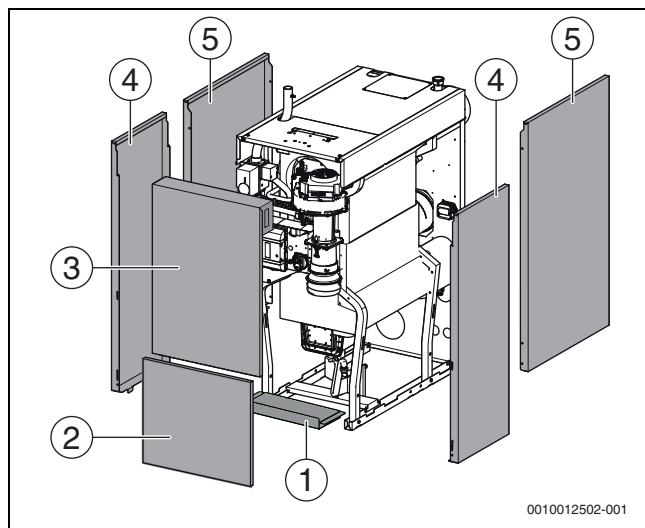


Fig. 32 Installing casing parts

- [1] Bottom panel
- [2] Front panel at bottom
- [3] Front panel at top
- [4] Side panels at front
- [5] Side panels at rear

- ▶ First hook the side panels at the rear [5] into the bottom rail at the bottom, then lift them slightly and hook in at the top.
- ▶ Using fixing screws, secure the rear side panels [5] to the rear of the boiler.
- ▶ First hook the side panels at the front [4] into the bottom rail at the bottom, then lift them slightly and hook in at the top.
- ▶ Insert the bottom panel [1].
- ▶ Hook the bottom boiler front panel [2] into the cutouts at the bottom of the boiler casing and hook into the side panels.
- ▶ Insert the upper boiler front panel [3] into the lower boiler front panel and place against side panels.
- ▶ Make sure that bolts at the top have engaged in the corresponding holes.
- ▶ Turn the unlocking screws on the top of the boiler clockwise using a suitable tool and lock the front panel [3].
- ▶ Affix the clear pocket containing the technical documentation to the side panel of the boiler in a clearly visible location.

## 8 Briefing the user, handing over technical documents



### WARNING:

#### Danger to life due to poisoning!

Risk of poisoning due to escaping flue gases when the air supply is inadequate.

- ▶ Make sure that a supply of air is available in every operating mode through corresponding openings to the open air.
- ▶ Make the user aware of the need for and function of the ventilation and combustion air apertures.
- ▶ Make the user familiar with the heating system and the boiler operation.
- ▶ Make the user aware that the boiler and control unit must only be opened by qualified contractors.
- ▶ Confirm commissioning in the report (→ Chapter 17.6).
- ▶ Together with the user and referring to the operating instructions, perform a shutdown and restart.
- ▶ Point out the user that frequent refilling of heating water is a sign that the system is faulty and/or leaking (ensure required water quality according to the operator's log).
- ▶ Inform operator about the required water quality and point out where the heating water must be refilled.
- ▶ Explain to the customer what to do in an emergency, e.g. a fire, referring to the operating instructions.
- ▶ Hand over the technical documents to the user.

## 9 Shutdown

### NOTICE:

#### Frost damage!

The heating system can freeze up when it is not in operation.

- ▶ Whenever possible, leave the heating system permanently switched on.
- ▶ Protect the heating system against frost by draining the heating system and DHW pipes from the lowest point.

### 9.1 Shutting down the heating system via the control unit

- ▶ To shut down the heating system, observe the corresponding technical documentation for the control unit.
- ▶ Close off the fuel supply.

### 9.2 Shutting down the heating system in an emergency



Only in emergencies, shut down the heating system via the fuse/circuit breaker at the installation location or the heating system emergency stop switch.

Explain to the operator/user what to do in an emergency, e.g. fire.

- ▶ Never risk your own life. Your own safety is paramount.
- ▶ Close off the fuel supply installed on site.
- ▶ Isolate the heating system from the mains power supply via the heating system emergency stop switch or the main circuit breaker.

## 10 Environmental protection and disposal

Environmental protection is a fundamental corporate strategy of the Bosch Group. The quality of our products, their economy and environmental safety are all of equal importance to us and all environmental protection legislation and regulations are strictly observed. We use the best possible technology and materials for protecting the environment taking account of economic considerations.

### Packaging

Where packaging is concerned, we participate in country-specific recycling processes that ensure optimum recycling. All of our packaging materials are environmentally compatible and can be recycled.

### Used appliances

Used appliances contain valuable materials that can be recycled. The various assemblies can be easily dismantled. Synthetic materials are marked accordingly. Assemblies can therefore be sorted by composition and passed on for recycling or disposal.

### Old electrical and electronic appliances



This symbol indicates that the product must not be disposed of with other waste, but be taken to the waste collection centers for treatment, collection, recycling and disposal procedure.

The symbol applies to countries with electronic waste regulations, for example the European Waste Electrical and Electronic Equipment Directive 2012/19/EU. These regulations determine the framework for the return and recycling of used electronic appliances as applicable within each country.

As electronic equipment may contain hazardous substances, it needs to be recycled responsibly in order to minimize any potential harm to the environment and human health. Furthermore, recycling of your electronic waste will help to conserve natural resources.

For additional information on the environmentally safe disposal of electrical and electronic equipment, please contact the relevant local authorities, your household waste disposal service or the retailer where you purchased the product.

For additional information, please visit:  
[www.weee.bosch-thermotechnology.com/](http://www.weee.bosch-thermotechnology.com/)

### Batteries

Batteries must not be disposed together with your household waste. Used batteries must be disposed of in local collection systems.

## 11 Inspection and maintenance

### NOTICE:

#### Boiler damage through a lack of, or unsatisfactory, cleaning and inspection or maintenance!

- ▶ Have the heating system inspected at least once a year, and have any necessary maintenance or cleaning work carried out.
- ▶ Clean the boiler at least every 2 years. We recommend annual cleaning.
- ▶ Check and clean the condensate pipes and siphon annually.
- ▶ Carry out any maintenance immediately to avoid any damage to the system.
- ▶ Remedy all faults immediately.

Heating systems must be serviced regularly for the following reasons:

- to achieve a high level of efficiency and to operate the heating system economically (low fuel consumption),
- to achieve a high level of operational safety and reliability,
- to maintain the cleanest possible combustion,
- to ensure safe and reliable operation and a long service life.

Maintenance work must only be carried out by approved contractors. Use only original spare parts. The results of the inspection must be recorded in the inspection and maintenance protocol.

Offer your customer an annual maintenance and inspection contract, which is based on actual requirements. You can check in the inspection and maintenance protocols which activities must be included in a maintenance contract (→ Chapter 17.7).



Refer to the spare parts catalogue when ordering spare parts.

### 11.1 Preparing the boiler for inspection



#### DANGER:

#### Danger to life from electric current!

- ▶ Before opening the boiler, isolate all phases of the mains voltage and secure against unintentional reconnection.



#### DANGER:

#### Risk to life through explosion of flammable gases!

- ▶ Work on gas components must only be carried out by authorised contractors (observe local regulations).

#### Remove front panels

- ▶ Shut down the heating system.
- ▶ Turn the unlocking screws (→ Fig. 33, [1]) on the top of the boiler anticlockwise using a suitable tool and unlock the top boiler front panel.
- ▶ Tilt the boiler front panel (→ Fig. 33, [2]) forwards and lift up out of the bottom guide.
- ▶ To do this, slightly raise the lower boiler front panel and remove it towards the front.

#### Removing the side panels

- ▶ Slightly raise the front side panel, then tilt outwards and lift off.
- ▶ Remove the two fixing screws at the rear that secure each of the rear side panels.
- ▶ Slightly raise the rear side panel, then tilt outwards and lift off.

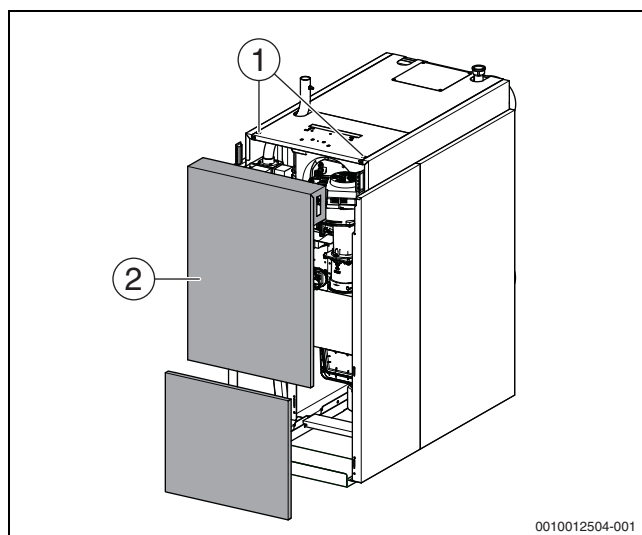


Fig. 33 Removing the front panel

- [1] Unlocking screws
- [2] Front panel (2-part)

## 11.2 Detailed overview of boiler components

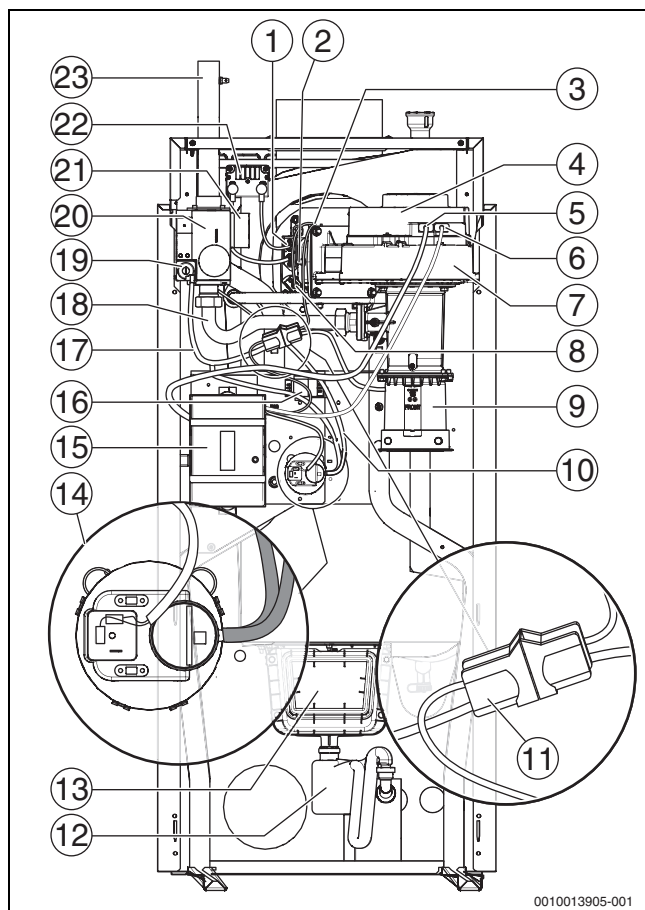


Fig. 34 Detailed overview of components (illustration shows 200-300 kW rating)

- [1] Ignition electrode
- [2] Gas pressure test nipple
- [3] Temperature switch
- [4] Fan
- [5] Power supply plug
- [6] PWM signal plug
- [7] Gas burner casing
- [8] Monitoring electrode
- [9] Combustion air intake connector
- [10] Test cable for gas outlet pressure (white gas line)
- [11] Plug-in connector for compensation/ionisation line
- [12] Siphon
- [13] Condensation catch pan
- [14] Differential pressure switch ( $p_1$ -blue gas line,  $p_2$ -white gas line)
- [15] Burner control unit
- [16] EMC butterfly valve
- [17] Compensation line (blue)
- [18] Gas pipe
- [19] Offset setting, sealed
- [20] Air/gas ratio control valve
- [21] Valve check system
- [22] Ignition transformer
- [23] Gas pipe

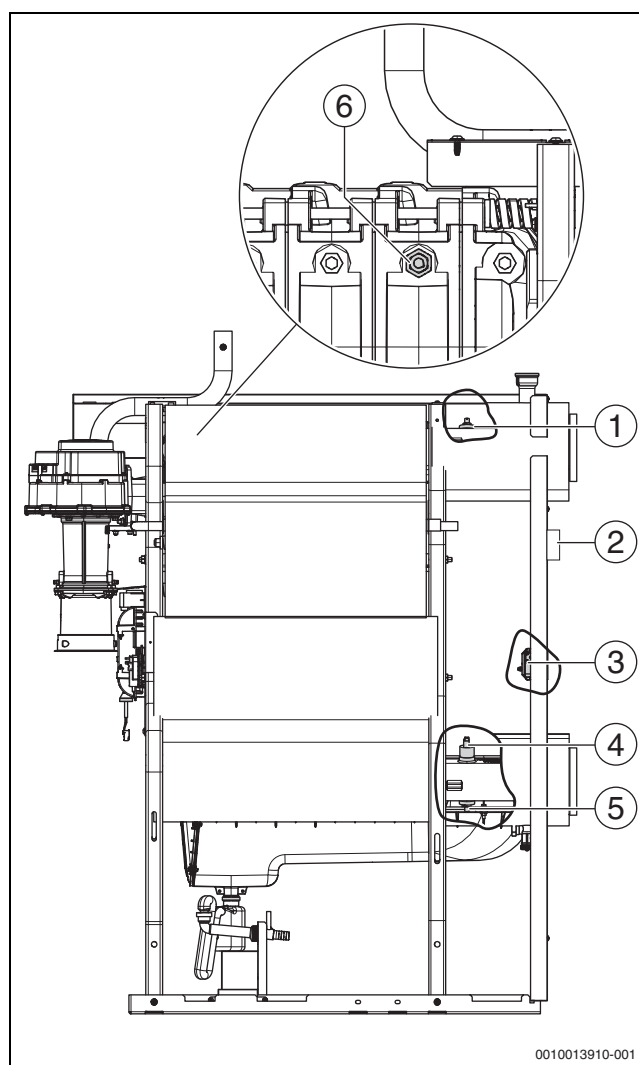


Fig. 35 Detailed overview: position of sensor

- [1] Flow temperature sensor
- [2] Flue gas temperature limiter (optional; mandatory accessory for Switzerland)
- [3] Flue gas pressure limiter.
- [4] Water pressure sensor
- [5] Return temperature sensor
- [6] Safety temperature limiter (on the first centre section, on the left under the thermal insulation)

### 11.3 General work

The following work is not described in any further detail in this document. It must, nevertheless, still be carried out:

- ▶ Check the general condition of the heating system.
- ▶ Visual inspection and function check of the heating system.
- ▶ Check the supply air and flue gas routing for function and safety.
- ▶ Check all gas and water pipes for signs of corrosion.
- ▶ Replace any corroded pipes.
- ▶ Check the pre-charge pressure of the expansion vessel.
- ▶ Check the concentration of any antifreeze/additives that may be used in the system fill/top-up water annually.
- ▶ If necessary, check installed water treatment cartridges (in the backfeed section) to ensure they are functioning correctly and for wear.
- ▶ During commissioning and the annual inspection, check all regulating, control and safety equipment for correct function and, where applicable, for correct settings.

### 11.4 Internal tightness test

#### 11.4.1 Determining the testing volume

- ▶ Measure the length of the pipeline up to the fuel shut-off valve.
- ▶ Calculate using value for volume of air/gas ratio control valve (→Table 11).

Boiler size [kW]	Volume of air/gas ratio control valve $V_{\text{Air/gas ratio control valve [l]}}$
75-100	0.035
150-300	0.060

Table 11 Volume of air/gas ratio control valve

- ▶ Determine the pipe volume ( $V_{\text{pipe}}$ ) using table 12 and table 13.
- ▶ Calculate the test volume ( $V_{\text{test}}$ ) using the equation.

$$V_{\text{test}} = V_{\text{tot}} = V_{\text{pipe}} + V_{\text{air/gas ratio control valve}}$$

Pipe length [m]	Pipework diameter [inch]					
	½	¾	1	1 ¼	1 ½	2
1	0.2	0.4	0.6	1.0	1.4	2.2
2	0.4	0.7	1.2	2.0	2.7	4.4
3	0.6	1.1	1.7	3.0	4.1	6.6
4	0.8	1.5	2.3	4.0	5.5	8.8
5	1.0	1.8	2.9	5.1	6.9	11.0
6	1.2	2.2	3.5	6.1	8.2	13.2
7	1.4	2.5	4.1	7.1	9.6	15.4
8	1.6	2.9	4.6	8.1	11.0	17.6
9	1.8	3.3	5.2	9.1	12.4	19.8
10	2.0	3.6	5.8	10.1	13.7	22.0

Table 12 Pipework volume ( $V_{\text{pipe}}$ ) in litres, subject to pipe length and diameter

Pipe length [m]	Pipework diameter [mm] (copper pipe)					
	15 x 1	18 x 1	22 x 1	28 x 1.5	35 x 1.5	45 x 1.5
1	0.1	0.2	0.3	0.5	0.8	1.4
2	0.3	0.4	0.6	1.0	1.6	2.8
3	0.4	0.6	0.9	1.5	2.4	4.2
4	0.5	0.8	1.3	2.0	3.2	5.5
5	0.7	1.0	1.6	2.5	4.0	6.9
6	0.8	1.2	1.9	2.9	4.8	8.3
7	0.9	1.4	2.2	3.4	5.6	9.7
8	1.1	1.6	2.5	3.9	6.4	–
9	1.2	1.8	2.8	4.4	7.2	–
10	1.3	2.0	3.1	4.9	8.0	–

Table 13 Pipework volume ( $V_{\text{pipe}}$ ) in litres, subject to pipe length and diameter

### 11.4.2 Carrying out gas tightness test

- ▶ Turn off appliance shut-off valve.
- ▶ Undo locking screw on test nipple by turning it through 2 revolutions.
- ▶ Push the test hose of the U-tube pressure gauge onto the test nipple.
- ▶ Open the fuel shut-off valve and wait for the pressure to stabilise.
- ▶ Note and record the pressure.
- ▶ Close the appliance shut-off valve and check the pressure again a minute later.
- ▶ Calculate the pressure drop per minute from the differential.

By means of the determined pressure drop per minute and the test volume ( $V_{\text{test}}$ ), check in the following diagram (→ Fig. 37, page 34) whether the gas train is still useable.

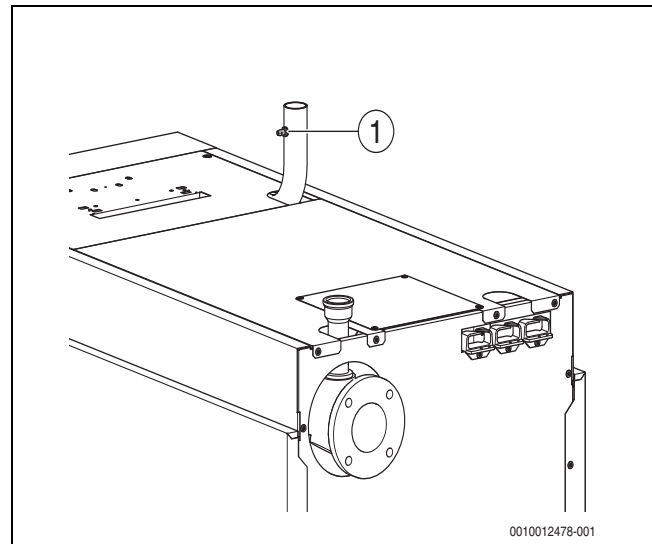


Fig. 36 Testing the gas supply pressure

[1] Test nipple for measuring the gas supply pressure and for venting

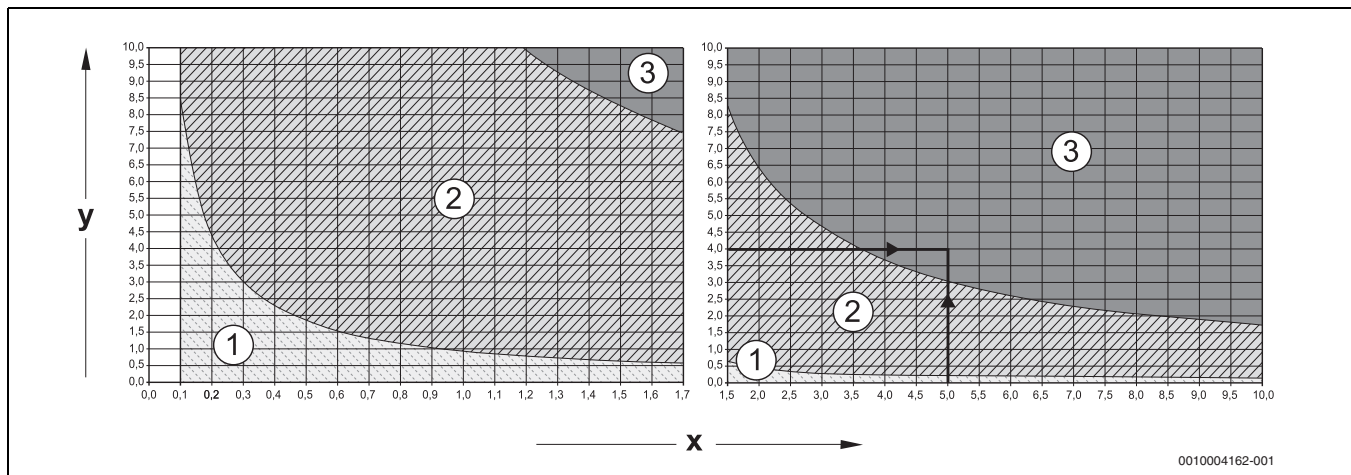


Fig. 37 Permissible pressure drop per minute for the internal leak test with gas pressure present

- [1] "Valve tight" range = applies to new installations
- [2] "Valve sufficiently tight" range = valve can be used without restrictions
- [3] "Valve leaks" range = valve may not be used (→ perform a test as described in the following)

x Test volume in litres

y Pressure drop in mbar within one minute

**Read-off example:** test volume ( $V_{\text{test}}$ ) 5 litres and pressure drop 4 mbar/min = range 3 (valve leaking = valve may not be used) → carry out test as described below.



If you detect a steep pressure drop of > 10 mbar/minute at a test volume of ( $V_{\text{test}}$ ) of < 1 litre, increase the test volume ( $V_{\text{test}}$ ). For this include the pipework up to the next shut-off valve in the tightness test and repeat the test using the new test volume ( $V_{\text{test}}$ ).

If the read-off point for the test volume ( $V_{\text{test}}$ ) and pressure drop per minute lies within the "Train leaks" range (see Read-off example), you must carry out the test described below.

#### NOTICE:

##### Risk of material damage due to a short circuit!

- ▶ Never spray or let leak detection agent drip onto cable entries, plugs or electrical cables/leads.
- ▶ Cover areas at risk before testing for leaks.

- ▶ Check all joints in the tested pipework section using a foaming leak detection agent.
- ▶ If required, seal any leaks and repeat the test.
- ▶ If no leak is detected, replace the air/gas ratio control valve.

##### Complete the leak test

- ▶ Remove hose.
- ▶ After completing the measurements, retighten the locking screw of the test nipple.
- ▶ Check tightness of the test nipples.



## 11.5 Checking the heating system operating pressure

### NOTICE:

#### Risk of system damage due to thermal stress!

If the boiler is filled when hot, the resulting temperature stresses can cause stress cracks. The boiler will then leak.

- ▶ Only fill the boiler when cold (the boiler temperature should not exceed 40 °C).
- ▶ When the boiler is in operation, never fill it via the boiler DFV valve. Instead, only use a WRAS approved filling method in the return.
- ▶ Observe the requirements for fill water.

### NOTICE:

#### System damage due to frequent topping up!

Depending on water quality, the heating system may be damaged by corrosion or scaling if you frequently need to top up the water (observe the water quality log).

- ▶ Vent the heating system during filling.
- ▶ Check the heating system for leaks.
- ▶ Check the function of the expansion vessel.
- ▶ Immediately seal any leaks.

In sealed systems the pressure gauge needle must be within the green marking.

The red needle of the pressure gauge must be set to the required operating pressure.



Establish an operating pressure of at least 1.2 bar.

- ▶ Check the operating pressure of the heating system.

The operating pressure is too low, if the pressure gauge needle is below the green marking.

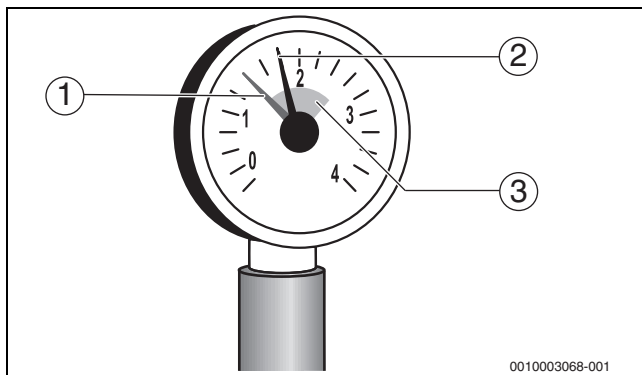


Fig. 38 Pressure gauge for sealed systems

- [1] Red needle
- [2] Pressure gauge needle
- [3] Green marking



### CAUTION:

#### Health risk through contaminated drinking water!

- ▶ Observe all country-specific regulations and standards regarding the prevention of drinking water contamination.
- ▶ Water should be topped up via WRAS approved filling method.
- ▶ Vent the heating system via the radiator air vent valves.
- ▶ Check the operating pressure again.



The operating pressure can also be checked at the control unit via the "Info menu" (e.g. display "P1.4" corresponds to 1.4 bar).

- ▶ Enter the amount of top-up water in the "Water Quality Operator's Log".

## 11.6 Measuring the carbon dioxide content

- ▶ Insert the sensor into the core stream through the measurement port in the flue.
- ▶ Make a note of the flue gas values.  
The CO<sub>2</sub> value must be between 8.2% and 10.5% (with LPG: between 9.8% and 10.8%) and the CO content in the flue gas must be below 100 ppm air-free.

The following applies for **Denmark**:

- ▶ Take the O<sub>2</sub> values corresponding to the specified CO<sub>2</sub> values (natural gas DK CO<sub>2</sub> rat. = 12.0 vol. %) from Chapter 17.5, page 62.

## 11.7 Removing the burner



### CAUTION:

#### Risk of burning due to hot surfaces!

Individual components of the boiler can become very hot even after being shut down for a long time.

- ▶ Allow the boiler to cool down.
- ▶ If necessary, wear protective gloves.

### NOTICE:

#### Risk of material damage due to improper maintenance/cleaning!

When removing the burner or when cleaning the boiler, the control unit may be soiled or damaged.

- ▶ Cover the control unit before removing the burner or cleaning the boiler.

### NOTICE:

**Do not detach or disconnect any other control cables, apart from those specified!**  
**Do not detach sealed joints!**

- ▶ Shut down the heating system (→ Chapter 9, page 30).
- ▶ Remove the boiler front panels and front side panels (→ Chapter 11.1, page 31).
- ▶ Unplug 2 connectors from the fan.



- Pull the ignition cables [1] off the ignition electrodes.

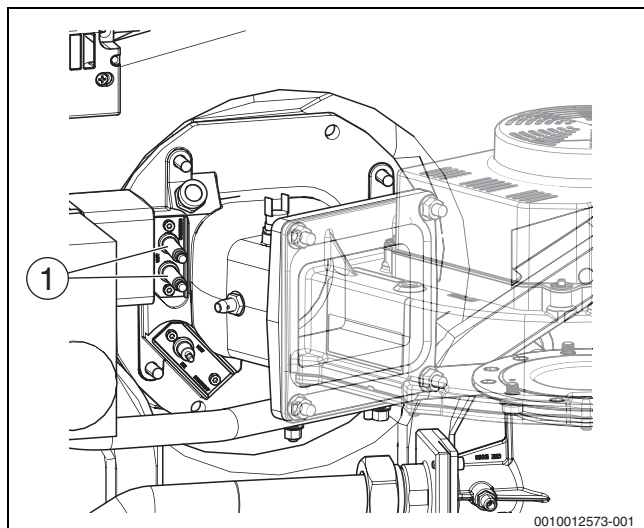


Fig. 39 Ignition electrodes

[1] Ignition electrodes without ignition cables

- Disconnect the plug-in connector (compensation and ionisation line).

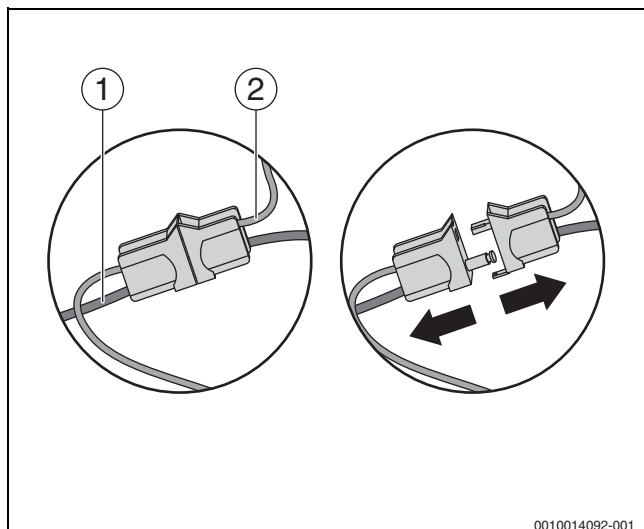


Fig. 40 Disconnecting the plug-in connector

[1] Compensation line  
[2] Ionisation line

- Undo the union nut (→ Fig. 41, [1]) of the gas supply pipe (→ Fig. 41, [2]).



### CAUTION:

#### Material damage and leaks due to power transmission!

- When removing and installing the gas pipe, counterhold to avoid subjecting other components to stress.

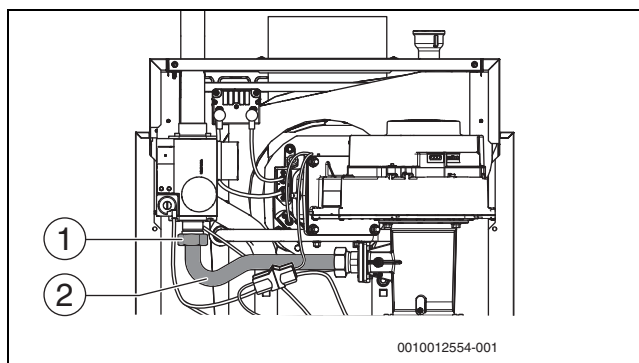


Fig. 41 Union nut with gas pipe

[1] Union nut  
[2] Gas pipe

With room sealed operation:

- Release the hinged pipe clip [2] on the supply air hose [3].
- Pull off supply air hose together with the connector from the ventilation air collector [1].

(→ Chapter 5.7, page 18)

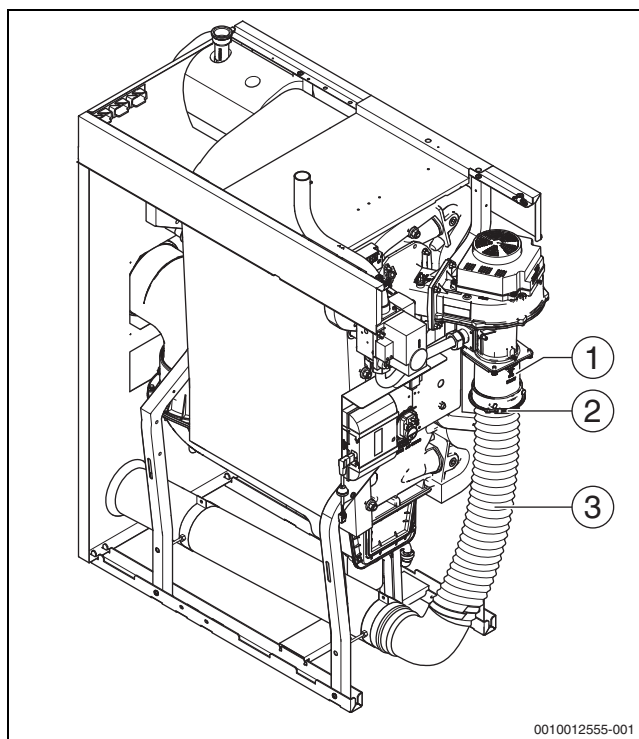


Fig. 42 Air supply pipe

[1] Ventilation air collector  
[2] Hinged pipe clip  
[3] Supply air hose

- Remove 4 fixing nuts [1] on the flange of the mixture manifold.

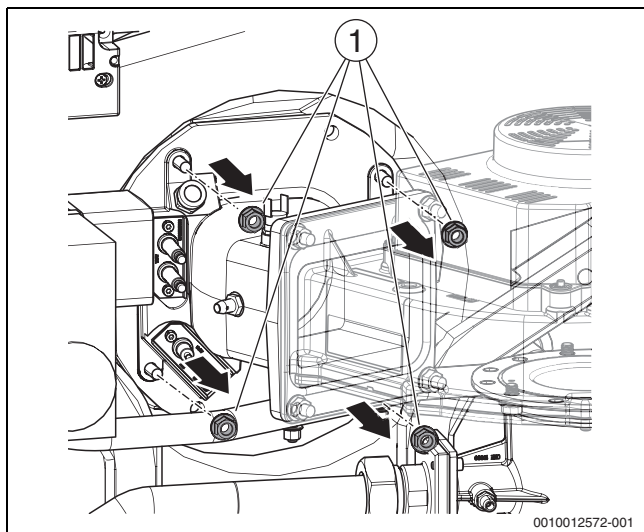


Fig. 43 Undoing the nuts at the mixture manifold

[1] Fixing nuts

► Pull out burner with burner rod.

**With boiler ratings 75-150 kW:**

Burners for boilers with ratings 75-150 kW are installed without a burner holder and retaining cable and can be removed directly.

Once removed, the burner can be mounted in the service position on the boiler frame.

► Plug the burner with flange onto the factory-installed screws (→Fig. 44, [2]) and secure with two of the fixing nuts that were previously removed (→Fig. 43, [1]).

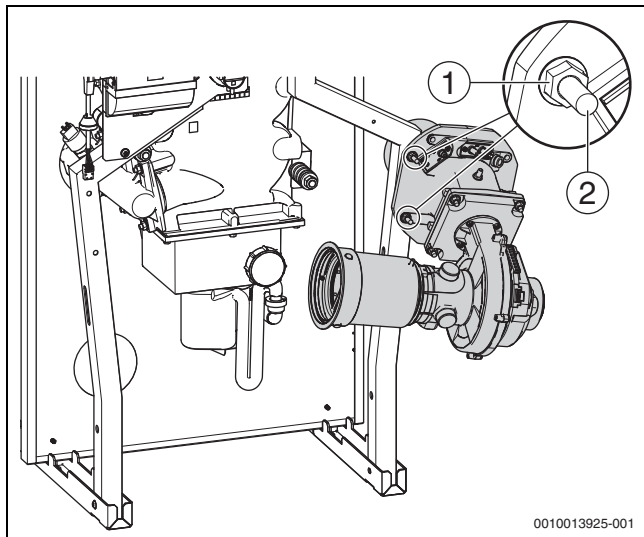


Fig. 44 Burner in the service position (right-hand installation).

[1] Fixing nuts

[2] Factory-installed screws

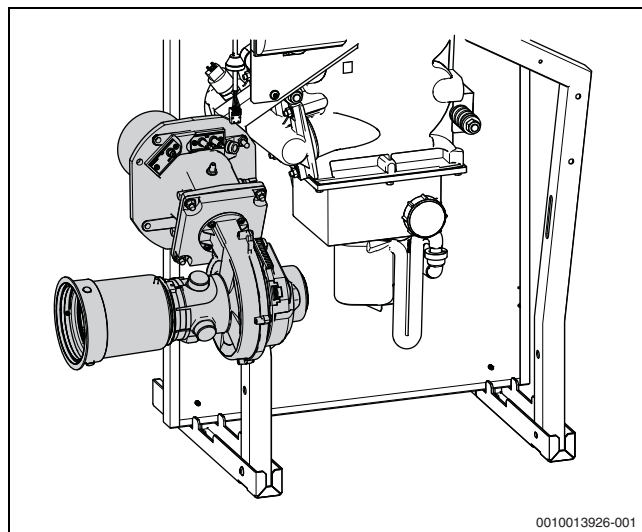


Fig. 45 Burner in service position (left-hand installation).

**With boiler ratings 200-300 kW:**

Burners in boilers with ratings 200-300 kW are secured with a burner holder [2] and a retaining cable [3]. To be able to remove the burner completely, the retaining cable must be detached from the frame [4].

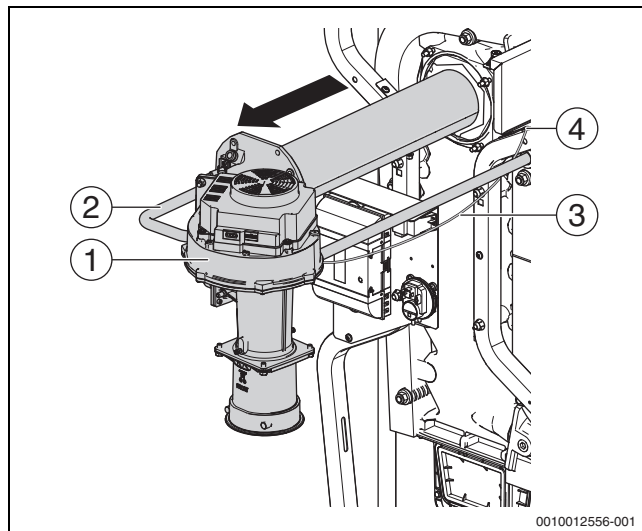


Fig. 46 Pull out the burner (illustration shows boiler rating 200-300 kW)

[1] Burner

[2] Burner holder (with boiler rating 200-300 kW)

[3] Retaining cable (with boiler rating 200-300 kW)

[4] Fastening of retaining cable (with boiler rating 200-300 kW)

## 11.8 Cleaning the burner and heat exchanger

### 11.8.1 Cleaning the burner

If there is heavy contamination, the burner rod can be separated from the mixture manifold and a blow gun with a long, angled blow pipe can be used to blow them off from the inside and outside using a reasonable amount of compressed air (max. 3 bar).

- Re-install the burner rod with a new gasket.

### 11.8.2 Cleaning the heat exchanger



#### **DANGER:**

#### **Danger to life through escaping flue gas!**

- During installation, look out for faulty gaskets and ensure they are seated correctly. Replace faulty gaskets.
- Replace the gaskets as described (→ Chapter 11.11.3, page 42).
- Dry and/or wet clean the heat exchanger.
- Shut down the heating system (→ Chapter 9.1, page 30).
- Close the gas main shutoff valve or gas isolator.
- Allow floor standing boiler to cool down.
- Remove the front panels and corresponding side panels.
- Place the tundish that collects dirt and condensate residues under the condensation catch pan.
- Pull the siphon [1] off the drainage connection of the condensation catch pan [2] and out of the drain pipe. Turn slightly sideways in doing so.

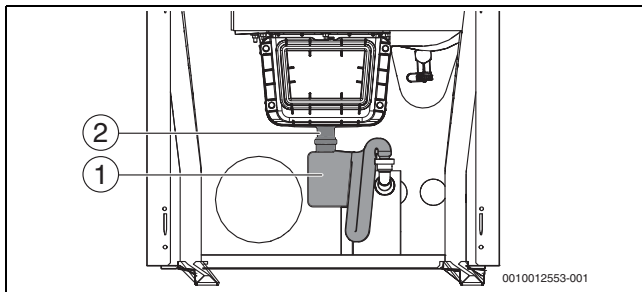


Fig. 47 Removing the siphon

- [1] Siphon
- [2] Condensation catch pan outlet

- Unscrew the screws on the cover of the condensation catch pan (with boiler rating 150-300 kW).
- Remove the cover.

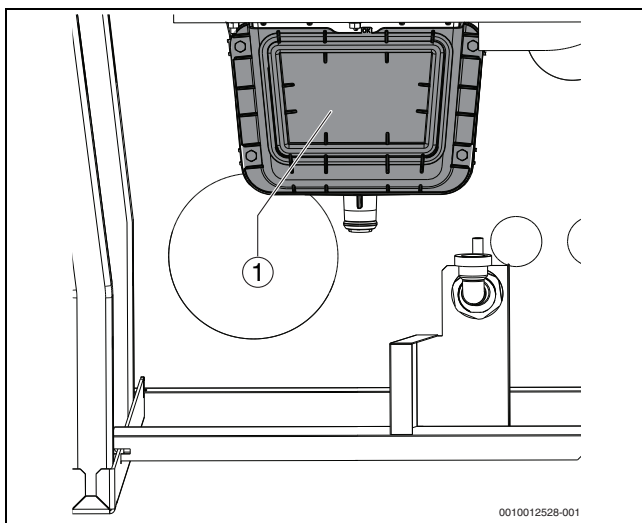


Fig. 48 Removing the cover of the condensation catch pan (illustration shows boiler size 150-300 kW)

- [1] Cover of condensation catch pan

- Remove the dirt trap: press the bottom tabs slightly together so the dirt trap can be lifted up and out of the drainage connection.
- Rinse the dirt trap and siphon under running water.



Boiler sizes 75-100 kW do not have a dirt trap and are equipped with a cleaning pipe socket with cap instead of the cover

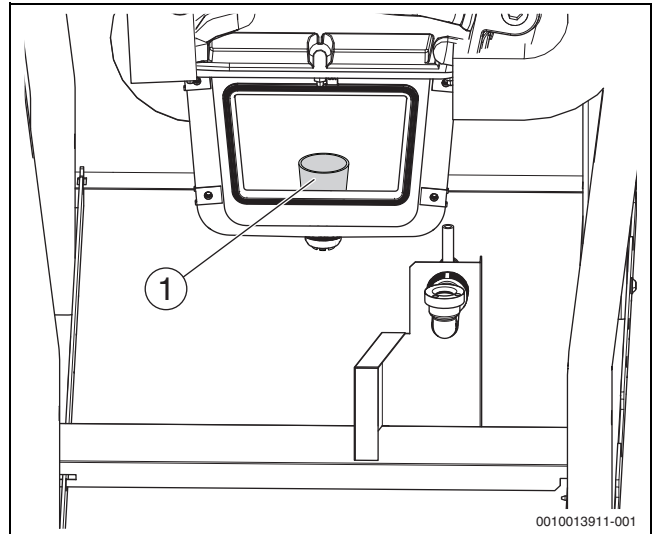


Fig. 49 View of condensation catch pan without cover

- [1] Dirt trap

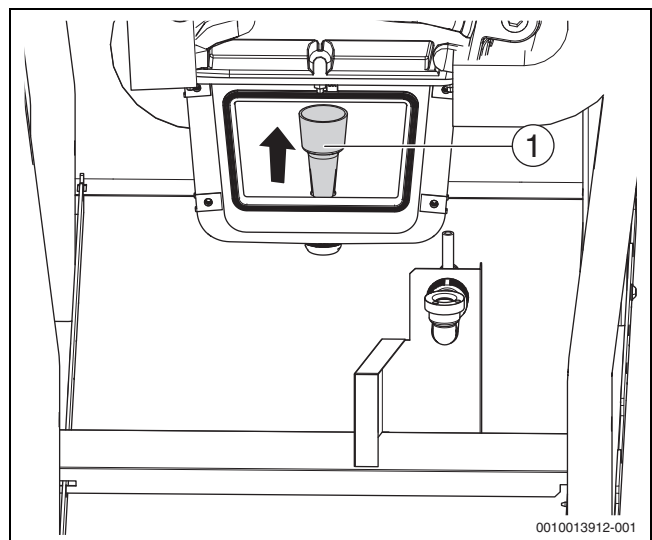


Fig. 50 Dirt trap following removal

- [1] Dirt trap

## Cleaning the heat exchanger mechanically



A cleaning blade is available as an accessory for dry-cleaning the heat exchanger. Cleaning equipment for wet cleaning is also available as an accessory.



The cleaning covers are always on the flow and return connection side, which depends on whether the boiler is a right or left-hand version.

- Remove the clips [1] on the thermal insulation.
- Remove the thermal insulation [2] from the heat exchanger.

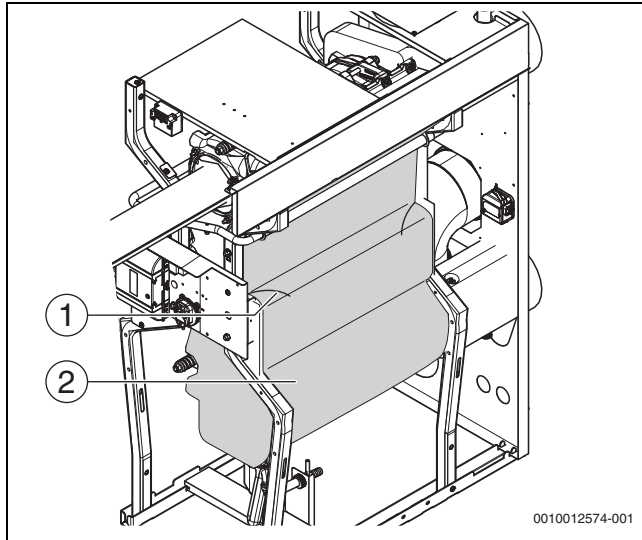


Fig. 51 Thermal insulation on the heat exchanger

- [1] Clip
- [2] Thermal insulation

- Undo fixing nuts on the cleaning covers [1] of the heat exchanger.
- Remove the cleaning covers.

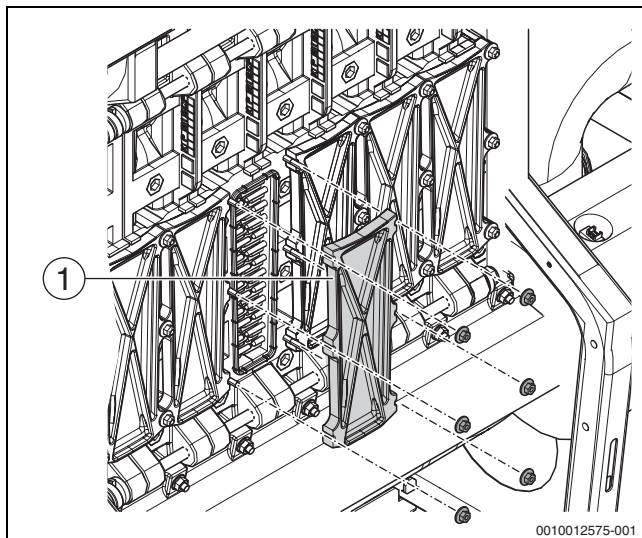


Fig. 52 Removing the cleaning covers

- [1] Cleaning cover



### CAUTION:

#### Risk of injury from sharp edges of cleaning blade!

- To avoid injury, wear protective gloves when cleaning the boiler using cleaning blades (accessories).
- Clean the heat exchanger hot gas flues horizontally and diagonally using the cleaning blade.

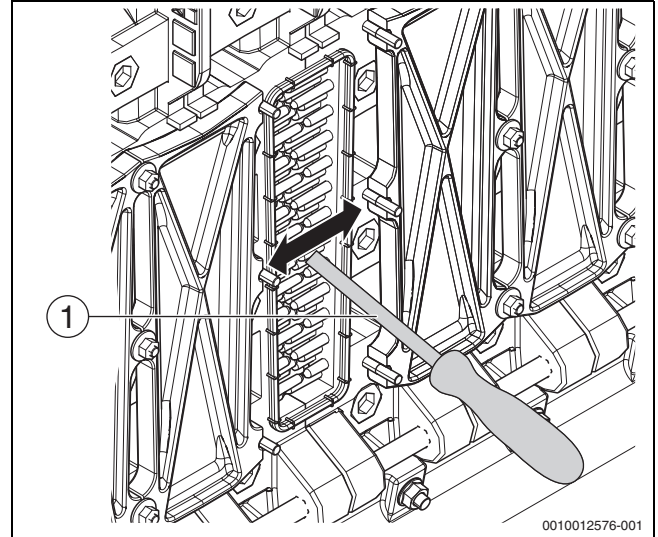


Fig. 53 Cleaning the heat exchanger horizontally

- [1] Cleaning blade (available as accessory)

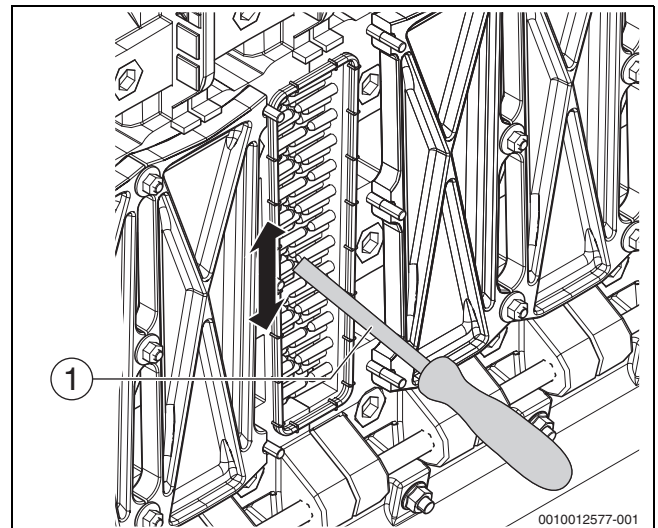


Fig. 54 Cleaning the heat exchanger diagonally

- [1] Cleaning blade (available as accessory)

- Remove dirt particles from the condensation catch pan (e.g. using a vacuum cleaner).
- Reinsert the dirt trap.
- Screw the cleaning cover back on or wet clean the heat exchanger.
- Make sure the covers and gaskets are positioned correctly.
- Replace faulty gaskets, observe replacement intervals.



## Wet cleaning the heat exchanger

### NOTICE:

#### Risk of material damage due to improper cleaning!

Dirt and moisture can damage boiler components during cleaning.

- ▶ During wet cleaning, protect electrical and other vulnerable components (fan, air/gas ratio control valve, etc.) against moisture and contamination.
- ▶ When wet cleaning, use a cleaning agent appropriate to the degree of soiling (encrustation or soot). The cleaning agent must be approved for use with aluminium.
- ▶ Clean the heat exchanger with water or a cleaning agent approved for aluminium (see instructions provided by the manufacturer of the cleaning agent).
- ▶ Spray the edges of the heat exchanger in particular.

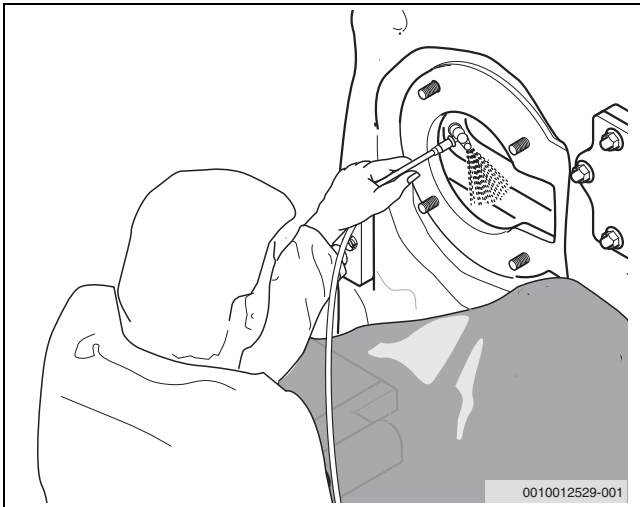


Fig. 55 Wet cleaning the heat exchanger

#### Working on the heat exchanger during wet and dry cleaning

- ▶ Use a hose to rinse off any residues from the tundish or condensation catch pan.
- ▶ Remove dirt trap (with boiler size 150-300 kW).
- ▶ Clean the condensation catch pan with water.
- ▶ Clean the siphon with water.
- ▶ Check continuity of condensate hose between the connector and siphon.
- ▶ Insert dirt trap (with boiler size 150-300 kW).
- ▶ Install the siphon and fill with approx. 3 litres of water.



### DANGER:

**Danger to life due to poisoning! Siphons not filled with water can cause danger to life through escaping flue gas.**

- ▶ Fit the siphon (→ Chapter 5.5, page 16 ff.).
- ▶ Fill the siphon with approx. 3 litres of water.
- ▶ Each time you carry out maintenance or an inspection, make sure that siphon is sufficiently filled with water.
- ▶ Screw on the cover of the condensation catch pan (with boiler size 150-300 kW).
- ▶ Fit the cap on the cleaning pipe socket (with boiler size 75-100 kW).

## 11.9 Inspecting the burner electrodes

### NOTICE:

#### Malfunction of boiler!

If the woven filaments of the burner rod surface come into contact with the electrodes, this can cause a fault shutdown.

- ▶ Make sure that no woven threads are sticking out in the area of the electrodes.
- ▶ Carefully cut off any fibres that are sticking out using scissors.

#### Checking the electrode position

- ▶ Move the burner into its service position (→ Chapter 11.8, page 38).



If the monitoring electrode tapers to a point or has reduced in length, this is a sign of significant wear.

- ▶ Replace the electrode.
- ▶ Check the gaps between the electrodes and compare them with those shown in Fig. 56.

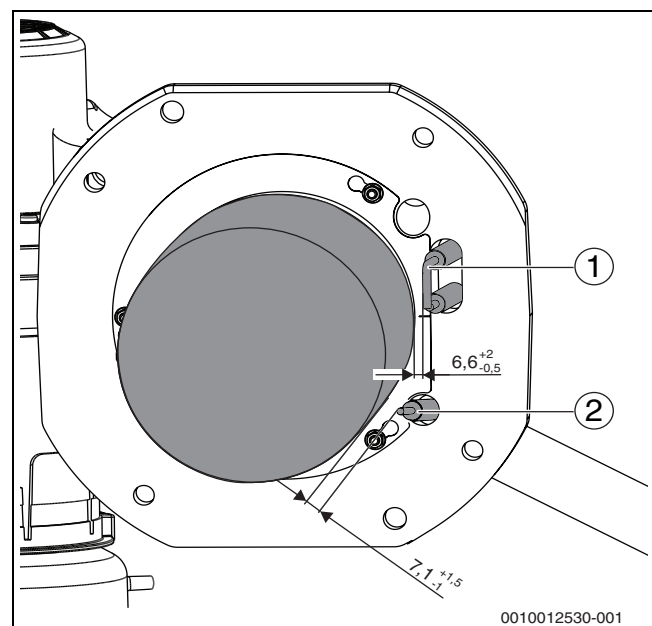


Fig. 56 Electrode position (dimension in mm)

- [1] Ignition electrode
- [2] Monitoring electrode

- ▶ Replace the electrode block together with a new gasket if actual values deviate from the specified parameters.
- ▶ If deposits are found on the electrodes, replace the electrode block together with a new gasket or sand down the electrodes.



We recommend replacing the electrode block as part of the annual maintenance.

- ▶ For completing maintenance see Chapter 11.12, page 43.

If a part needs to be replaced:

- ▶ Observe information in Chapter 11.11, page 41 onwards.

## 11.10 Testing the differential pressure switch

The differential pressure switch must be checked to ensure it is working correctly each time maintenance or an inspection is carried out (→ Chapter 16, page 54).

## 11.11 Replacing components

### NOTICE:

#### Malfunctions due to incorrectly connected or unconnected hose lines!

If the wrong hose lines are used or if they are incorrectly connected, this leads to unhygienic combustion.

- ▶ Connect the hose lines as shown in the connection diagram (→Chapter 17.4.3, page 61).
- ▶ Make sure the hose lines are not buckled or trapped.

### 11.11.1 Removing the air/gas ratio control valve



Observe replacement interval of the air/gas ratio control valve.

- ▶ Replace air/gas ratio control valve depending on the service life according to tab. 14, page 42.
- ▶ Shut down the heating system (→ Chapter 9.1, page 30).
- ▶ Close the main gas shut-off valve or gas isolator and secure against unintentional re-opening.
- ▶ Remove the front panel (→ Chapter 11.1, page 31).
- ▶ Undo the hose clip and pull off the compensation test cable [1] at the valve.
- ▶ Remove the plugs of the solenoid valves at the air/gas ratio control valve and valve testing system [4].
- ▶ Undo the union nut on the gas supply pipe [2].
- ▶ Undo the 4 screws [5] on the flanges [3] of the air/gas ratio control valve at the top and bottom.
- ▶ Remove the air/gas ratio control valve.

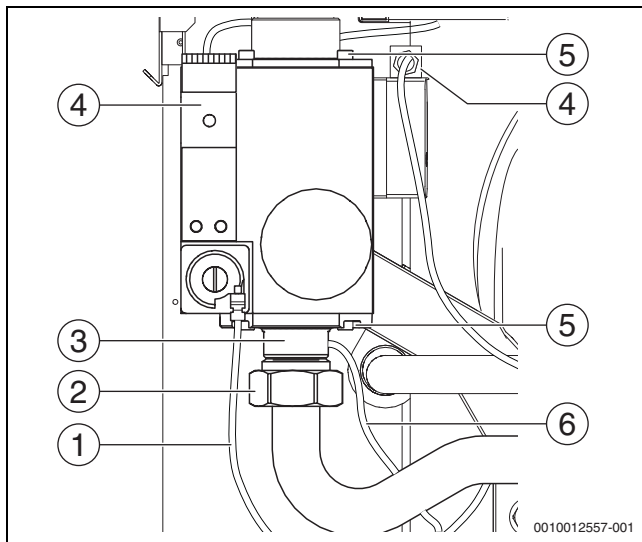


Fig. 57 Undo the air/gas ratio control valve connections (150 ... 300 kW)

- [1] Compensation test cable
- [2] Gas supply pipe union nut
- [3] Flange
- [4] Plug for solenoid valves
- [5] Screws (4 x) top and bottom
- [6] Test cable for gas outlet pressure

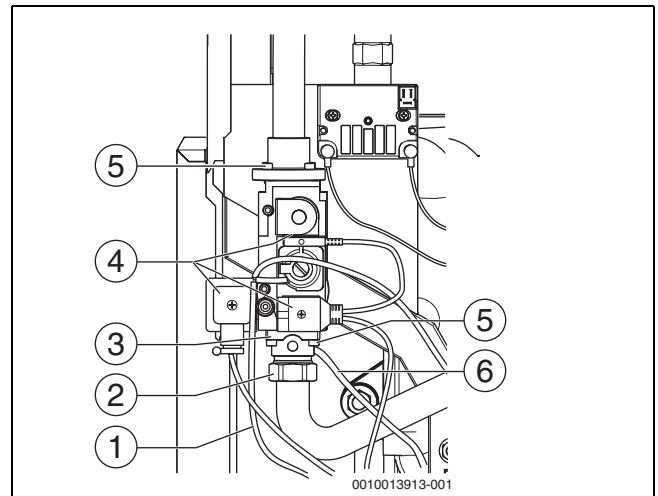


Fig. 58 Undo the air/gas ratio control valve connections (75 ... 100 kW)

- [1] Compensation test cable
- [2] Gas supply pipe union nut
- [3] Flange
- [4] Plug for solenoid valve
- [5] Screws (4 x) top and bottom
- [6] Test cable for gas outlet pressure

### 11.11.2 Removing the fan

- ▶ Shut down the heating system (→Chapter 9.1, page 30).
- ▶ Close the main gas shut-off valve or gas isolator and secure against unintentional re-opening.
- ▶ Remove the front panel (→Chapter 11.1, page 31).
- ▶ Detach the electrical connections at the fan (→Fig. 59 or fig. 60).
- ▶ Disconnect the plug-in connector (→Fig. 59)

With room sealed operation:

- ▶ Release the hinged pipe clip on the supply air hose (→Fig. 42, pipe 36).
- ▶ Pull off supply air hose together with the connector from the ventilation air collector (→Fig. 42, page 36).

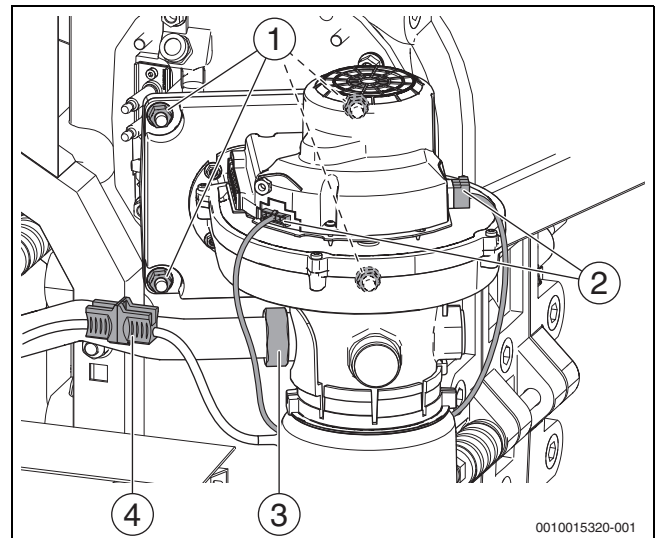


Fig. 59 Electrical connections, removing the fan (boiler rating 75-100 kW)

- [1] Hexagon nuts (4x) on the mixture manifold
- [2] Electrical connections on the fan, boiler rating 75-100 kW
- [3] Union nut on venturi, boiler rating 75-100 kW
- [4] Plug-in connector, boiler rating 75-300 kW



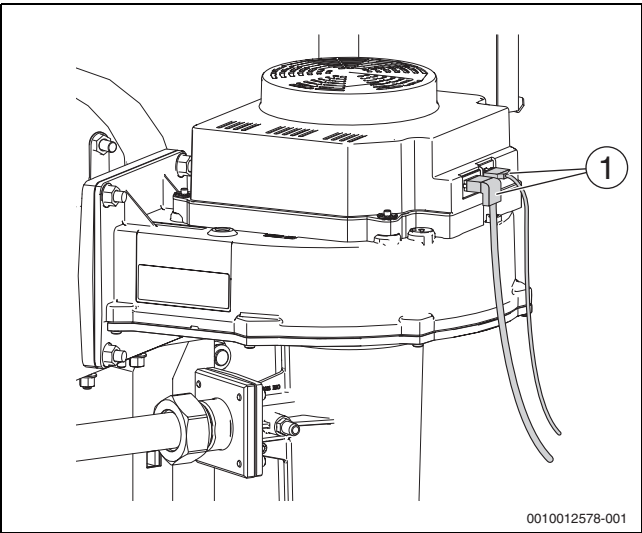


Fig. 60 Electrical connections on the fan (boiler rating 150-300 kW)

[1] Electrical connections on the fan, boiler rating 150-300 kW

With boiler rating 75-100 kW:

- Undo the union nut on the venturi (→Fig. 59, [3]).

With boiler rating 150-300 kW:

- Unscrew the mixture flange by removing the 4 nuts on the venturi (→ Fig. 61, [1]).
- Pull out burner (→ Chapter 11.7, page 35).
- Unscrew the fan by removing the 4 nuts on the mixture manifold (→ Fig. 61, [2]).

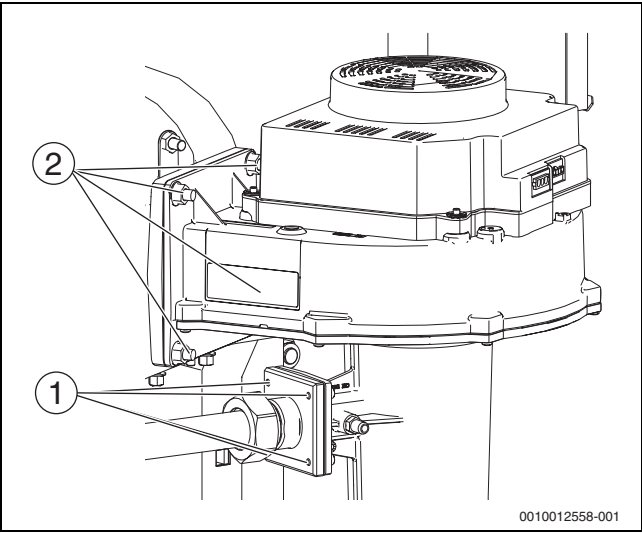


Fig. 61 Removing the fan (boiler rating 150-300 kW)

- [1] Hexagon nuts (4x) on the venturi
- [2] Hexagon nuts (4x) on the mixture manifold


**11.11.3 Replacing components according to the service life**

The following components must be replaced after expiry of the specified service life.

Component	Replace according to specification, depending on what occurs first	
	Replace after service life of x years	Replace after y boiler starts
Mixture manifold gasket (O-ring)	5	–
Heat exchanger cleaning cover gasket	5	–
Gasket of condensation catch pan cleaning cover	5	–
Fan including gaskets	10	–
Air/gas ratio control valve including gaskets	10	500000
	or following detection of fault by valve testing system	
Flue gas pressure limiter	10	–
Differential pressure switch	10	250000


Table 14 Replacement according to service life

- Document replacement of components in the maintenance protocol.

 **DANGER:**

**Danger to life through escaping gases!**

- Always replace the electrode block gasket when replacing electrodes.
- Generally, replace damaged gaskets or ones that appear aged.



We recommend replacing the electrode block as part of annual maintenance.

### 11.12 Refitting detached parts

- ▶ Refit all parts of the floor standing boiler that have been removed for inspection and maintenance purposes in the reverse order of removal.
- ▶ Insert new gaskets when assembling the air/gas ratio control valve. Make sure they are seated correctly.
- ▶ Connect the compensation line and secure with hose clip.

#### NOTICE:

#### Material damage due to incorrect or unconnected compensation line!

If the wrong compensation line is used or if it is connected incorrectly, this can cause overheating of the burner and unhygienic combustion.

- ▶ Connect the compensation line correctly.
- ▶ Check all gaskets for wear and damage.



#### CAUTION:

#### Material damage and leaks due to power transmission!

- ▶ When removing and installing the gas pipe, counterhold to avoid subjecting other components to stress.



#### CAUTION:

#### Danger to health due to incorrect fan or venturi!

If an incorrect fan or venturi is installed, this can lead to higher emissions.

- ▶ Fit a suitable fan for the installed burner.
- ▶ Fit a suitable venturi for the installed burner.
- ▶ Perform tightness test and emission measurement.



Starting torques:

Gas pipe union nut 1": 45 Nm

Gas pipe union nut 1 1/8": 52 Nm

Screws M5x16 on air/gas ratio control valve flange: 4.75 Nm



Observe the specified replacement interval for gaskets (→ Chapter 11.11.3, page 42).

- ▶ Replace gaskets if required.
- ▶ Reconnect electrical push fit connections.
- ▶ During commissioning, make sure that the fan is not covered.

#### 11.12.1 Fitting the gas line to the gas valve

- ▶ Insert a new O-ring into the gas valve flange.
- ▶ Secure the flange of the gas connection again to the gas valve using 4 screws.

#### 11.12.2 Refit the combustion air connector.

- ▶ With room sealed operation, plug the combustion air hose onto the adapter and secure with the hinged pipe clip (→ Chapter 5.7, page 18).

### 11.13 Check for leaks during operation

#### NOTICE:

#### Risk of material damage due to a short circuit!

- ▶ Cover fan electronics, burner control unit and other points at risk before carrying out the leak test.
- ▶ Do not spray leak detector onto cable routing, plugs or electrical connecting leads or allow it to drip onto them.

- ▶ Start the floor standing boiler and check tightness of all gaskets under full load using a leak detection agent.
- ▶ Further checks of the tightness of the entire gas path (→ Chapter 7.16, page 30).

### 11.14 Checking the ionisation current

To ensure trouble-free operation, the ionisation current at partial and full load (when flame is lit) must be at least 10 µA.

- ▶ To test the ionisation current, observe the corresponding technical documentation for the control unit.

### 11.15 Completing inspection and maintenance

#### 11.15.1 Removing measuring devices



Observe corresponding technical documentation for the control unit and user interface.

#### 11.15.2 Installing casing parts

- ▶ Fit all casing sections (→ Fig. 32, page 30).

#### 11.15.3 Checking the gas/air ratio

- ▶ Measure carbon dioxide content (→ Chapter 11.6, page 35).

#### 11.15.4 Confirming inspection and maintenance

- ▶ Sign the inspection and maintenance protocol in this manual (→ Chapter 17.7).

## 12 Emergency operation

The burner control unit automatically goes to emergency operation, if the communication with the control unit is interrupted.

During emergency operation, the burner control unit regulates the boiler temperature at 60 °C to maintain the operation of the heating system until communication has been restored.

### 12.1 Clearing faults in emergency operation



Observe corresponding technical documentation for the control unit and user interface.

In emergency operation, faults can only be cleared via the reset button on the burner control unit. Clearing is only possible, if the fault is a locking fault.

- Press the reset button to clear the fault.

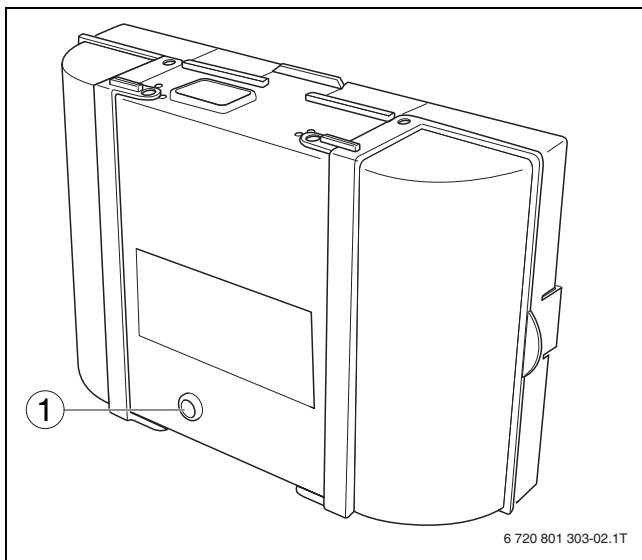


Fig. 62 Clearing a fault on the burner control unit

[1] Reset button

## 13 Troubleshooting

### 13.1 Recognising the operating condition and clearing faults

#### NOTICE:

#### System damage due to frost.

The heating system can freeze up if it has been switched off through a fault shutdown.

- Rectify the fault immediately and restart the heating system.
- Where that is not possible, drain the heating and DHW pipework at the lowest point.

Depending on which control unit is installed or the user interface used, faults may be displayed differently. The fault history is also called up in different ways.

For an overview of the operating and fault codes, along with possible causes and remedial measures, refer to the → technical documentation of the control unit and the user interface (→ Chapter 14, page 45).



Some faults have to be cleared using the reset button on the burner control unit (→ Chapter 14, page 45).



Observe corresponding technical documentation for the control unit and user interface.

### 13.2 Calling up the fault history

The fault history is called up in different ways, depending on the control unit used or the user interface installed.



Observe corresponding technical documentation for the control unit and user interface.

## 14 Operating and fault displays

### 14.1 Control unit status indicators

Operating code	Sub-code	Cause	Description	Test procedure/ Cause	Action
OA	-	Device is in optimized switching mode.	A new request for burner operation has occurred within the set switching optimisation time. Device is in standby period. The standard switching optimisation time is 10 minutes.	Check output setting on basic controller.  Check the control setting at the control unit.	Adjust boiler output to required heat energy demand of the building.  Adjust control setting to system conditions.
OC	-	Beginning of burner start.	-	-	-
OE	-	The device is on standby, heat demand exists but too much heat is being delivered.	The current heat energy demand from the system is lower than that supplied by the burner with the minimum modulation setting.	-	-
OF	-	Insufficient flow rate through the boiler.	Temperature difference between supply and return > 15 K Temperature difference between flow and safety temperature sensor > 15 K	Check the flow temperature with the basic controller, check the return temperature with the control unit or service key, measure the resistance of the boiler water temperature sensor (high limit safety cut-out) and compare it with the curve.	Adjust the setting of the boiler circulation pump.  Check the surface temperature of the cast section, which is fitted with the safety temperature sensor, using a temperature measuring instrument.  Check if cast section is blocked with dirt.
OH	-	The device is on standby; no heat energy demand present.	The floor standing boiler is on standby and there is no heat requirement from the heating circuit.	-	-
OL	-	Air/gas ratio control valve opening.	-	-	-
OP	-	Waiting for fan to start up.	Start-up of the fan has to be detected before the sequence can be continued.	-	-
OU	-	Beginning of burner start program sequence.	-	-	-
OY	-	The current boiler temperature is higher than the set boiler water temperature.	The current boiler temperature is higher than the set boiler water temperature. The floor standing boiler is shut down.	-	-
2P	564	Temperature rises too quickly at the boiler temperature sensor (> 70K/min).	Heat exchanger cut-out due to excessive rate of temperature rise.	Little or no heat draw (e.g. thermostatic valves and mixer closed). Volumetric flow rate too low. Pump does not work. Deposits in water carrying parts of boiler (dirt from heating system, calcification).	Ensure adequate heat draw-off. Install adequately sized pumps. Check whether the pump is being activated. Replace the pump if required. Flush/clean heating water side of boiler block with agents suitable and approved for aluminium.
8Y	572	The control unit is locked externally via the terminal EV.	The control unit sets the heat requirement to the burner control unit to 0.	-	If external blocking is not required, a jumper must be fitted to the EV terminals.

Table 15 Operating codes

## 14.2 Service displays

SC <sup>1)</sup>	FC <sup>2)</sup>	Description	Possible cause	Action
H03	1013	Hours run expired	The set number of hours run until maintenance is due has been exceeded.	► Carry out maintenance.
H06	1016	Frequent flame interruption	During the last burner starts, the flame was frequently lost. Faulty ignition system. Faulty burner setting Faulty burner components Blocked flue gas/supply air route	To check in which operating phase the loss of flame occurred. ► Read out the fault memory of the blocking fault. ► Check gas supply. ► Check for blocking of supply air intake / flue outlet apertures and flue gas/supply air route. Eliminate blocking. ► Check the flame sensor current with user interface. ► Check ignition by performing a function check/ relay test with the user interface. ► Check burner setting against burner setting table; correct if required.  If other blocking faults are present (loss of flame after the flame was successfully established): ► Check burner setting against burner setting table; correct if required. ► Check gas supply equipment. ► Check plug assignment of 1st/2nd solenoid valve.
H07	1017	Water pressure too low	The water pressure is not correct. The pressure sensor is defective.	► Check water pressure. ► Add water if necessary, and vent the heating system. ► Replace pressure sensor.
H08	1018	Service time expired	The maintenance date set has been reached.	► Carry out maintenance.

1) Service Code SC (is indicated on the display of the user interface)

2) Fault Code FC (indicated on the display of the user interface)

Table 16 Service displays

## 14.3 Control unit fault displays

Type <sup>1)</sup>	Error code	Sub-code	Cause	Description	Test procedure/Cause	Action
B	2E	207	Water pressure < 0.8 bar.	-	Check whether the pressure in the system is at least 1.2 bar.	► Adjust operating pressure.
V	2U	533	Incorrect hydraulic connection of floor standing boiler or pump	The floor standing boiler control unit has detected an incorrect flow on the water side.	Make sure the boiler flow and return have not been swapped round. Check pump for correct direction of flow.	► Connect the flow and return correctly. ► Ensure correct pump flow direction.
B	2U	565	Excessive differential between the flow and return temperature. > 60 K	Heat exchanger cut-out due to excessive temperature difference.	System configuration problems.	► Check the system hydraulics.
V	2U	575	Intelligent high limit safety cut-out (ISTB) for the flow	The actual boiler flow temperature reaches the intelligent high-limit safety temperature for the flow of 140 °C, and an ionisation current is detected or the solenoid valves are open.	Check the flow rate on the water side.	► Ensure sufficient flow. ► Replace the boiler water temperature sensor/high-limit safety cut-out. ► Replace ignition/monitoring electrode.

Type <sup>1)</sup>	Error code	Sub-code	Cause	Description	Test procedure/Cause	Action
V	3C	537	No speed signal.	There is no speed feedback message at the burner control unit, although the fan should be in operation.	Check the connecting leads between the burner control unit and the fan for faulty contacts, breaks and damage.  Check the plug-in connectors at the burner control unit and fan.	<ul style="list-style-type: none"> <li>▶ Establish good electrical contact. Replace cables if necessary.</li> <li>▶ Replace the burner control unit.</li> <li>▶ Replace fan if necessary.</li> </ul>
V	3C	538	Fan speed too slow.	The actual speed detected is slower than the set speed.	Dirt in fan. Fan defective.	<ul style="list-style-type: none"> <li>▶ Clean the fan if necessary.</li> <li>▶ Replace fan.</li> </ul>
V	3C	540	Fan speed too fast.	The actual speed detected is faster than the set speed.  Flue resistance too high (>150 Pa).	Check PWM signal/burner control unit connecting cable for faulty contacts, breaks or damage.  Check plug-in connectors for damage.  Check flue resistance.	<ul style="list-style-type: none"> <li>▶ Establish good electrical contact. Replace cables if necessary.</li> <li>▶ Replace the burner control unit.</li> <li>▶ Install butterfly valve/secondary air device, if necessary.</li> </ul>
V	4A	520	Intelligent high limit safety cut-out (ISTB) for the flow	The flow temperature has reached 110 °C.	Since the temperature increase in the boiler is monitored by the boiler water temperature sensor, and consequently the burner is switched off in good time, this fault display can not appear under normal circumstances.  Unfavourable hydraulics in two-boiler systems: the boilers influence each other reciprocally, e.g. via the return or flow.	<ul style="list-style-type: none"> <li>▶ Check hydraulics.</li> </ul>
V	4A	575	ISTB (intelligent high limit safety cut-out) responds.	The boiler flow temperature has reached its maximum permissible level.	High limit safety cut-out has triggered.	<ul style="list-style-type: none"> <li>▶ Check the air/gas ratio control valve. (Does the flame extinguish after a controlled shutdown?)</li> </ul>
V	4A	700		Factory supplied condition	Boiler is locked out	<ul style="list-style-type: none"> <li>▶ Reset the boiler with "Reset" (→ Chapter 13.1, page 44)</li> </ul>
V	4U	521	Sensor differential on the boiler temperature sensor between temperature sensors 1 and 2 is too high.	Temperature differential between temperature sensors 1 and 2 is too high (deviation > 5 K/2s).	Check whether the reset button on the burner control unit lights up.  Check whether the plug-in connectors at the boiler temperature sensor and the burner control unit are dirty or damaged.  Check the pressure drop values at boiler temperature sensor against the table and visually check the plug on the temperature sensor.  Check the connecting lead for continuity.	<ul style="list-style-type: none"> <li>▶ Press the reset button on the burner control unit.</li> <li>▶ If required, clean or replace the plug-in connectors.</li> <li>▶ If sensor values deviate from those specified or the plug is faulty, replace the boiler water temperature sensor.</li> <li>▶ If there are any deviations, replace the connecting lead.</li> </ul>
V	4U	522	Short circuit between temperature sensors 1 and 2 at the boiler water temperature sensor.	A temperature sensor fault was detected in test mode.	Check sensor lead.  Check plug-in connector.  Check sensor readings against table.  Check the voltage values at the sensor against the table.	<ul style="list-style-type: none"> <li>▶ Replace if damaged.</li> <li>▶ Clean if dirty or replace if necessary.</li> <li>▶ Reconnect any loose plugs.</li> <li>▶ Replace the temperature sensor, if there are any deviations from the table.</li> </ul>
V	4U	524	Short circuit at the boiler water temperature sensor.	Excessively high temperature (> 130 °C) is measured at the boiler water temperature sensor.	Check sensor lead.  Check plug-in connector.  Check sensor readings against table.  Check the voltage values at the sensor against the table.	<ul style="list-style-type: none"> <li>▶ Replace if damaged.</li> <li>▶ Clean if dirty or replace if necessary.</li> <li>▶ Reconnect any loose plugs.</li> <li>▶ Replace the temperature sensor, if there are any deviations from the table.</li> </ul>



Type <sup>1)</sup>	Error code	Sub-code	Cause	Description	Test procedure/Cause	Action
V	4Y	523	Interruption in the floor standing boiler temperature sensor.	Temperature at the boiler water temperature sensor too low (< -5 °C)	<p>Check sensor lead.</p> <p>Check plug-in connector.</p> <p>Check sensor readings against table.</p> <p>Check the voltage values at the sensor against the table.</p>	<ul style="list-style-type: none"> <li>► Replace if damaged.</li> <li>► Clean if dirty or replace if necessary.</li> <li>► Reconnect any loose plugs.</li> <li>► Replace the temperature sensor, if there are any deviations from the table.</li> </ul>
B	5L	542	Incomplete communication with the burner control unit.	The control unit generates this fault, if not all the required data is supplied by the burner control unit.	Check the cable connections between the burner control unit and the control unit.	<ul style="list-style-type: none"> <li>► If the connections are OK, replace the burner control unit.</li> </ul>
B	5L	543	No communication with the burner control unit.	<p>The control unit is not receiving any data from the burner control unit.</p> <p>Consequence: quick flashing of the reset button on the burner control unit (= Emergency operation)</p>	<p>Check whether the cable plugs (BUS cable and power cable) between the burner control unit and the control unit are correctly plugged in.</p> <p>Check on the control unit whether 230 V is present at the terminals of the "Mains combustion automatic cut-out".</p> <p>Check whether the connecting leads (BUS and power cable) between the burner control unit and the control unit are damaged.</p> <p>Check whether the reset button on the burner control unit lights up green.</p> <p>Disconnect the BUS cable between the burner control unit and the control unit and check whether the boiler enters emergency operation (runs up to 60 °C boiler temperature).</p> <p>Check by replacing, whether the burner control unit or the control unit is faulty.</p> <p>If the reset button on the burner control unit does not light up, wait a certain period of time, since the device may not start up if the burner control unit is cold.</p> <p>Check whether the safety chain (terminal 17/18 control unit) has triggered.</p>	<ul style="list-style-type: none"> <li>► Reconnect any loose plugs.</li> <li>► Replace the control unit if 230 V is present.</li> <li>► Replace the connecting lead if necessary.</li> <li>► If the reset button does not light up, replace the burner control unit.</li> <li>► If the floor standing boiler does not start up, replace the burner control unit.</li> <li>► Replace the burner control unit or control unit.</li> <li>► Wait for max. 30 minutes and check, whether the reset button on the burner control unit then lights up green again. If this is not the case, replace the burner control unit.</li> <li>► Determine the cause of safety chain triggering and resolve the problem. Then reset the relevant safety element.</li> </ul>

Type <sup>1)</sup>	Error code	Sub-code	Cause	Description	Test procedure/Cause	Action
B	6A	577	No flame detected within the safety time.	Ionisation current < 1.1 µA during safety time.	<p>Air in gas line.</p> <p>Excessively high flue system backpressure due to unfavourable layout (too many deflections; cross-section inadequate or too long; horizontal sections too long).</p> <p>Inadequately sized gas line cross-sections (min. cross-section of the gas supply pipe)</p> <p>The gas pressure regulator is not appropriate for the required gas volume.</p> <p>Gas supply pressure too low.</p> <p>Check whether the plug-in connector for the compensation/ionisation line is correctly installed.</p> <p>Check the connecting lead between the burner control unit and the monitoring electrode for poor contacts, breaks and damage.</p> <p>Check the connecting lead between the ignition transformer and ignition electrode for poor contacts (on electrode and transformer), breaks and damage.</p> <p>Check electrode gaps and ignition/monitoring electrode for damage.</p> <p>Ignition/monitoring electrode dirty.</p> <p>Ignition transformer faulty (no ignition spark or delayed ignition spark, "hard start").</p> <p>Burner control unit defective.</p>	<ul style="list-style-type: none"> <li>▶ Venting the gas line.</li> <li>▶ Install properly dimensioned and configured flue system.</li> <li>▶ Install adequately dimensioned gas lines.</li> <li>▶ Install a gas pressure governor that is appropriate for the required gas volume and, if necessary, notify the gas supplier.</li> <li>▶ If pressure too low, inform gas company.</li> <li>▶ Establish good electrical contact. Replace cables if necessary.</li> <li>▶ Align burner rod or electrode. Replace defective electrode.</li> <li>▶ Clean or replace ignition/monitoring electrode.</li> <li>▶ Replace ignition transformer.</li> <li>▶ Replace burner control unit.</li> </ul>
V	6A	578	No flame detected within the safety time.	<p>No flame signal was detected during the safety time.</p> <p>Flue gas and/or supply air route blocked.</p> <p>Interlock following 3rd attempt.</p>	If the service code is still displayed, check the temperature switch (→Chapter 15).	<ul style="list-style-type: none"> <li>▶ Replace the temperature switch if required.</li> </ul>
V	6C	576	Ionisation current > 0.9 µA during preventilation.	No flame signal was detected within the preventilation phase.	Electrode dirty or faulty.	<ul style="list-style-type: none"> <li>▶ Clean the electrode and, if necessary, replace it. If replacing the electrode does not resolve the issue, the burner control unit must be replaced.</li> </ul>
B	6L	514	Loss of flame during the flame stabilization period.	No flame signal was detected within the flame stabilization period.	-	<ul style="list-style-type: none"> <li>▶ None, the burner control unit tries to start again.</li> </ul>
B	6L	515	Loss of ionisation signal when boiler is running.	Ionisation signal is lost when the burner is in operation.	-	<ul style="list-style-type: none"> <li>▶ None, the burner control unit tries to start again.</li> </ul>
V	6L	561	5 power-up sequences (power supply disconnection during burner start).	The burner control unit was switched off 5 times during the burner start.	Check the 230 V power supply to the control unit.	<ul style="list-style-type: none"> <li>▶ Reset the burner control unit at the reset button.</li> <li>▶ Rectify power supply problem.</li> </ul>

Type <sup>1)</sup>	Error code	Sub-code	Cause	Description	Test procedure/Cause	Action
B	7A	550	Voltage too low.	The mains voltage is too low.	The mains voltage must not fall below 195 V.	► Connect the correct power supply.
B	7A	551	Power failure.	There has been a brief interruption in the mains voltage.	Check the mains cable for loose contacts. Check the wiring and correct contacts of the mains plug at the control unit and burner control unit.	► Remedy any contact problems if required.
B	7P	549	The safety chain has opened.	The continuity of the external components integrated into the safety chain has been interrupted.	Check the continuity of the components.	► If required, replace faulty components.
V or B	8L	534	No gas supply pressure. Flue gas pressure limiter has tripped Differential pressure switch has tripped. Differential pressure switch defective.	The internal safety chain (flue gas pressure limiter, differential pressure switch, valve testing system) is open; → Fig. 74, page 61	Check that the gas isolator is open. Check whether there is gas pressure. Check whether the flue gas pressure limiter has responded. If the flue gas pressure limiter has responded, check connections and tightness of the flue system! Check flue and combustion air pipe for soiling (possible soiling of filter, if installed) or blockage. Check gas filter for contamination. Check whether the differential pressure switch has responded. Check whether the valve testing system has responded.	<ul style="list-style-type: none"> <li>► Measure gas pressure.</li> <li>► After resetting the flue gas pressure limiter, find the cause of the trigger, check the burner rod, check the position of the ignition electrode, check the condition of the ignition electrode, check ignition spark, check ignition cable contact.</li> <li>► Blow out burner rod against the flow direction.</li> <li>► When using the "air filter" accessory set, check the filter for contamination. To do so, pull off the PWM plug on the fan and when the fan is running, check whether the yellow warning is visible at the fill level indicator. If it is, replace the filter.</li> <li>► Test the differential pressure switch (→ Chapter 16, page 54).</li> <li>► Replace the gas filter if necessary.</li> <li>► Replace the air/gas ratio control valve if necessary.</li> </ul>
B	8L	579	No gas supply pressure.	Although the solenoid valve 1 must have opened, there is no gas supply pressure. The burner makes three successive attempts at starting, then waits for one hour before making three more start attempts.	Check that the gas isolator is open. Measure the gas supply pressure. Where required, Replace air/gas ratio control valve.	<ul style="list-style-type: none"> <li>► If necessary, replace the air/gas ratio control valve.</li> <li>► Check whether there is any gas supply pressure.</li> </ul>
V	8P	580	Solenoid valve 1 leaking.	The valve test system has detected an unacceptably high leakage rate on solenoid valve 1.	Check the air/gas ratio control valve for contamination. Gas filter fitted.	► Replace air/gas ratio control valve.
V	8U	581	Solenoid valve 2 leaking.	The valve test system has detected an unacceptably high leakage rate on solenoid valve 2.	Check the air/gas ratio control valve for contamination. Gas filter fitted.	► Replace air/gas ratio control valve.
B	8U	584	No diverter module feedback	Diverter module does not receive feedback within the specified time.	No feedback from external components. Power cable damaged or faulty.  Faulty external component.	<ul style="list-style-type: none"> <li>► Check flue gas damper or other connected component.</li> <li>► Check diverter module.</li> <li>► Check the plug-in connection.</li> <li>► Replace power cable if necessary.</li> <li>► Replace external component if necessary.</li> </ul>

Type <sup>1)</sup>	Error code	Sub-code	Cause	Description	Test procedure/Cause	Action
V	9Y	500 501 502 503	Fault in the internal relay of the burner control unit.	Internal electronic fault in the burner control unit.	Press the "Reset" button and wait to see if the fault is eliminated.	► If the fault persists after "Reset", the burner control unit must be replaced.
V	A01	800	Outside temperature sensor is faulty	Temperature sensor incorrectly connected or installed. Breakage or short circuit in the sensor lead. Temperature sensor is defective.	Check configuration. Check the sensor port and sensor lead. Check that the sensor is correctly mounted. Check resistance values of temperature sensor against table.	► Change configuration. ► Eliminate the contact problem if necessary. ► Replace the temperature sensor if necessary. ► If the connecting lead, contacts and resistance values are all OK, replace the control unit.
V	A01	808	DHW temp. sensor 1 defective. If nec., deactivate DHW function	Temperature sensor incorrectly connected or installed. Breakage or short circuit in the sensor lead. Temperature sensor is defective	Check the sensor port and sensor lead. Check the sensor mounting on the cylinder. Check resistance values of temperature sensor against table.	► Eliminate the contact problem if necessary. ► Replace the temperature sensor if necessary. ► If the connecting lead, contacts and resistance values are all OK, replace the control unit.
V	A01	810	DHW stays cold	Constant drawing or system leak. Temperature sensor incorrectly connected or installed. Breakage or short circuit in the sensor lead. Temperature sensor is defective. Cylinder primary pump incorrectly connected or faulty.	Check the sensor port and sensor lead. Check that the sensor is correctly mounted. Check resistance values of temperature sensor against table. Check that the cylinder primary pump is working, e.g. by carrying out a function check.	► Repair any leaks. ► Eliminate fault in sensor port and sensor lead. ► Replace the temperature sensor if necessary. ► If necessary, replace the cylinder primary pump.
V	A01	845	Hydraulic configuration not supported	Heat source does not support the existing hydraulic configuration (e.g. because more pump outputs are required than are available)	Check configuration.	► Configure DHW at the module or uninstall. ► Configure heating circuit 1 at the module or uninstall. ► Set heating pump to "None".
V	AD1	818	Heat source stays cold	If the floor standing boiler remains below the pump logic temperature for a specified period even though the burner is in operation, this fault display is generated.	Check configuration.	► Check the system configuration and pump parameters in the control unit. ► If required, adjust the system configuration and pump parameters in the control unit. ► Check the non-return valve is working. ► Retrofit if required. ► Check whether check valves are in operating position.
V	CO	568	Water pressure sensor fault (broken cable).	Water pressure sensor break (voltage > 3.5 V).	Check connecting cable running to water pressure sensor. Check water pressure sensor.	► Rectify any breaks. ► Replace water pressure sensor.
V	CO	569	Water pressure sensor fault (short-circuit).	Water pressure sensor short-circuit (voltage < 0.5 V).	Check connecting cable running to water pressure sensor. Check water pressure sensor.	► Rectify any short-circuits. ► Replace water pressure sensor.

Type <sup>1)</sup>	Error code	Sub-code	Cause	Description	Test procedure/Cause	Action
V	CY	566	Return temperature < -5 °C (interruption)	The control unit is receiving implausible values from the return temperature sensor.	Check the connecting lead between the burner control unit and the return temperature sensor. Check the electrical connection of the connecting lead at the burner control unit and return temperature sensor. Check resistance values of temperature sensor against table. Burner control unit defective.	<ul style="list-style-type: none"> <li>▶ Replace the connecting lead if necessary.</li> <li>▶ Eliminate the contact problem if necessary.</li> <li>▶ Replace the temperature sensor if necessary.</li> <li>▶ If the connecting lead, contacts and resistance values are all OK, replace the burner control unit.</li> </ul>
V	CY	567	Return temperature > 130 °C (short circuit)	The control unit is receiving implausible values from the return temperature sensor.	Check the connecting lead between the burner control unit and the return temperature sensor. Check the electrical connection of the connecting lead at the burner control unit and return temperature sensor. Check resistance values of temperature sensor against table. Burner control unit defective.	<ul style="list-style-type: none"> <li>▶ Replace the connecting lead if necessary.</li> <li>▶ Eliminate the contact problem if necessary.</li> <li>▶ Replace the temperature sensor if necessary.</li> <li>▶ If the connecting lead, contacts and resistance values are all OK, replace the burner control unit.</li> </ul>
V	CY	573	Supply temperature < -5 °C (circuit break)	Control unit is receiving implausible values from flow temperature sensor	Check the connecting lead between the burner control unit and the flow temperature sensor. Check the electrical connection of the connecting lead at the burner control unit and the flow temperature sensor. Check resistance values of temperature sensor against table. Burner control unit defective.	<ul style="list-style-type: none"> <li>▶ Replace the connecting lead if necessary.</li> <li>▶ Eliminate the contact problem if necessary.</li> <li>▶ Replace the temperature sensor if necessary.</li> <li>▶ If the connecting lead, contacts and resistance values are all OK, replace the burner control unit.</li> </ul>
V	CY	574	Supply temperature > 130 °C (short-circuit)	Control unit is receiving implausible values from flow temperature sensor	Check the connecting lead between the burner control unit and the flow temperature sensor. Check the electrical connection of the connecting lead at the burner control unit and the flow temperature sensor. Check resistance values of temperature sensor against table. Burner control unit defective.	<ul style="list-style-type: none"> <li>▶ Replace the connecting lead if necessary.</li> <li>▶ Eliminate the contact problem if necessary.</li> <li>▶ Replace the temperature sensor if necessary.</li> <li>▶ If the connecting lead, contacts and resistance values are all OK, replace the burner control unit.</li> </ul>
V	EE	601	Boiler water temperature sensor reading (twin sensors).	Successive measurements of the boiler temperature are too widely divergent.	Check the cable running to the boiler water temperature sensor and the contacts at the burner control unit and pressure sensor. Check plug-in connector. Check sensor readings against table. Burner control unit defective.	<ul style="list-style-type: none"> <li>▶ Replace if damaged.</li> <li>▶ Clean if dirty or replace if necessary.</li> <li>▶ Reconnect any loose plugs.</li> <li>▶ Replace temperature sensor if there are discrepancies.</li> <li>▶ If the connecting lead, contacts and resistance values are all OK, replace the burner control unit.</li> </ul>

Table 17 Fault displays1) V = locking; B = blocking

The lighting of the reset button displays the current operating condition.

*Table 18 Display of the operating condition of the burner via the lighting of the reset button.*

- ... Permanently
- ☐ Off
- ☒ GREEN



## 15 Check temperature switch

If service code 6A 578 is continuously displayed (→ Fig. 63), the temperature switch on the burner must be checked as follows:

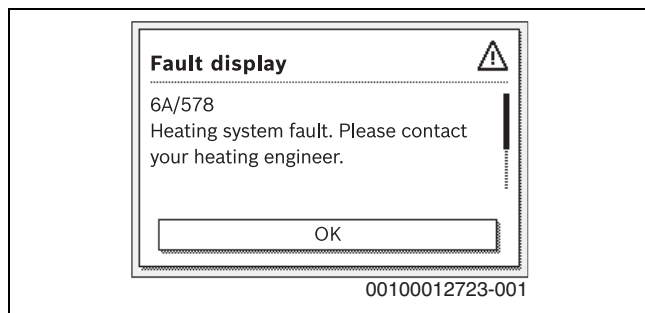


Fig. 63 Display of service code 6A 578 (example of display using MX25)

- ▶ Pull plug off temperature switch.
- ▶ Measure electrical resistance across the contacts of the temperature switch (→ Fig. 64).  
If the value measured is  $< 1 \text{ Ohm}$  (or signal tone, depending on measuring device), the temperature switch is ok.  
If no value, or a resistance of  $> 1 \text{ Ohm}$ , is displayed (→ Fig. 65) contact the plant customer service to arrange a return and replace the burner.

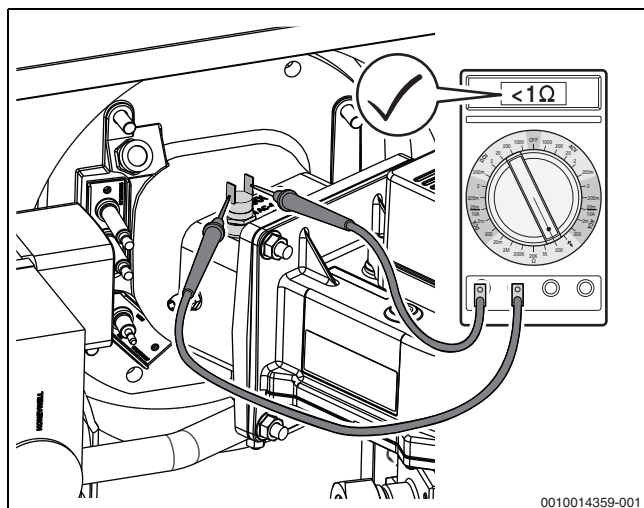


Fig. 64 Measure the electrical resistance across the contacts of the temperature switch (temperature switch ok)

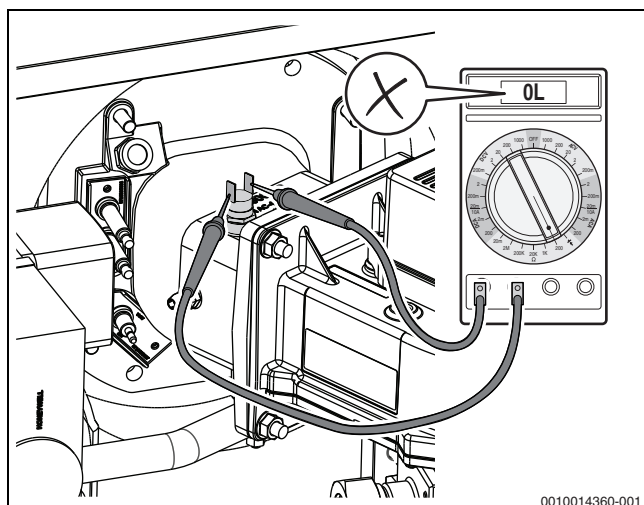


Fig. 65 Measure the electrical resistance across the contacts of the temperature switch (temperature switch not ok)

## 16 Testing the differential pressure switch

If the service code 8L 534 is continuously displayed, the differential pressure switch (→ Fig. 34, page 32) must be tested as follows to make sure it is working correctly:

### 16.1 Test the continuity of the differential pressure switch at negative pressure.

The differential pressure switch is closed during operation. The contacts are closed.

The fan must be switched on in order to simulate an operating condition with negative pressure.

- ▶ Put the control unit on standby (→ Technical documentation of control unit).
- ▶ Pull off plug (PWM signal) [1] at fan. The fan runs.

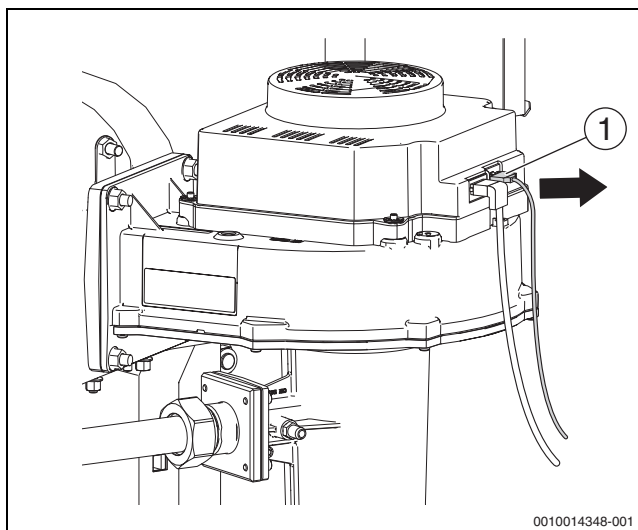


Fig. 66 Pull off plug (PWM signal) at fan (boiler rating 200-300 kW)

[1] PWM signal plug, boiler rating 200-300 kW

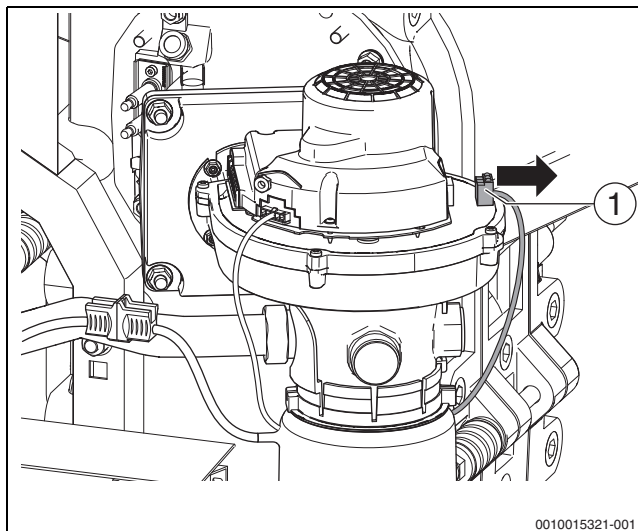


Fig. 67 Pull off plug (PWM signal) at fan (boiler rating 75-100 kW)

[1] PWM signal plug, boiler rating 75-100 kW

- Pull off electrical connections at the differential pressure switch and measure the resistance across the contacts (→Fig. 68). If the value measured is  $< 1 \text{ ohm}$  (or signal tone, depending on measuring device), the differential pressure switch is ok. If no value, or a resistance of  $> 1 \text{ ohm}$ , is displayed (→ Fig. 69), replace the differential pressure switch.

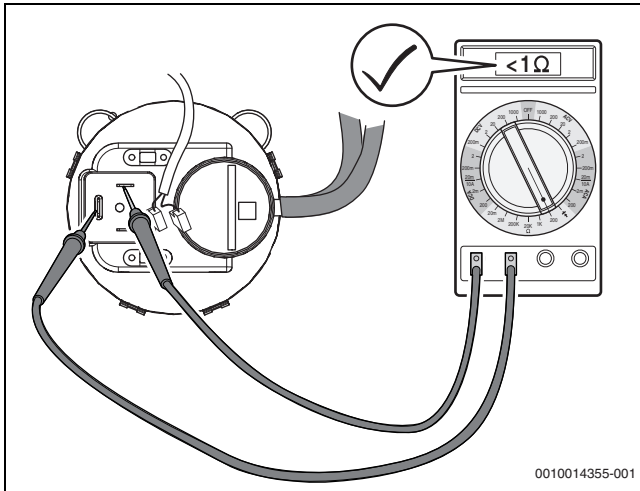


Fig. 68 Test the continuity of the differential pressure switch (differential pressure switch ok).

- Pull off electrical connections at the differential pressure switch and measure the resistance across the contacts (→Fig. 70). If no value, or a resistance of  $> 1 \text{ ohm}$ , is displayed, the differential pressure switch is ok. If the value measured is  $< 1 \text{ ohm}$  (or signal tone, depending on measuring device; →Fig. 71), the differential pressure switch is ok.

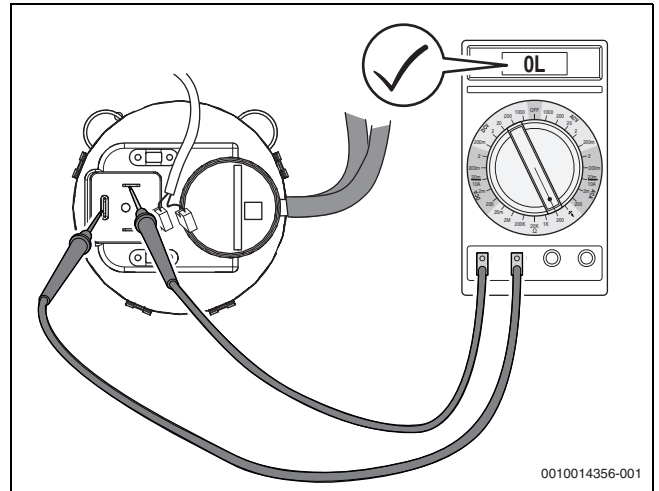


Fig. 70 Test the continuity of the differential pressure switch (differential pressure switch ok).

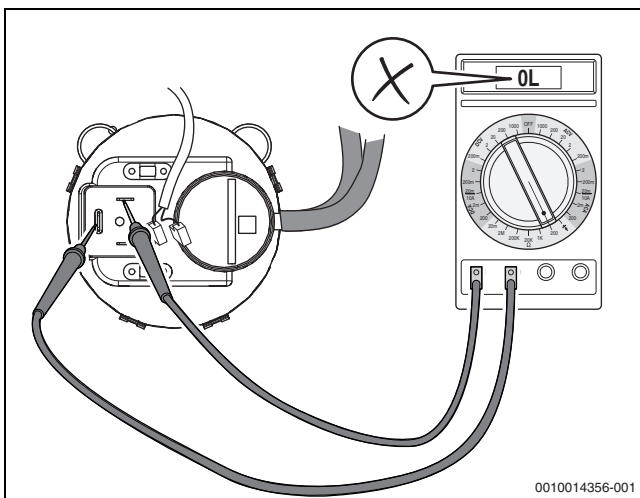


Fig. 69 Test the continuity of the differential pressure switch (differential pressure switch **not** ok).

- Following replacement, plug in (PWM signal) plug [1] at fan.

## 16.2 Test the differential pressure switch for continuity at zero pressure

The differential pressure switch is open when the boiler is switched off. There must be no negative pressure in the system when testing the function of the differential pressure switch.

- Switch off the boiler at the control unit.
- Undo the union nut of the gas supply pipe at the flange on the air/gas ratio control valve (→Fig. 41, page 36).

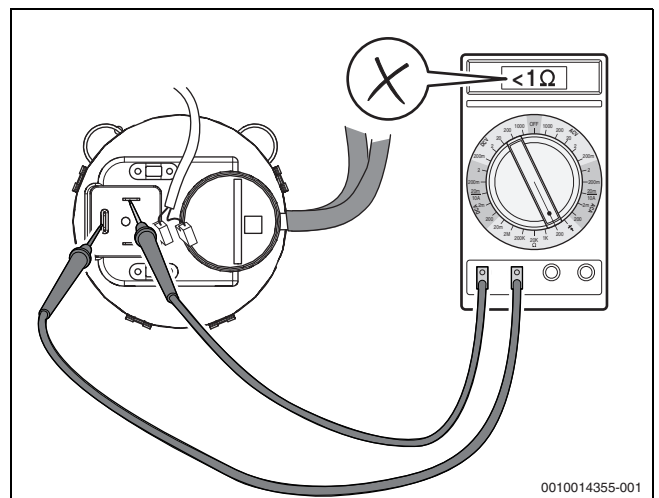


Fig. 71 Measure the electrical resistance across the contacts of the differential pressure switch (differential pressure switch **not** ok)

- Following replacement, fit gas supply pipe to the air/gas ratio control valve (→Fig. 41, page 36).

## 17 Appendix

### 17.1 Technical Data

		Unit	Boiler size (output – no. of sections)					
			75-3	100-3	150-4	200-5	250-6	300-7
max. rated heat input [Q <sub>n</sub> (Hi)] <sup>1)</sup>		KW	70.8	95.1	142.9	189.9	237.9	285.7
min. rated heat input [Q <sub>n</sub> (Hi)] <sup>1)</sup>	Mod 1:6 <sup>2)</sup> (75 kW 1:4.5)	KW	15.8	15.8	23.8	34.5	39.6	47.6
max. rated heat output [P <sub>n</sub> 80/60] <sup>1)</sup> with temperature pairing 80/60 °C		KW	69.4	93.0	139.8	186.1	232.9	280.0
min. rated heat output [P <sub>n</sub> 80/60] <sup>1)</sup> with temperature pairing 80/60 °C		KW	15.5	15.5	23.2	33.7	38.8	46.7
max. rated heat output [P <sub>n</sub> 50/30] <sup>1)</sup> with temperature pairing 50/30 °C		KW	75.0	100	150	200	250	300
min. rated heat output [P <sub>n</sub> 50/30] <sup>1)</sup> with temperature pairing 50/30 °C		KW	17.2	17.2	25.7	37.3	42.9	51.4
Boiler efficiency, maximum output with temperature pair 80/60 °C		%	98.0	97.8	97.8	98.0	97.9	98.0
Boiler efficiency, maximum output with temperature pair 50/30 °C		%	105.9	105.2	105.0	105.3	105.1	105.0
Standard seasonal efficiency [to DIN] with heating curve 75/60 °C		%	106.9	106.5	106.5	106.6	106.4	106.4
Standard seasonal efficiency [to DIN] with heating curve 40/30 °C		%	109.3	109.1	109.5	109.5	109.4	109.4
Standby heat loss at excess temperature 30/50 K		%	0.23/0.48	0.17/0.36	0.13/0.27	0.12/0.25	0.11/0.22	0.10/0.21
Maximum possible installation altitude of boiler		m	1200	1200	1200	1200	1200	1200
<b>Heating circuit</b>								
Boiler water capacity [V] <sup>1)</sup>		l	18.2	18.2	23.4	33.6	38.8	44.0
Pressure drop on the heating water side at Δ 15 K		mbar	28	50	54	47	46	43
Maximum flow temperature in heating/DHW mode (depending on installed control unit)		°C	95 (85)	95 (85)	95 (85)	95 (85)	95 (85)	95 (85)
Safety limit/high limit safety cut-out [T <sub>max</sub> ] <sup>1)</sup>		°C	110	110	110	110	110	110
Maximum operating pressure [PMS] <sup>1)</sup>		bar	6	6	6	6	6	6
Maximum differential between flow and return temperatures	Full Load	K	50	50	50	50	50	50
	Partial load	K	59	59	59	59	59	59
Maximum permitted flow rate through the boiler <sup>3)</sup>		l/h	8060	10750	16120	21500	26860	32230
<b>Flue gas values</b>								
Condensate accumulation rate for natural gas G20, 40/30 °C		l/h	8.2	9.6	13.6	20.2	24.1	29.2
Flue gas mass flow rate 80/60 °C	Full Load	g/s	32.5	43.1	63.6	84.1	110.2	129.4
	Partial load	g/s	7.1	7.1	10.6	14.4	17.3	22.2
Flue gas mass flow rate 50/30 °C	Full Load	g/s	31.8	42.1	62.7	82.3	106.9	125.7
	Partial load	g/s	6.8	6.8	10	12.7	16.3	20.8
Flue gas temperature 80/60 °C	Full Load	°C	64	68	67	65	67	68
	Partial load	°C	57	57	57	56	56	58
Flue gas temperature 50/30 °C	Full Load	°C	41	46	45	45	46	46
	Partial load	°C	30	31	30	30	31	30
CO <sub>2</sub> value, natural gas <sup>4)</sup>	Full Load	%	9.2	9.2	9.2	9.2	9.2	9.2
	Partial load	%	9.2	9.2	9.2	9.2	9.2	9.2
CO <sub>2</sub> value, LPG	Full Load	%	10.2	10.2	10.2	10.2	10.2	10.2
	Partial load	%	10.2	10.2	10.2	10.2	10.2	10.2
Standard emission factor CO (EN15502)		mg/kWh	16	16	18	18	15	17
Standard NO <sub>x</sub> emission factor (EN15502) <sup>5)</sup>		mg/kWh	45	54	38	40	36	40
Standard emission factor (DIN4702-T8, for Germany) NO <sub>x</sub>		mg/kWh	44	49	–	–	–	–
Fan for residual pressure differential (flue gas and combustion air system)		Pa	150	150	150	150	150	150
Maximum pressure at boiler 2 (shut down), if boiler 1 is at full load (positive pressure cascade)		Pa	50	50	50	50	50	50
<b>Flue system</b>								
Temperature classification to be used for flue system in accordance with EN 1443			min. T120	min. T120	min. T120	min. T120	min. T120	min. T120

			Boiler size (output – no. of sections)					
		Unit	75-3	100-3	150-4	200-5	250-6	300-7
Pressure classification to be used for flue in accordance with EN 1443			H1, P1	H1, P1	H1, P1	H1, P1	H1, P1	H1, P1
Pressure classification to be used or connection piece in accordance with EN 1443			H1, P1 with additional mechanical impact stability up to 5000 Pa					
Condensate resistance classification to be used for flue system in accordance with EN 1443			W	W	W	W	W	W
Corrosion resistance classification to be used for flue system in accordance with EN 1443			min. 2	min. 2	min. 2	min. 2	min. 2	min. 2
Soot combustion resistance classification to be used for flue system in accordance with EN 1443			G, O	G, O	G, O	G, O	G, O	G, O
Maximum permitted flue gas return flow under wind conditions		%	10	10	10	10	10	10
Maximum permitted combustion air temperature		°C	35	35	35	35	35	35
Type (according to DV/GW regulations)			Open flue operation: B <sub>23p</sub> Balanced flue operation: C <sub>13</sub> , C <sub>33</sub> , C <sub>53</sub> , C <sub>63</sub> , C <sub>83</sub> , C <sub>93</sub>					
Type (Belgium and Netherlands)			Open flue operation: B <sub>23p</sub> Balanced flue operation: C <sub>13</sub> , C <sub>33</sub> , C <sub>53</sub> , C <sub>63</sub> (not valid for Belgium), C <sub>83</sub> , C <sub>93</sub>					
Electrical Wiring Specifications								
IP rating		–	IPX0D	IPX0D	IPX0D	IPX0D	IPX0D	IPX0D
Supply voltage/frequency		V/Hz	230/50	230/50	230/50	230/50	230/50	230/50
Electric power consumption [P(eli)]	Full Load	W	83	156	250	234	298	336
	Partial load	W	28	28	40	42	41	48
Protection against electrocution			Protection class 1					
Maximum permissible unit fuse protection (with CC 8313)		A	10	10	10	10	10	10
Maximum permissible unit fuse protection (with MX25)		A	6.3	6.3	6.3	6.3	6.3	6.3
Appliance dimensions and weight								
Handling dimensions width × depth × height		mm	640x481x1470		640x782x1470	640x994x1470		
Total weight		kg	132	132	184	231	258	283
Weight (excl. casing)		kg	105	105	139	175	214	239
Smallest shipping weight		kg	97.5	97.5	118.3	148	175	200

- 1) The details [xxx] correspond to the symbols and formula signs used on the data plate.
- 2) The load indicated on the display corresponds to the percentage fan speed and not the percentage modulation.
- 3) Is to be ensured by means of system sizing, and it corresponds to a minimum differential between flow and return temperatures of 8 K.
- 4) Nominal CO<sub>2</sub> value with nominal gas load, differences can arise depending on the quality of the gas available locally (→ Chapter 7.11, page 28).
- 5) Satisfies NO<sub>x</sub> class 6 in accordance with EN15502-1.

Table 19 Technical Data

Boiler rating [kW]	Gas throughput				
	Natural gas E, H, Es (G20) Wobbe index 12.69 kWh/m <sup>3</sup> [m <sup>3</sup> /h]	Natural gas LL, L, Ei (G25) Wobbe index 10.38 kWh/m <sup>3</sup> [m <sup>3</sup> /h]	Natural gas S (G25.1) (HU) Wobbe index 9.79 kWh/m <sup>3</sup> [m <sup>3</sup> /h]	Natural gas K (G25.3) (NL) Wobbe index 10.69 kWh/m <sup>3</sup>	LPG P(G31) Wobbe index 19.63 kWh/m <sup>3</sup>
75	7.5	8.7	8.7	8.5	2.9
100	10.1	11.7	11.7	11.4	3.9
150	15.1	17.6	17.6	17.2	5.5
200	20.1	23.4	23.3	22.9	7.4
250	25.2	29.3	29.2	28.6	9.2
300	30.2	35.2	35.1	34.4	11.0

Table 20 Gas throughput (relative to 15 °C gas temperature and 1013 mbar air pressure)

Country	Boiler rating	Gas category	Gas family, gas group and reference gas set on delivery	Set to rated gas pressure on delivery in mbar <sup>1)</sup>
DE	75-300	I <sub>2ELL</sub>	2E, G20	20
DE	75-100	II <sub>2ELL3P</sub>	2E, G20	20
AT, BG, BY, CH, CZ, DK, EE, ES, GB, GR, HR, IE, IT, LT, LV, PT, RO, RS, RU, SI, SK, TR, UA	75-300	I <sub>2H</sub>	2H, G20	20
AT, BG, BY, CH, CZ, DK, EE, ES, GB, GR, HR, IE, IT, LT, LV, PT, RO, RS, RU, SI, SK, TR, UA	75-100	II <sub>2H3P</sub>	2H, G20	20
FR	75-300	I <sub>2Esi</sub> <sup>2)</sup>	2Es, G20	20
FR	75-100	II <sub>2Esi3P</sub>	2Es, G20	20
BE	75-300	I <sub>2E(R)</sub>	2Es, G20	20
BE	75-100	II <sub>2E3P(R)</sub>	2Es, G20	20
LU	75-300	I <sub>2E</sub>	2E, G20	20
LU	75-100	II <sub>2E3P</sub>	2E, G20	20
PL	75-300	I <sub>2ELw</sub>	2E, G20	20
PL	75-100	II <sub>2ELw3P</sub>	2E, G20	20
HU	75-300	I <sub>2HS</sub>	2H, G20	25
HU	75-100	II <sub>2HS3P</sub>	2H, G20	25

1) The gas supplier must ensure the minimum and maximum pressures (in accordance with national regulations for public gas supply).

2) Es and Ei are sub-groups of gas group E

Table 21 Country-specific gas categories



If the boiler is to be replaced in existing systems:

- Consult gas suppliers to ensure that the nominal gas pressure according to table , page 28 is adhered to.

## 17.2 Sensor curves



### WARNING:

#### Danger to life from electric current!

Touching live parts can result in an electric shock.

- Prior to every measurement, disconnect the power supply completely from the heating system.

- Always measure the temperatures being compared (room, flow, outside and flue gas temperatures) near the relevant sensor.

The curves depict mean values and are subject to tolerances.

- Measure the resistance at the cable ends.

### 17.2.1 Temperature sensor at digital burner control unit

Temperature [°C]	Temperature sensor resistance values at digital burner control unit		
	Minimum value [Ω]	Nominal value [Ω]	Maximum value [Ω]
5	23466.20	24495.00	25523.80
10	18770.80	19553.00	20335.20
15	15120.00	15701.00	16282.00
20	12245.80	12690.00	13134.20
25	9951.30	10291.00	10630.70
30	8145.40	8406.00	8666.60
35	6711.50	6912.00	7112.50
40	5560.60	5715.00	5869.40
45	4625.40	4744.00	4862.60
50	3866.90	3958.00	4049.10
55	3239.10	3312.00	3384.90
60	2730.20	2786.00	2841.80
65	2314.50	2357.00	2399.50
70	1969.90	2004.00	2038.10
75	1683.30	1709.00	1734.70
80	1444.90	1464.00	1483.10
85	1241.90	1257.00	1272.10
90	1073.10	1084.00	1094.90
95	927.60	938.90	950.20
100	805.20	815.90	826.60

Table 22 Resistance values



2 similar temperature sensors (twin sensors), which are installed in a single sensor casing, are used as boiler water temperature sensors. All temperature sensors in the boiler have the same sensor curve.

## 17.3 Hydraulic resistance

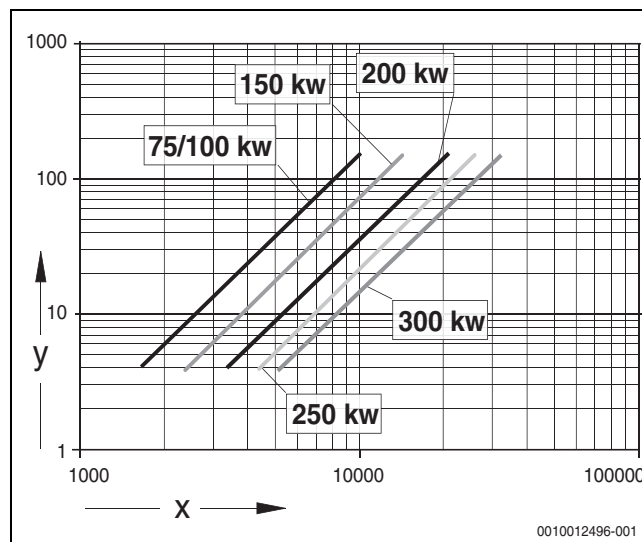


Fig. 72 Flow resistance on the heating water side

- x Volumetric flow rate (l/h)
- y Pressure drop on the heating water side (mbar)

## 17.4 Connection diagrams

### 17.4.1 Control unit connection diagram

- To connect the control unit, observe the corresponding technical documentation and the connection diagram for the specific control unit.



### DANGER:

#### Danger to life from electric current!

- Never use the earth conductor (green/yellow) as a control cable.

### NOTICE:

#### System damage with incorrect installation!

- Provide a permanent power supply (not a safety plug).
- Ensure that the power supply is connected to the correct phases.
- Select the installation, fuse/circuit breaker rating, ON/OFF switch, emergency stop switch and safety measures in accordance with local regulations.

### 17.4.2 Burner control unit

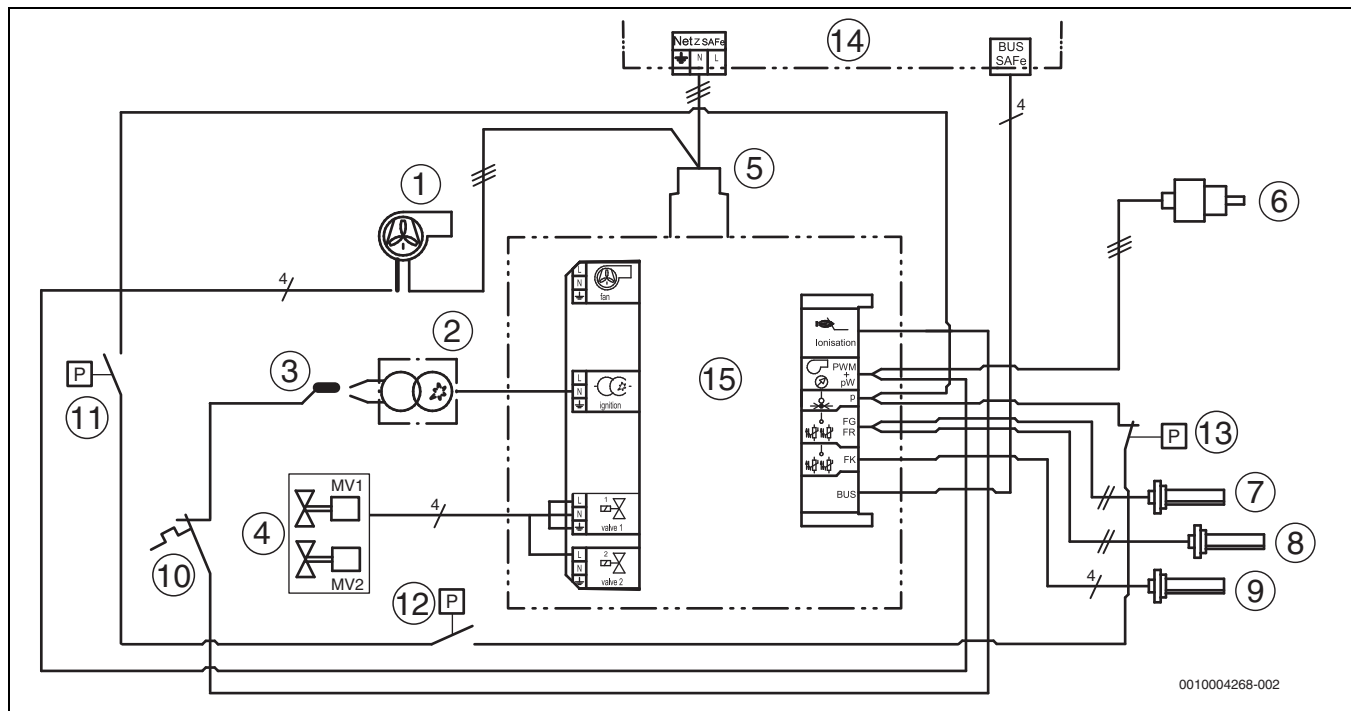


Fig. 73 Wiring diagram of burner control unit

- [1] Fan (connection of PWM signal and mains)
- [2] Ignition transformer
- [3] Ionisation
- [4] Gas solenoid valve (MV1/MV2)
- [5] Mains input
- [6] Water pressure sensor
- [7] Flow temperature sensor
- [8] Return temperature sensor
- [9] Boiler water temperature sensor
- [10] Temperature switch
- [11] Valve check system (closed during operation)
- [12] Differential pressure switch (closed during operation)
- [13] Flue gas pressure limiter (always closed)
- [14] Control unit
- [15] Burner control unit



With the boiler ratings 75-150 kW an interference suppression coil is connected in series between the power supply of the burner control unit and power supply of the fan.



### 17.4.3 Diagrammatic representation of supply air/flue gas monitor and gas tightness

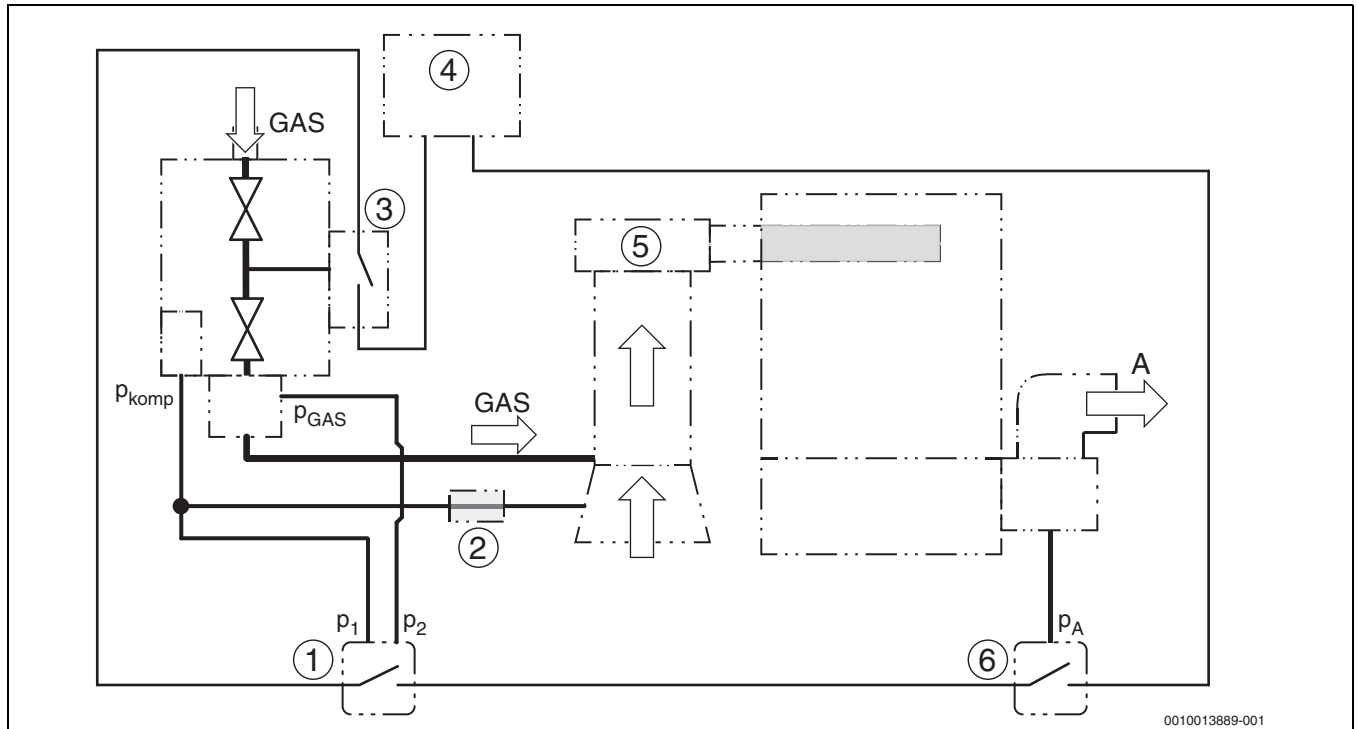


Fig. 74 Diagrammatic representation of supply air/flue gas monitor and gas tightness (according to EN 15502)

- [1] Differential pressure switch (closed during operation)
- [2] Plug-in connector for compensation/ionisation line
- [3] Valve check system
- [4] Burner control unit
- [5] Gas burner
- [6] Flue gas pressure limiter (must be manually unlocked)
- [p<sub>1</sub>] Compensation line connection (blue)
- [p<sub>2</sub>] Test cable connection for gas outlet pressure (white)
- [p<sub>komp</sub>] Pressure compensation line
- [p<sub>GAS</sub>] Gas outlet pressure
- [p<sub>A</sub>] Pressure in flue system
- [A] Flue gas

### 17.5 Conversion of vol.% CO<sub>2</sub> into vol.% O<sub>2</sub> for burner setting

Depending on the nominal CO<sub>2max</sub> in vol. - % of the distributed gas, the named CO<sub>2</sub> default value can be converted into an O<sub>2</sub> default value according to the following formula:

$$O_2 = 20,95 \times \frac{CO_{2max} - CO_2}{CO_{2max}}$$

F. 1 Formula for calculating the O<sub>2</sub> value

[O<sub>2</sub>] Default value of O<sub>2</sub> in vol. - %

[CO<sub>2</sub>] Default value of CO<sub>2</sub> in vol. - %

[CO<sub>2max</sub>] Nominal value of CO<sub>2max</sub> for the distributed gas in vol. - %  
(with LPG: CO<sub>2max</sub> 13,75%)

#### Calculation example:

Default value for CO<sub>2</sub> = 9.2 vol. - %

Nominal value for CO<sub>2max</sub> = 12.0 vol. - %

$$O_2 = 20,95 \times \frac{12 - 9,2}{12} \approx 4,9$$

F. 2 Example of O<sub>2</sub> value calculation

[O<sub>2</sub>] O<sub>2</sub> in vol. - %

[9,2] Default value of CO<sub>2</sub> in vol. - %

[12] Nominal value of CO<sub>2max</sub> for the distributed gas in vol. - %

► Request nominal CO<sub>2max</sub> in vol. - % from your gas supplier

If the specified values for CO<sub>2max</sub> and CO<sub>2</sub> are listed in the following table, the corresponding O<sub>2</sub> value can be read off directly from the table.

Nominal CO <sub>2max</sub> for the distributed gas [vol. - %]	11.4	11.5	11.6	11.7	11.8	11.9	12	12.1	12.2	12.3
CO <sub>2</sub> default value for the burner setting [vol. - %]	O <sub>2</sub> value [vol. - %]	O <sub>2</sub> value [vol. - %]	O <sub>2</sub> value [vol. - %]	O <sub>2</sub> value [vol. - %]	O <sub>2</sub> value [vol. - %]	O <sub>2</sub> value [vol. - %]	O <sub>2</sub> value [vol. - %]	O <sub>2</sub> value [vol. - %]	O <sub>2</sub> value [vol. - %]	O <sub>2</sub> value [vol. - %]
8.2	5.9	6.0	6.1	6.3	6.4	6.5	6.6	6.8	6.9	7.0
8.3	5.7	5.8	6.0	6.1	6.2	6.3	6.5	6.6	6.7	6.8
8.4	5.5	5.6	5.8	5.9	6.0	6.2	6.3	6.4	6.5	6.6
8.5	5.3	5.5	5.6	5.7	5.9	6.0	6.1	6.2	6.4	6.5
8.6	5.1	5.3	5.4	5.6	5.7	5.8	5.9	6.1	6.2	6.3
8.7	5.0	5.1	5.2	5.4	5.5	5.6	5.8	5.9	6.0	6.1
8.8	4.8	4.9	5.1	5.2	5.3	5.5	5.6	5.7	5.8	6.0
8.9	4.6	4.7	4.9	5.0	5.1	5.3	5.4	5.5	5.7	5.8
9	4.4	4.6	4.7	4.8	5.0	5.1	5.2	5.4	5.5	5.6
9.1	4.2	4.4	4.5	4.7	4.8	4.9	5.1	5.2	5.3	5.5
9.2	4.0	4.2	4.3	4.5	4.6	4.8	4.9	5.0	5.2	5.3
9.3	3.9	4.0	4.2	4.3	4.4	4.6	4.7	4.8	5.0	5.1
9.4	3.7	3.8	4.0	4.1	4.3	4.4	4.5	4.7	4.8	4.9
9.5	3.5	3.6	3.8	3.9	4.1	4.2	4.4	4.5	4.6	4.8
9.6	3.3	3.5	3.6	3.8	3.9	4.0	4.2	4.3	4.5	4.6
9.7	3.1	3.3	3.4	3.6	3.7	3.9	4.0	4.2	4.3	4.4
9.8	2.9	3.1	3.6	3.4	3.6	3.7	3.8	4.0	4.1	4.3
9.9	2.8	2.9	3.1	3.2	3.4	3.5	3.7	3.8	3.9	4.1
10	2.6	2.7	2.9	3.0	3.2	3.3	3.5	3.6	3.8	3.9
10.1	2.4	2.6	2.7	2.9	3.0	3.2	3.3	3.5	3.6	3.7
10.2	2.2	2.4	2.5	2.7	2.8	3.0	3.1	3.3	3.4	3.6

Table 23 O<sub>2</sub> default values depending on the nominal CO<sub>2max</sub> value (with the read-off example)

#### Read-off calculation:

Default value: CO<sub>2</sub> = 9.2 vol. - %

Nominal value: CO<sub>2max</sub> = 12.0 vol. - %

Result: O<sub>2</sub> = 4.9 vol. - %

## 17.6 System Commissioning Report

► Initial and date the commissioning work carried out.

	Commissioning work	Page	Measurements		Remarks
1.	Fill the heating system and check for leaks.	21	<input type="checkbox"/>		
2.	Has the information about water quality in the operator's log been observed and has the necessary information been documented in the operator's log?		Yes: <input type="checkbox"/>		
	• Concentration of additives		Additives: _____	Concentration: _____ %	
3.	Is a gas filter installed?	22	Yes: <input type="checkbox"/> No: <input type="checkbox"/>		Gas filters must always be installed to prevent ingress of dirt into the gas line of the floor standing boiler.
4.	Recording gas parameters:				
	• Wobbe index	25	_____ kWh/m <sup>3</sup>		
	• Net calorific value	25	_____ kWh/m <sup>3</sup>		
5.	Check tightness of gas line.	24	<input type="checkbox"/>		
	• Venting the gas line.	24	<input type="checkbox"/>		
6.	Establish operating pressure on water side.	24	<input type="checkbox"/>		
7.	Check air intake and outlet openings and flue gas connection.	27	<input type="checkbox"/>		
	• Check flue gas damper	27	<input type="checkbox"/>		
8.	Check device equipment.	25	<input type="checkbox"/>		
9.	Convert to a different gas type, if necessary.	28			
10.	Starting up the control unit and the burner.	27	<input type="checkbox"/>		
11.	Recording measurements:	29	Full Load	Partial load	
	• Discharge pressure		_____ Pa	_____ Pa	
	• Gross flue gas temperature $t_A$		_____ °C	_____ °C	
	• Air temperature $t_L$		_____ °C	_____ °C	
	• Net flue gas temperature $t_A - t_L$		_____ °C	_____ °C	
	• Carbon dioxide content (CO <sub>2</sub> ) or oxygen content (O <sub>2</sub> )		_____ %	_____ %	
	• Flue losses $q_A$		_____ %	_____ %	
	• CO content, air free		_____ ppm	_____ ppm	
12.	Measure the gas supply pressure (static pressure). • With <b>LPG</b> : measure upstream of the additional pressure regulator (only 75/100 kW)	27	_____ mbar		
13.	Measure the gas supply pressure. • With <b>LPG</b> : measure upstream of the additional pressure regulator (only 75/100 kW)	27	Full load: _____ mbar	Partial load: _____ mbar	
	• With <b>LPG</b> : measure downstream of the additional pressure regulator (only 75/100 kW)	27	Full load: _____ mbar	Partial load: _____ mbar	

	Commissioning work	Page	Measurements	Remarks
14.	Check tightness during operation.	30	<input type="checkbox"/>	
15.	Function checks:	29		
	• Checking the ionisation current		_____ $\mu\text{A}$	
16.	Install casing panels.	30	<input type="checkbox"/>	
17.	Inform operator, hand over technical documentation.	30	<input type="checkbox"/>	
18.	Correct commissioning by the installing contractor		Signature: _____	
19.	Signature of operator		Signature: _____	

Table 24 System Commissioning Report

### 17.7 Inspection and maintenance protocols

The inspection and maintenance records also serve as a master copy.

► Sign and date the completed inspection work.

Inspection work	Page	Full Load	Partial load	Full Load	Partial load
1. Check general condition of heating system (visual inspection and function check)		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
2. Check the gas and water-bearing system components for:					
• internal leaks		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
• signs of corrosion		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
• signs of ageing		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
3. Check the concentration of antifreeze/additives in the heating water (observe the manufacturer's instructions and the details in the operator's log).		Concentration: _____ %		Concentration: _____ %	
4. Check the heating system water pressure.	24	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
• Pre-charge pressure of the expansion vessel (→ expansion vessel installation instructions)					
• Operating pressure	24				
5. Check the burner and heat exchanger for contamination; shut down the heating system for this step. Clean burner and/or heat exchanger as needed.		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
6. Check the siphon and condensation catch pan; shut down the heating system for this step.					
7. Check electrodes, shut down the heating system for this.	40				
8. Check the gas supply pressure (static pressure).	27				
• With <b>LPG</b> : measure upstream of the additional pressure regulator (only 75/100 kW)					
9. Measure the gas supply pressure.	27				
• With <b>LPG</b> : measure upstream of the additional pressure regulator (only 75/100 kW)					
• With <b>LPG</b> : measure downstream of the additional pressure regulator (only 75/100 kW)	27				
10. Check the supply and extract air apertures are unobstructed and clean.	27	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
11. Check tightness of flue gas connection and flue gas routing.	27	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
• Check flue gas damper	27				

Inspection work		Page	Full Load	Partial load	Full Load	Partial load
12.	Recording measurements:	29				
	• Discharge pressure		_____ Pa	_____ Pa	_____ Pa	_____ Pa
	• Gross flue gas temperature $t_A$		_____ °C	_____ °C	_____ °C	_____ °C
	• Air temperature $t_L$		_____ °C	_____ °C	_____ °C	_____ °C
	• Net flue gas temperature $t_A - t_L$		_____ °C	_____ °C	_____ °C	_____ °C
	• Carbon dioxide content (CO <sub>2</sub> ) or oxygen content (O <sub>2</sub> )		_____ %	_____ %	_____ %	_____ %
	• CO content, air free		_____ ppm	_____ ppm	_____ ppm	_____ ppm
13.	Carry out function checks:	29				
	• Check ionisation current.		_____ µA	_____ µA	_____ µA	_____ µA
	• Test the differential pressure switch.	54	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
14.	Check for leaks during operation.	30	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
15.	If necessary, check function of installed water treatment cartridge and check for wear.		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
16.	Check that the control unit is set correctly in line with demand (see documents for the control unit).	–	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
17.	Final check of servicing work	–	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	Confirm correct inspection Company stamp/date/signature					

Table 25 Inspection and maintenance record



If any condition requiring maintenance is identified in the course of the inspection, this work must be carried out as required.



The requirements for replacement of gaskets are detailed in Chapter 11.11.3, page 42.

	Full Load	Partial load	Full Load	Partial load	Full Load	Partial load	Full Load	Partial load
1.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
2.								
	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
3.	Concentration: _____%		Concentration: _____%		Concentration: _____%		Concentration: _____%	
4.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
5.								
6.								
7.								
8.								
9.								
10.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
11.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
12.								
	_____ Pa	_____ Pa	_____ Pa	_____ Pa	_____ Pa	_____ Pa	_____ Pa	_____ Pa
	_____ °C	_____ °C	_____ °C	_____ °C	_____ °C	_____ °C	_____ °C	_____ °C
	_____ °C	_____ °C	_____ °C	_____ °C	_____ °C	_____ °C	_____ °C	_____ °C
	_____ °C	_____ °C	_____ °C	_____ °C	_____ °C	_____ °C	_____ °C	_____ °C
	_____ %	_____ %	_____ %	_____ %	_____ %	_____ %	_____ %	_____ %
	_____ ppm	_____ ppm	_____ ppm	_____ ppm	_____ ppm	_____ ppm	_____ ppm	_____ ppm
13.								
	_____ μA	_____ μA	_____ μA	_____ μA	_____ μA	_____ μA	_____ μA	_____ μA
	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
14.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
15.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
16.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
17.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Table 26 Inspection and maintenance record



	Responsive maintenance	Page	Date: _____	Date: _____
1.	Shut down the heating system.	30	<input type="checkbox"/>	<input type="checkbox"/>
2.	Clean the burner and heat exchanger.	38	<input type="checkbox"/>	<input type="checkbox"/>
3.	Replace gaskets on the cleaning cover of the heat exchanger.	38	<input type="checkbox"/>	<input type="checkbox"/>
4.	Replace the electrode block.	40	<input type="checkbox"/>	<input type="checkbox"/>
5.	Clean the siphon.	38	<input type="checkbox"/>	<input type="checkbox"/>
6.	Clean the condensation catch pan.	38	<input type="checkbox"/>	<input type="checkbox"/>
7.	Replace the mixture manifold gasket (O-ring).	38	<input type="checkbox"/>	<input type="checkbox"/>
8.	Carry out a function check.		<input type="checkbox"/>	<input type="checkbox"/>
	Confirmation that maintenance has been correctly carried out.			
	Company stamp/signature			

Table 27

	Date: _____	Date: _____	Date: _____	Date: _____	Date: _____
1.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
2.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
3.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
4.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
5.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
6.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
7.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
8.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	Company stamp/signature	Company stamp/signature	Company stamp/signature	Company stamp/signature	Company stamp/signature

Table 28

Bosch Thermotechnik GmbH  
Sophienstrasse 30-32  
D-35576 Wetzlar

[www.bosch-industrial.com](http://www.bosch-industrial.com)